
# PERI UP Flex
## Heavy-Duty Prop HD

Instructions for Assembly and Use – standard configuration – Version 3.0

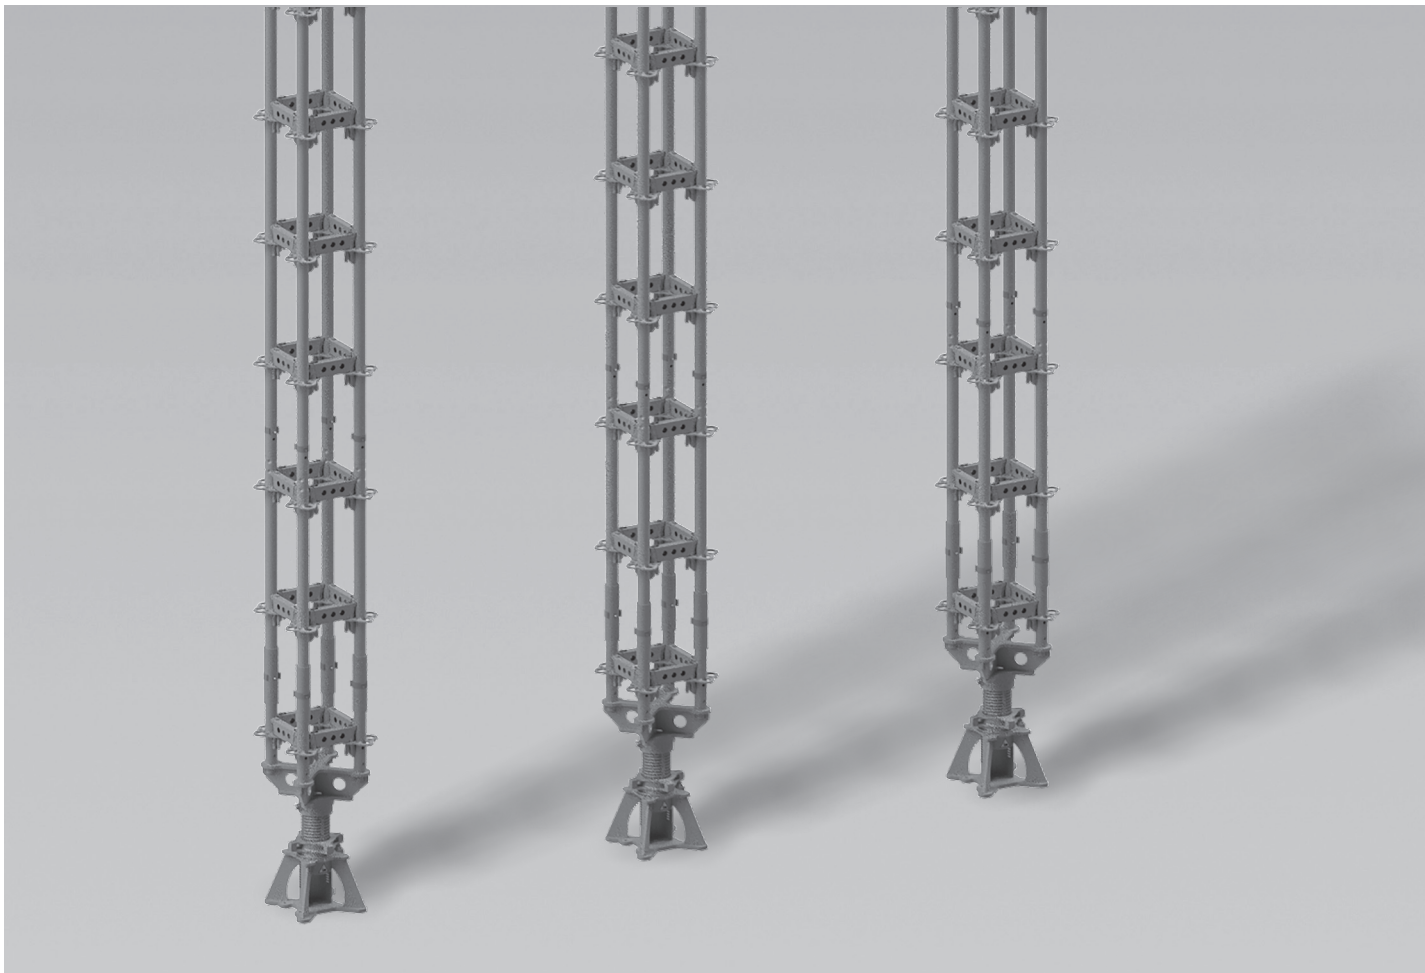

# Content


**Overview**
- Main components 4
- Key 5

**Introduction**
- Target groups 6
- Product description 7
- Cleaning and maintenance instructions 8
- Disposal 8
- Additional technical documentation 9
- Instructions for Use 9

**Safety instructions**
- Cross-system 10
- System-specific 12
- Storage and transportation 12


**Application**
- A1 Vertical assembly of individual props 14
  - Lowering Jack HD 14
  - Connection Plate UJC 15
  - Pre-assembly of props 16
  - Head Spindle TR 110-80/55 18
- A2 Horizontal assembly of individual props 20
  - Pre-assembly of props 20
  - Prop erection 22
- A3 Bracing individual props 24
  - Bracing 24
  - Bracing with Push-Pull Props 24
  - Bracing additional props using horizontal ledgers 25
- A4 Dismantling individual props 26
  - Heavy-Duty Prop HD 26
- A5 Hydraulic Lowering Unit HD 28
  - Load-controlled pre-loading 28
  - Load-controlled lowering 30
  - Displacement-controlled lowering 32
- A6 Vertical assembly of the main beam frame 34
  - Overview 34
  - Ladder access 35
  - Main Beam HDT as base beam 38
  - Lowering Jacks 39
  - First Prop 40
  - Additional props 41
  - Work platform 43
  - Forming recesses in the decks 44
  - Top beam 46
  - Diagonal bracing 47
- A7 Dismantling the main beam frame vertically 48
  - General information 48
  - Positioning free of any load 49
  - Lowering 50
  - Removing the cross girders 51
  - Removing the top beam 53
  - Removing the main beam frame 53

**Variants and Tables**
- B1 Loads and bracing 56
  - Load transfer 56
  - Horizontal Loads 56
- B2 Variants 60
  - Free-standing Main Beam Frames 60
  - Individual props without main beam 61
  - Main beam frames without lower Main Beam HDT 61
- B3 Load-bearing capacities 62
- B4 Materials list 64

**Logistics**
- C1 Storage and transportation 66

**Program overview**
- PERI UP Flex Heavy-Duty Prop HD 68

## Main components

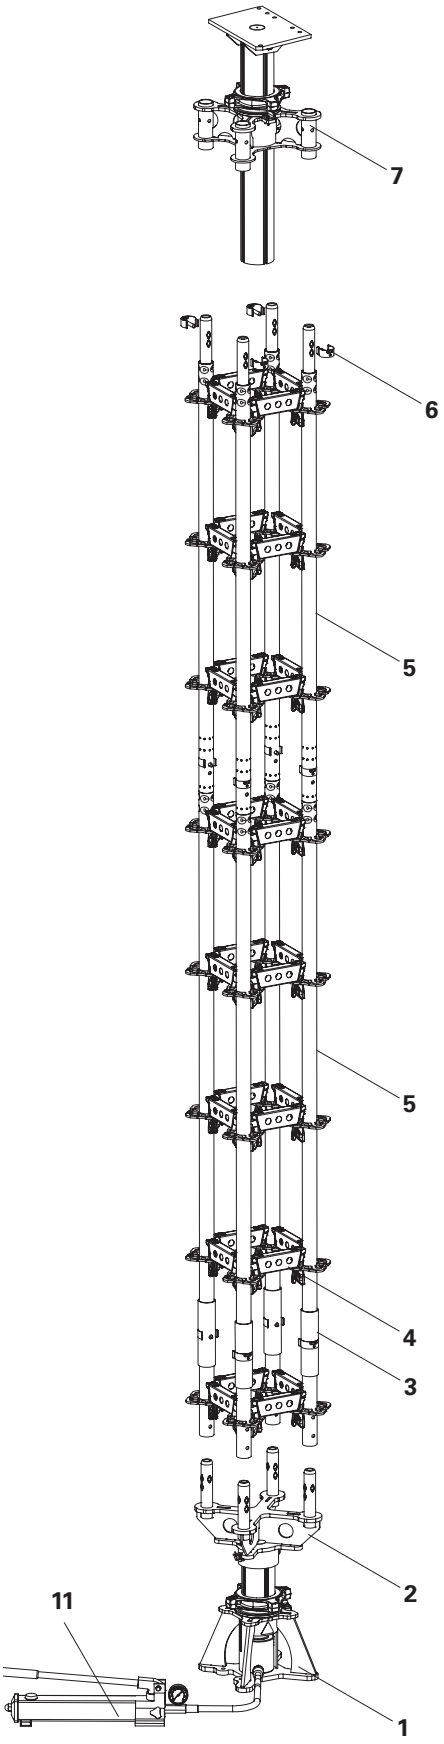


**1** Lowering Jack HD
**2** Connection Plate UJC
**3** Base Standard UVB 25
**4** Horizontal Ledger UH–2
**5** Standard UVR-2
**6** Locking Pin Ø 48/57 or Screw M10 x 70, Mu
**7** Head Spindle TR 110-80/55
**11** Hydraulic Unit HD

## Key

**Pictogram | Definition**


Danger/Warning/Caution


Note


To be complied with


Load-bearing point


Visual inspection


Tip


Incorrect use


Safety helmet


Safety shoes


Safety gloves


Safety goggles


Personal protective equipment to prevent falling from a height (PPE)


Observe additional documentation

**Arrows**

Arrow representing an action

Arrow representing a reaction of an action*

Arrow representing forces

* If not identical to the action arrow.

**Safety instruction categories**
The safety instructions alert site personnel to the risks involved and provide information on how to avoid these risks. Safety instructions can be found at the beginning of the section or before instructions for action and are highlighted as follows:


**Danger**
This sign indicates an extremely hazardous situation that could result in death or serious, irreversible injury if the safety instructions are not followed.


**Warning**
This sign indicates a hazardous situation that could result in death or serious irreversible injury if the safety instructions are not followed.


**Caution**
This sign indicates a hazardous situation that could result in minor or moderate injury if the safety instructions are not followed.


**Note**
This sign indicates situations in which failure to observe the information can result in material damage.

**Format of the safety instructions**


**Signal word**
Type and source of hazard!
Consequences of non-compliance.
⇒ Preventative measures.

**Dimensions**
Dimensions are usually given in cm. Other measurement units, e.g. m, are shown in the illustrations.

**Conventions**
- Instructions are numbered with: 1. ..., 2. ..., 3. ...
- The result of an instruction is shown by: →
- Position numbers are clearly provided for the individual components and are given in the drawing, e.g. **1**, in the text in brackets, for example (**1**).
- Multiple position numbers, i.e. alternative components, are represented with a slash: e.g. **1/2**.

**Notes on illustrations**
The illustration on the front cover of these instructions is understood to be a system representation only. The assembly steps presented in these Instructions for Assembly and Use are shown in the form of examples with only one component size. They are valid for all component sizes contained in the standard configuration.

To facilitate understanding, detailed illustrations are sometimes incomplete. The safety equipment that might not be shown in these detailed illustrations must nevertheless be available.

## Target groups

**Contractors**
These Instructions for Assembly and Use are designed for contractors who either
- assemble, modify and dismantle PERI systems, or
- use them, e.g. for concreting, or
- allow them to be used for other operations, e.g. carpentry or electrical work.

**Safety and Health Protection Coordinator***
- is appointed by the client,
- must identify potential hazards during the planning phase,
- determines measures that provide protection against risks,
- creates a safety and health protection plan,
- coordinates the protective measures for the contractor and site personnel so that they do not endanger each other,
- monitors compliance with the protective measures.

**Competent person**
- is appointed by the scaffolding contractor,
- must be on site for all system operations,
- prepares and updates the plan for assembly, modification and dismantling,
- prepares and updates the plan for use of the system by the user,
- supervises the assembly, modification and dismantling work (supervisor).

**Competent persons qualified to carry out inspections**
Due to the specialist knowledge gained from professional training, professional experience and recent professional activity, the competent person qualified to carry out inspections has a reliable understanding of safety-related issues and can carry out inspections correctly. Depending on the complexity of the inspection to be undertaken, e.g. scope of testing, type of testing or the use of certain measuring devices, a range of specialist knowledge is necessary.

**Qualified personnel**
PERI systems may only be assembled, modified or dismantled by personnel who are suitably qualified to do so. Qualified personnel must have completed a course of training** in the work to be performed, covering the following points at least:
- Explanation of the plan for the assembly, modification or dismantling of the system in an understandable form and language.
- Description of the measures for safely assembling, modifying or dismantling the system.
- Naming of the preventive measures to be taken to avoid the risk of persons and objects falling.
- Designation of the safety precautions in the event of changing weather conditions that could adversely affect the safety of the system, as well as the personnel concerned.
- Details regarding permissible loads.
- Description of all other risks and dangers associated with assembly, modification or dismantling operations.

- **In other countries, ensure that the relevant national guidelines and regulations in the respective current version are complied with!**
- **If no country-specific regulations are available, it is recommended to proceed according to German guidelines and regulations.**

* Valid in Germany: Regulations for Occupational Health and Safety on Construction Sites 30 (RAB 30).

** Instructions are given by the contractor themselves or a competent person selected by them.

## Product description

**Regular assembly**
Ground plan of the standard configuration
25 x 25 cm.

**Permissible load-bearing capacities**
All components listed in the program overview may be used for assembly. Other components are named, or must be planned and verified on a project-specific basis.

**Features**
- The height is always adjusted using the head spindle.
- The preloading and load release of the Heavy-Duty Spindle is carried out using the lowering jack with the aid of the Hydraulic Lowering Unit HD.
- The force is transmitted in a non-operating mode mechanically via the adjusting nut; the Hydraulic Lowering Unit HD is thus load-free and is removed.
- Horizontal Ledgers UH 25 Plus or UH-2 25 must be used for the Heavy-Duty Props HD.
- The Heavy-Duty Props HD in the form of shoring assemblies facilitate a wide range of project-specific applications.

**Technical details**
- Assembly height ≤ 8.65 m.
- Permissible prop load up to 200 kN.
- Correspond to design class B1 according to DIN EN 12812.
- For leg loads, see Section B

**Intended use**
PERI products have been designed for exclusive use in the industrial and commercial sectors by suitably trained personnel only.

The four-legged Heavy-Duty Prop HD made of standard PERI UP System components is used for the vertical transfer of concentrated individual loads of up to 200 kN.
These occur both in shoring and in building redevelopment. The hydraulic cylinder in the base section allows displacement and force-controlled lowering of the prop under load as well as scheduled force-controlled prestressing, which is required for shoring in existing structures. However, it is not intended for lifting loads or lowering loads!
For the construction of the HD Heavy-Duty Prop, individual standards are connected with
PERI UP Horizontal Ledgers UH-Plus or UH-2, which are particularly easy to assemble due to their wedge connections.
By combining standards of different lengths, all heights can be continuously achieved.

## Cleaning and maintenance instructions

In order to maintain the value and operational readiness of the formwork materials over the long term, clean the panels after each use.

Some repair work may also be inevitable due to the tough working conditions.



The contractor must ensure that the personal protective equipment required for cleaning, maintenance and repair work such as

- Safety helmet,
- Safety shoes,
- Safety gloves,
- Safety goggles,

is available and used as intended.

The following instructions should help to keep cleaning and maintenance costs as low as possible.

Cleaning tools must be adapted to the respective surfaces of the components so that they are not damaged.

Mechanical components, e.g. spindles or gear mechanisms, must be cleaned of dirt or concrete residue before and after use, and then greased with a suitable lubricant.

Provide suitable support for the components during cleaning so that no unintentional change in their position is possible.

For maintenance and cleaning of the hydraulic unit, observe the Instructions for Use of the hydraulic unit.

Do not use plastic components if fibre reinforcements are exposed.

Provide suitable support for the components during cleaning so that no unintentional change in their position is possible.

Do not clean components suspended on crane lifting gear.

Components with wood parts are to be stored in well–ventilated and dry conditions.

Any repairs to PERI products are to be carried out by PERI qualified personnel only.

## Disposal

Carry out disposal in accordance with the relevant national regulations.

## Additional technical documentation

- Approvals
  – Approval – Z-8.22-863 PERI UP Flex Module System
  – Approval – Z-8.34-873 Girder Clamp HD

- Instructions for Use
  – Hydraulic Lowering Unit HD

- Instructions for Assembly and Use
  – Push-Pull Props RS and RSS
  – PERI UP Scaffolding Kit core components

- User information
  – Pallets and stacking devices

- Data sheet – Tie bolt PERI 14/20 x 130

- Design tables PERI UP/Edition 2021

## Instructions for Use

Use in a way not intended, deviating from the standard configuration or the intended use according to the Instructions for Assembly and Use, represents an application with a potential safety risk, e.g. risk of falling.

Deviations from the standard configuration must be verified for the application by means of separate strength and stability calculations and explicitly reflected in the assembly instructions.

All components listed in the program overview may be used for assembly. Other components are not permitted. Exceptions are named or must be planned and verified on a project-specific basis.

Additional wind attack surfaces due to icing are not taken into account. Snow and ice loads are not taken into account.

The use of other products and spare parts is not allowed.

Changes to PERI components are not permitted.

The system described in these Instructions for Assembly and Use may contain patent-protected components.

## Cross-system



**Safety instructions apply to all service life phases of the system.**

**General information**
The contractor must ensure that the Instructions for Assembly and Use supplied by PERI are available at all times and understood by the site personnel.

These Instructions for Assembly and Use can be used as the basis for creating a risk assessment. The risk assessment is compiled by the contractor. The Instructions for Assembly and Use are not a substitute for a risk assessment!

Observe and comply with the safety instructions and permissible loads.

For the application and inspection of PERI products, observe the current laws and regulations in force in the respective countries.

Materials and working areas are to be inspected before each use and assembly for:
- damage,
- stability and
- functional correctness.

Damaged components must be exchanged immediately on site and may no longer be used.

Safety components are to be removed only when they are no longer required.

When on slab formwork, scaffolds and working platforms:
- do not jump,
- do not run,
- do not drop anything from or onto it.

Components provided by the contractor must comply with the characteristics stipulated in these Instructions for Assembly and Use and all applicable laws and standards. Unless otherwise indicated, the following applies in particular:
- Timber components:
  Strength class C24 for solid wood according to EN 338.
- Scaffolding tubes:
  Galvanised steel tubes with minimum dimension Ø 48.3 x 3.2 mm according to EN 12811-1:2003 4.2.1.2.
- Scaffolding tube couplings:
  according to EN 74-1 and EN 74-2.

Deviations from the standard configuration are only permitted after a further risk assessment has been carried out by the contractor.

Appropriate measures for working and operational safety, as well as stability, are defined on the basis of this risk assessment.

Corresponding proof of stability can be provided by PERI on request if the risk assessment and resulting measures to be implemented are made available.

Nails and wood screws must not protrude. Only allow other connecting components to protrude to the extent that is necessary.
If necessary, mark protruding components or fit them with protective material.
Secure all bolts with cotter pins and all screws with nuts

Before and after exceptional occurrences that may have an adverse effect on the safety of the scaffolding system, the contractor must immediately
- produce another risk assessment and make use of its results to take suitable steps to guarantee the stability of the scaffolding system,
- arrange for an extraordinary inspection to be carried out by a competent person qualified to do so. The aim of this inspection is to identify and rectify any damage in good time in order to guarantee safe use of the scaffolding system.

Exceptional events could be:
- accidents, fire, explosions, collisions,
- long periods of non-use,
- natural events, e.g. heavy rainfall, heavy snowfall, significant icing, storms or earthquakes.

Suitable measures could be:
- removing nets/tarpaulin,
- clearing snow and ice,
- reducing live loads,
- securing loose materials.

**Assembly, modification and dismantling work**
PERI systems may only be assembled, modified or dismantled under the supervision of a person qualified to do so and by technically suitable employees. The qualified personnel must have received appropriate training for the work to be carried out with regard to specific risks and dangers.

On the basis of the risk assessment and Instructions for Assembly and Use, the contractor must create installation instructions, in order to guarantee safe assembly, modification and dismantling of the climbing unit.

Before initial use, the safe functioning of the scaffold must be checked by a person qualified to carry out the inspection. The results of the inspection must be documented in an inspection log.



The contractor must ensure that the personal protective equipment required for the assembly, modification or dismantling of the climbing formwork, e.g.
- Safety helmet,
- Safety shoes,
- Safety gloves,
- Safety goggles,

is available and used as intended.

For work at a higher level, use an approved ladder or platform system, or an assembly scaffold.



If personal protective equipment against falling from a height (PPE) is required or specified in local regulations, the contractor must determine appropriate attachment points on the basis of the risk assessment.
The PPE to be used to prevent falling is determined by the contractor.

The contractor must
- provide safe working areas for site personnel, which are to be reached through the provision of safe access ways. cordon off and clearly mark danger zones.
- guarantee stability during all stages of construction, in particular during assembly, modification and dismantling operations.
- ensure and demonstrate that all loads that occur are safely transferred.

**Use**
Every contractor who uses or allows the PERI systems to be used, is responsible for ensuring that the equipment is in good condition.

If the system is used successively or at the same time by several contractors, the health and safety coordinator must point out any possible mutual hazards and all work must then be coordinated.

When systems are used in publicly accessible areas,
- measures to prevent unauthorised use, e.g. enclosure of access areas, must be taken.
- Measures are taken against injuries caused by bumping against protruding components, e.g. assembly of protective components.

Always keep the contact surfaces of the system free of dirt, objects, snow and ice.
Close off the system in extreme weather conditions.

## System-specific

**Warning**
Risk of confusion with other components.
Only the components specified have been structurally verified for this application.
⇒ To identify the correct components, use the assembly instructions for PERI UP Scaffolding Kit core components.

Only position Heavy-Duty Props HD free of any load if the person in charge has requested this.

The load-distributing support used, such as planking, must match the respective substrate. If multiple layers are required, planks are to be arranged crosswise.
It must be ensured that the scaffolding cannot shift in a horizontal direction, irrespective of what substrate is being used.

Couplings with screw closures must be tightened with 50 Nm. This corresponds to a force of 20 kg using a lever arm length of 25 cm.

Secure all wedges with a jarring blow using a 500 g hammer.

## Storage and transportation

**General information**
- Store and transport components in such a way that no unintentional change in their position is possible. Detach load lifting accessories and lifting gear from the lowered components only if they are in a stable position and no unintentional change is possible.
- Do not drop the components.
- Only ever use approved and inspected means of transportation from PERI incl. lashing, lifting gear and slings.
- Only attach the means of transport to the intended attachment points using suitable lifting gear and slings.

**During the relocation procedure**
- ensure that components are picked up and set down in such a way that unintentional falling over, falling apart, sliding, falling down or rolling is avoided.
- always use ropes to guide components or assemblies that are susceptible to wind when moving them with a crane.
- no one is allowed to remain under the suspended load.
- The access areas on the construction site must be free of obstacles and tripping hazards, and must also be slip-resistant.
- For transportation, the substrate must have sufficient load-bearing capacity.
- Use original PERI storage and transport systems, e.g. Crate Pallets, pallets or stacking devices.

# A1 Vertical assembly of individual props

## Lowering Jack HD

**Warning**

Mechanically moving components.
During operations, there is a risk of pinching and crushing hands and feet.

⇒ Wear safety shoes and safety gloves and do not grasp or reach into the cylinder in the lowering jack during operations. Keep feet away from the lowering jack.

Permissible load-bearing capacity up to 200 kN.

**Components**

| | |
|---|---|
| **1** | Lowering Jack HD |

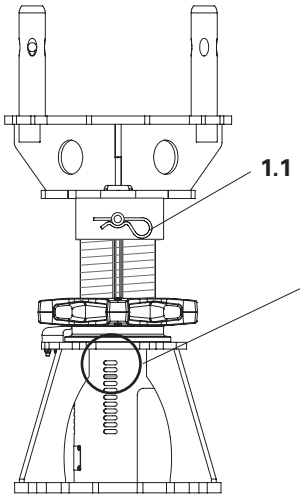



Fig. A1.01

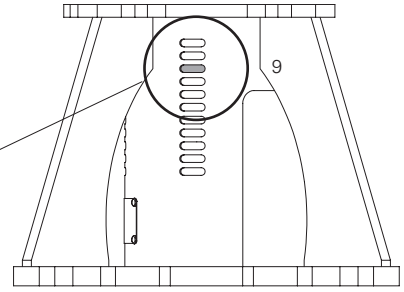



Fig. A1.01a

- The height of the prop is adjusted exclusively via the adjusting nut on the head spindle.
- Slot 9 is recommended as a basic setting if component activation is carried out later.
  Use slot 3 if component pretensioning is required.
- Set up the lowering jack on a level and sufficiently load-bearing substrate, e.g. for load distribution: steel plate 350 x 350 x 15 mm on concrete of grade C 12/15.

**Preparation**

Unscrew the spindle tube (**1.1**) until the red pressure piece is visible in the "Slot 9".
(Fig. A1.01 + A1.01a)

## Connection Plate UJC

**Components**

| | |
|---|---|
| **2** | Connection Plate UJC |

- The connecting bolt secures the inner spherical piece.
- The system height ($_{HS}$) of the Lowering Jack HD and Connection Plate UJC is adjustable from 45.5 to 56.5 cm.
  The height when using the basic setting "slot 9" is 54.5 cm.

**Assembly**

1. Place the connection plate (**2**) with connecting bolt (**2.2**) on the spindle tube.
   (Fig. A1.02a)
2. Loosen the cotter pin and remove the plate.
3. Remove the connecting bolt (**2.2**). Connection plate slides down and spherical piece (**2.1**) is positioned on the spindle tube.
   (Fig. A1.02b)
4. Insert connecting bolts into the connection plate.
5. Fit the plate and secure it with a cotter pin.
   (Fig. A1.02c)

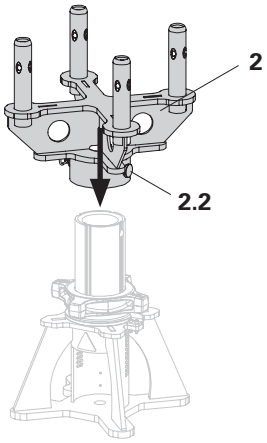



Fig. A1.02a

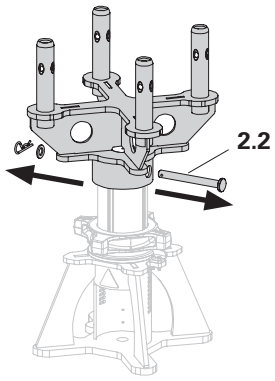



Fig. A1.02b

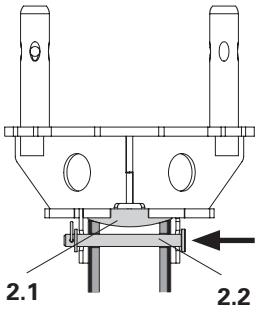



Fig. A1.02c



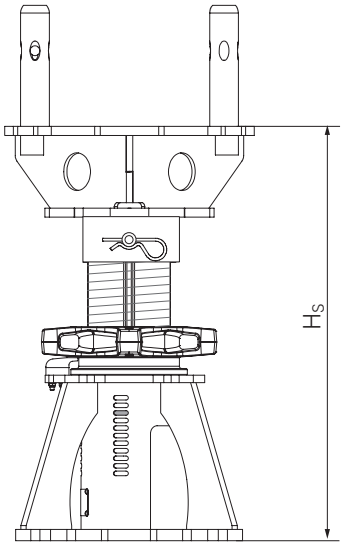



Fig. A1.02d

# A1 Vertical assembly of individual props

## Pre-assembly of props

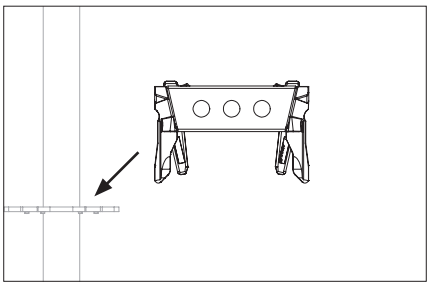

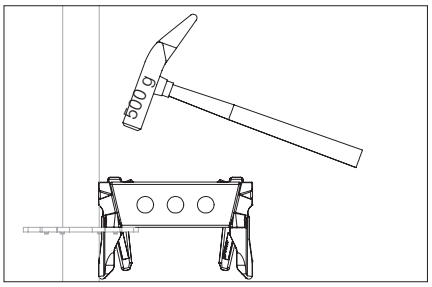


**Warning**
Risk of confusion with other components.
Only the components specified have been structurally verified for this application.
⇒ To identify the correct components, use the assembly instructions for PERI UP Scaffolding Kit core components.

### Components

**3** Base Standard UVB 25
**4** Horizontal Ledger UH-2 25
**5** Standard UVR-2
**6** Locking pin Ø 48/57
Screw M10 x 70, Mu (alternatively)

- For props with a structure height h > 6 m, the Standard UVR-2 300 must be installed centrally in the leg arrangement.
- When assembling, keep the symmetrical arrangement of the standard joints, see Section see Section "B4 Materials list" on page 64.
- The prop can be pre-assembled in units or full length, e.g. from a working scaffold.
- The prop can be tilted up to 2° via the connection plate.
- Align all the holes of the standards in one direction.
- Spacing of horizontal ledgers one above the other: 50 cm.

### Assembly

1. Assemble Standards UVR-2 (**5**) and Horizontal Ledgers UH-2 25 (**4**) to the required height to form a prop or unit. Use a 500 g hammer to secure all wedges with a jarring blow (Fig. A1.03).

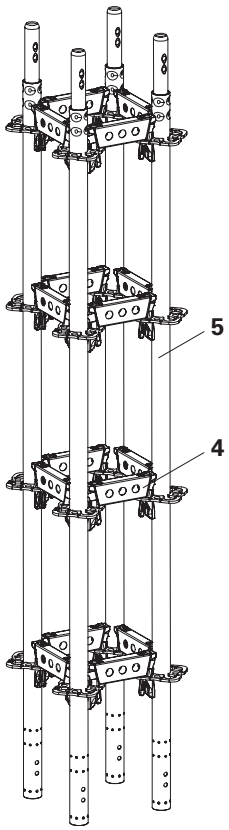



Fig. A1.03

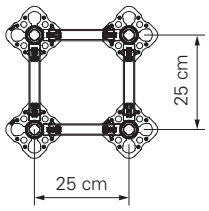



Fig. A1.03a

# A1 Vertical assembly of individual props

2. Push the Base Standards UVB-25 (**3**) onto the pins of the Connection Plate UJC (**2**) (Fig. A1.04a + A1.04b).
3. Connect Base Standards UVB (**3**) to Horizontal Ledgers UH-2 25 (**4**). Secure the wedges. (Fig. A1.04b)
4. Insert pre-assembled standard arrangement, see Section "B4 Materials list" on page 64, into Base Standards UVB and secure with locking pins. (Fig. A1.05)
5. Secure the prop against tipping, see Section "A3 Bracing individual props" on page 24.

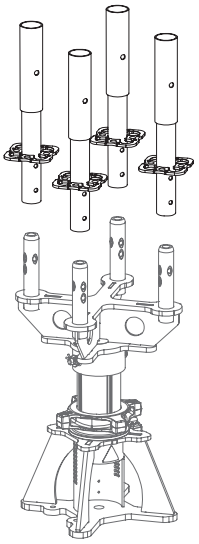


Fig. A1.04a

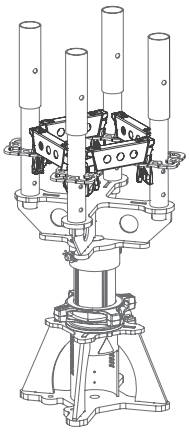


Fig. A1.04b

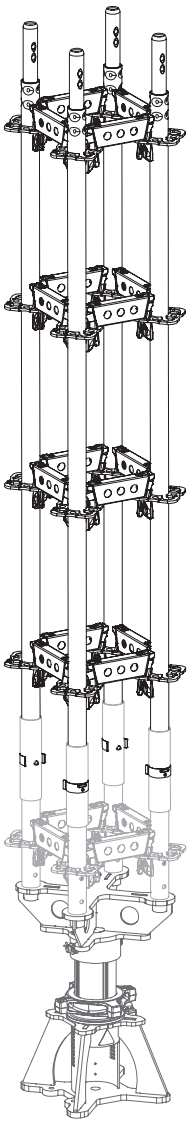


Fig. A1.05

## Head Spindle TR 110-80/55

### Components

| | | |
|---|---|---|
| **7** | Head Spindle TR 110-80/55 | 1x |
| **6** | Locking Pin Ø 48/57 | 4x |

- The height of the prop is adjusted exclusively via the adjusting nut on the head spindle.
- The system height ($H_S$) of the Head Spindle TR is adjustable from 28.6 to 83.6 cm.
- Usable spindle length 55 cm.
- The head spindle can be tilted uniaxially up to 3°.
- Assembly is carried out in a safe working area, e.g. working scaffold.

### Assembly

1. Fit the head spindle (**7**) onto the pins of the Standards UVR-2.
2. Tightly connect the Standards UVR-2 and the head spindle with locking pins Ø 48/57 (**6**). (Fig. A1.06)
   Alternatively: Use bolt M10 x 70 with nut.


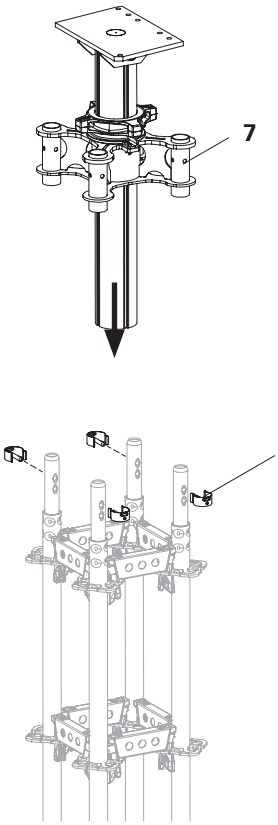



Fig. A1.06

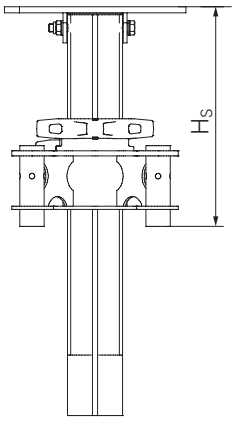

**Building redevelopment**
If there is not enough free space to mount the head spindle from above during vertical assembly, the head spindle can be mounted from the side.

Assembly
1. Remove the horizontal ledger (**4**) up to the joint of the standard on three sides of the prop.
2. Remove the Ø 48/57 locking pins (**6**) from two adjacent standards.
3. Turn both free Standards UVR-2 by 45°. (Fig. A1.07a)
   – Head spindle (not spindled out) can be installed from the side.
4. Push the spindle tube (**7.1**) between the rosettes of the turned standards and put the head spindle on the standards.
   (Fig. A1.07)
5. Turn back the standards.
6. Connect the standard joints and the head spindle with locking pins so that they are tension-proof.
7. Install the remaining horizontal ledgers.

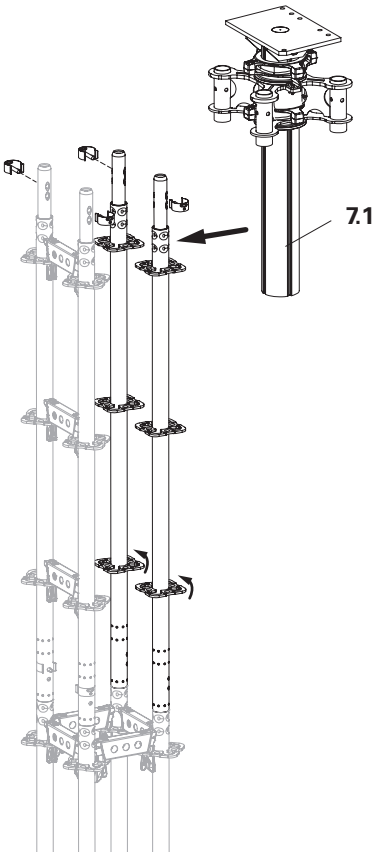



Fig. A1.07

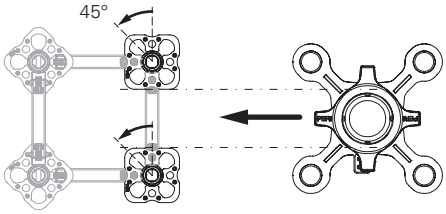



Fig. A1.07a

# A2 Horizontal assembly of individual props


## Pre-assembly of props


The prop can be pre-assembled in units or full length.


### Components

**2** Connection Plate HD
**3** Base Standard UVB 25
**4** Horizontal Ledger UH-2 25
**5** Standard UVR-2
**6** Locking pin Ø 48/57
Screw M10 x 70, Mu (alternatively)
**7** Head Spindle TR 110-80/55

- For props with a structure height h > 6 m, the Standard UVR-2 300 must be installed centrally in the leg arrangement.
- When assembling, keep the symmetrical arrangement of the standard joints. Align all the holes of the standards in one direction.
- Spacing of horizontal ledgers one above the other: 50 cm.
- Use a 500 g hammer to secure all wedges with a jarring blow.

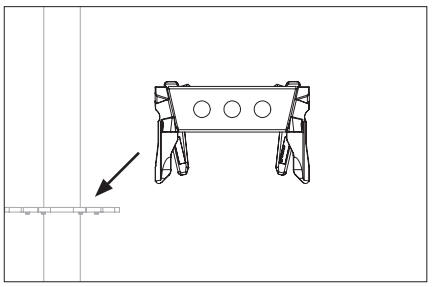

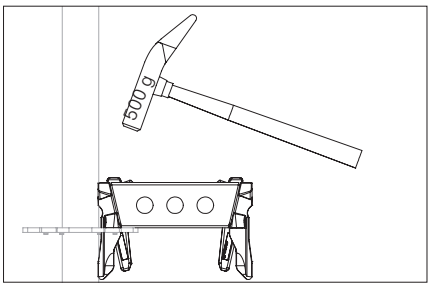
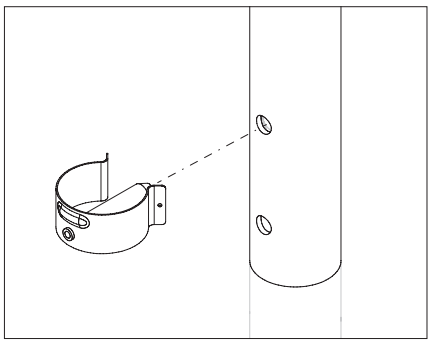
# A2 Horizontal assembly of individual props

**Assembly**

1. Assemble Standards UVR-2 (**5**) and Horizontal Ledgers UH-2 (**4**) to form a prop up to the required height.
2. Place the Base Standards UVB-25 (**3**) on the standards and connect them with the locking pins (**6**). (Fig. A2.01)
3. Connect Base Standards UVB (**3**) to Horizontal Ledgers UH-2 25 (**4**). Secure the wedges. (Fig. A2.02)
4. Fit the Head Spindle TR 110-80/55 (**7**) onto the pins of the standards and tightly connect using the locking pins (**6**). (Fig. A2.03)

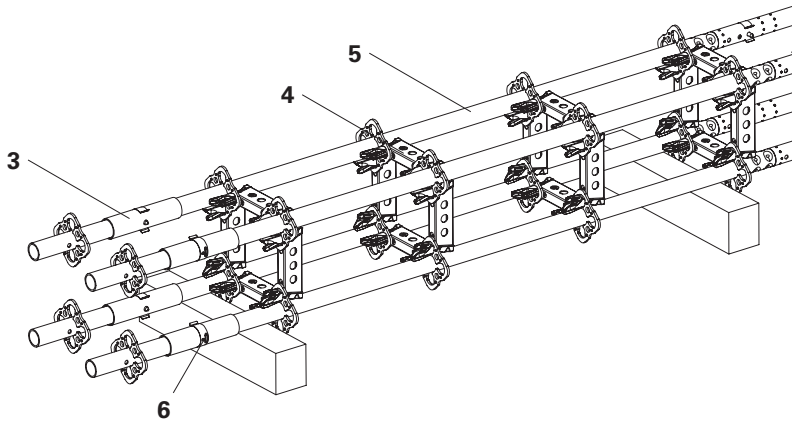



Fig. A2.01

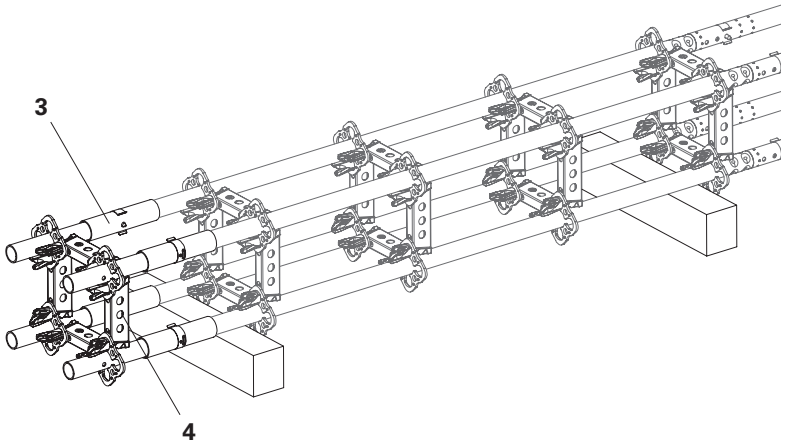



Fig. A2.02

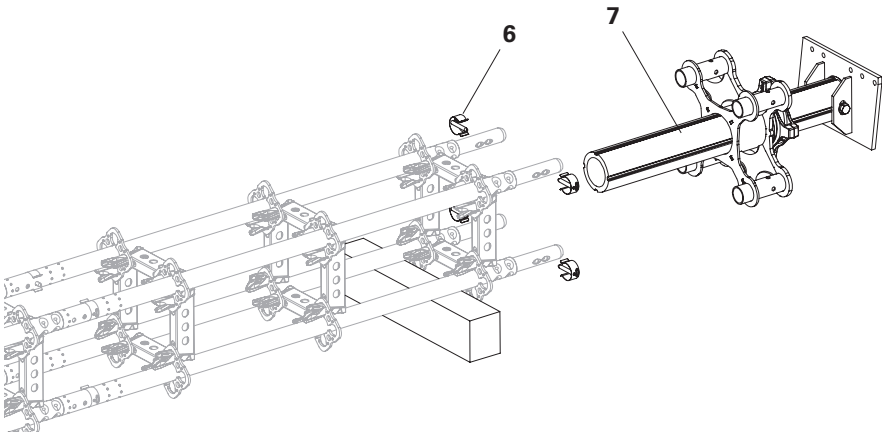



Fig. A2.03

## Prop erection

**Components**

**1** Lowering Jack HD
**2** Connection Plate UJC

- The height of the prop is adjusted via the adjusting nut on the head spindle.
- Set up the lowering jack on a level and sufficiently load-bearing sub-strate, e.g. for load distribution: steel plate 350 x 350 x 15 mm on concrete of grade C 12/15.

Are all connections tight?
Are all horizontal ledgers secured in position?

**Preparation**

- Unscrew the spindle tube (**1.1**) until the red pressure piece is visible in the "Slot 9". (Fig. A2.04a)

**Erection**

1. Attach the Heavy-Duty Prop HD around the standard supports (**7.2**) of the head plate with a textile sling and carefully lift the prop. (Fig. A2.04)

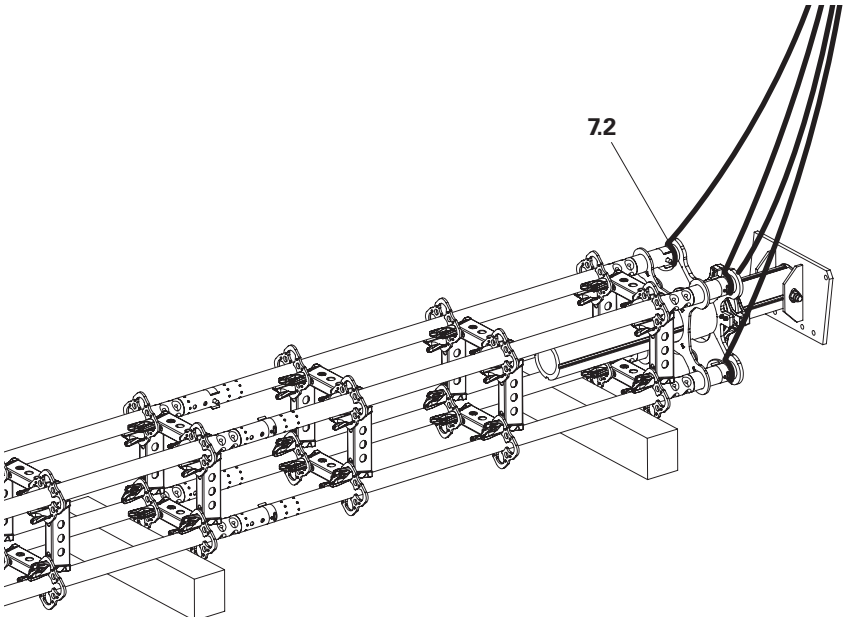



Fig. A2.04

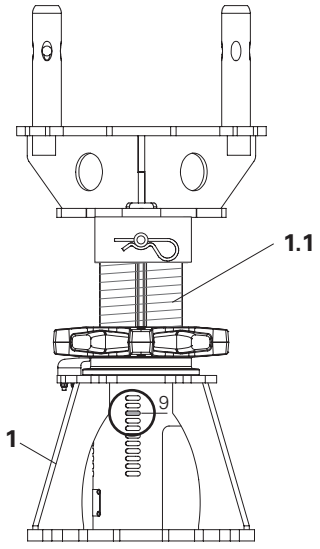



Fig. A2.04a

2. Place the standard set with base standards on the connection plate (**2**) and lower it. (Fig. A2.05)
4. Secure the prop against tipping, see Section "A3 Bracing individual props" on page 24
5. Release the prop from the crane.

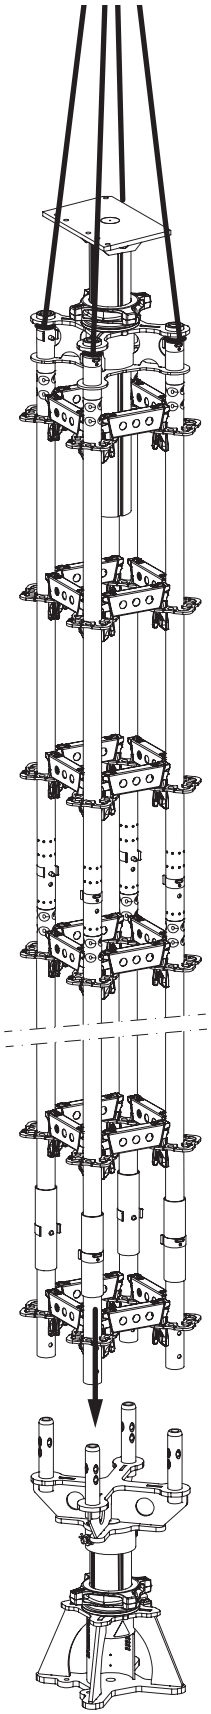


Fig. A2.05

# A3 Bracing individual props

## Bracing

During assembly or disassembly, the Heavy-Duty Props HD are held in a secure position with a crane until temporary assembly aids are fitted to prevent tipping.
For longer Heavy-Duty Props HD, additional support holders are required at higher positions.

## Bracing with Push-Pull Props

**Components**

| | |
|---|---|
| **12** Push-pull prop | 3x |
| **13** Brace Connector HDR-2 | 3x |
| **14** Base Plate-2 for RS | 3x |
| **15** Tie Bolt 14/20 x 130 | 3x |

Mount 3 push-pull props as assembly aids to ensure stability!

**Assembly**

1. Connect the half-coupler of the Brace Connector HDR-2 (**13**) to the Standard UVR-2.
   (Fig. A3.01)
2. Fasten push-pull prop (**12**) with bolt and cotter pin.
   (Fig. A3.01a)
3. Fasten the base plate (**10**) to the foundation with the tie bolt (**11**).
4. Fix push-pull prop to the base plate with bolts and cotter pins.
   (Fig. A3.01b)
5. Detach the Heavy-Duty Prop HD from the crane.
   (Fig. A3.01)

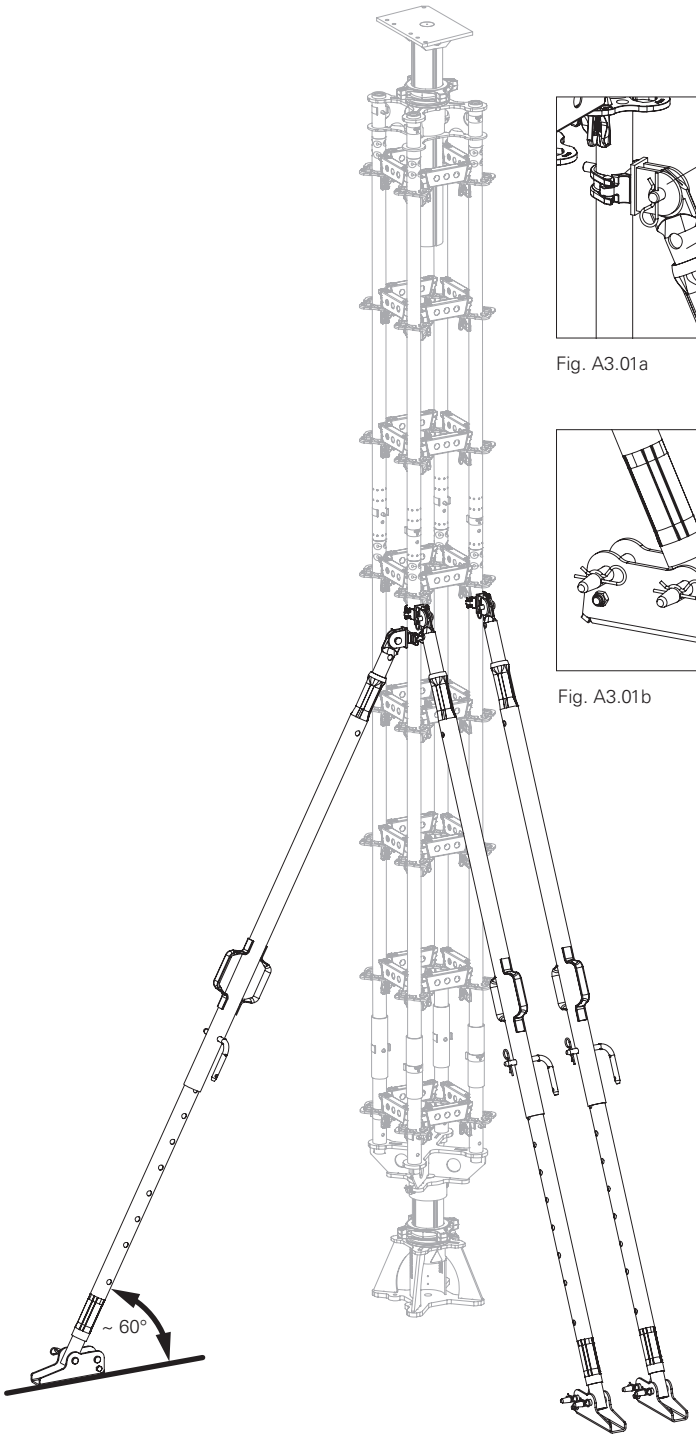



Fig. A3.01

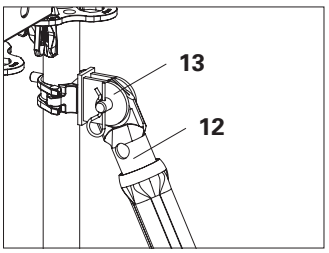



Fig. A3.01a

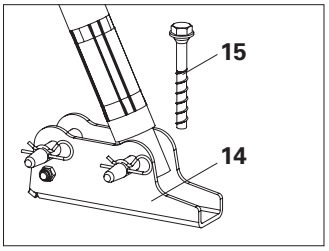



Fig. A3.01b

## Bracing additional props using horizontal ledgers

**Components**

| | |
|---|---|
| **16** Horizontal Ledger UH-2 | 2x |

Install push-pull props and horizontal ledgers for stability!

**Assembly**

1. Fit push-pull props.
2. Attach the horizontal ledger (**16**) to the rosettes and secure with a hammer blow. (Fig. A3.02)

Alternatively, the props can also be secured to existing structural parts, e.g. walls, in the assembly state to prevent them from falling over or shifting horizontally.

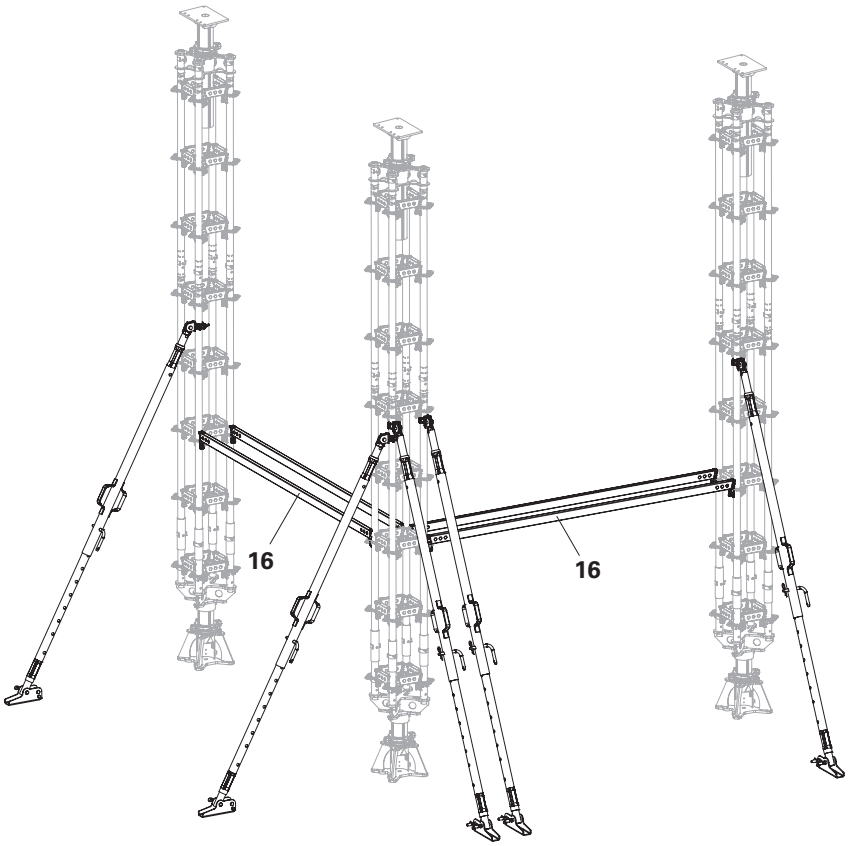



Fig. A3.02

# A4 Dismantling individual props

## Heavy-Duty Prop HD

**Warning**

Individual props may fall over during moving procedures, strike people and seriously injure them.

⇒ Never move individual props horizontally!

⇒ If individual props are dismantled when in a vertical position, secure them against falling over.

**Dismantling**

The prop can be dismantled when in a vertical or horizontal position.

**Horizontal dismantling:**

1. Attach the prop to the crane lifting gear.
2. Remove the push-pull props (**12**).
3. Lift out the prop with a crane and lay it on squared timbers.
4. Remove the Brace Connectors HDR (**13**)
5. Remove the locking pin (**6**) from the Head Spindle TR (**7**) and remove the head spindle.
6. Release the horizontal ledger (**4**) with a hammer and remove it.
7. Remove locking pins (**6a**) on standards and dismantle the standards (**5**).
8. Place the components in transport containers in an orderly manner.

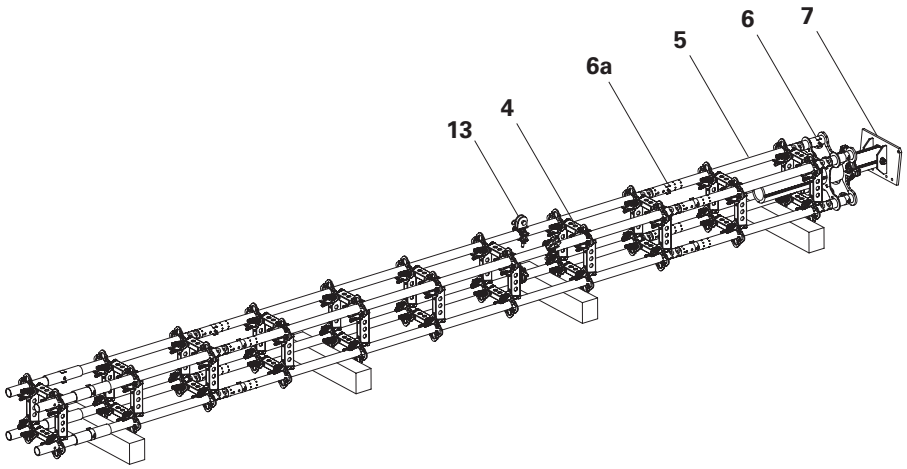



Fig. A4.01

# A4 Dismantling individual props

**Vertical dismantling:**
Dismantling is carried out from top to bottom in a secure working area, e.g. from a working scaffold.

If there is not enough free space to remove the head spindle from above during vertical disassembly, the head spindle can be removed from the side.

**Removing the head spindle**
1. Lower the head spindle (**7**).
2. Remove the horizontal ledger (**4**) up to the joint of the standard on three sides of the prop.
3. Remove the Ø 48/57 locking pins (**6**) from two adjacent standards.
4. Turn both free Standards UVR-2 by 45°.
   → The head spindle can be removed from the side.
5. Lift the head spindle and remove the spindle tube (**7.1**) from the side between the rosettes of the turned standards.
   (Fig. A4.01a + A4.01b)
6. Remove other horizontal ledgers, locking pins and Standards UVR.

**Connection Plate HD**
1. Remove the connection plate (**2**) from the spindle tube. (Fig. A4.02a)
2. Remove the spherical piece (**2.1**).
3. Turn the connection plate over and insert the spherical piece.
4. Secure connecting bolts (**2.2**) with plate and cotter pins.
   (Fig. A4.02b)

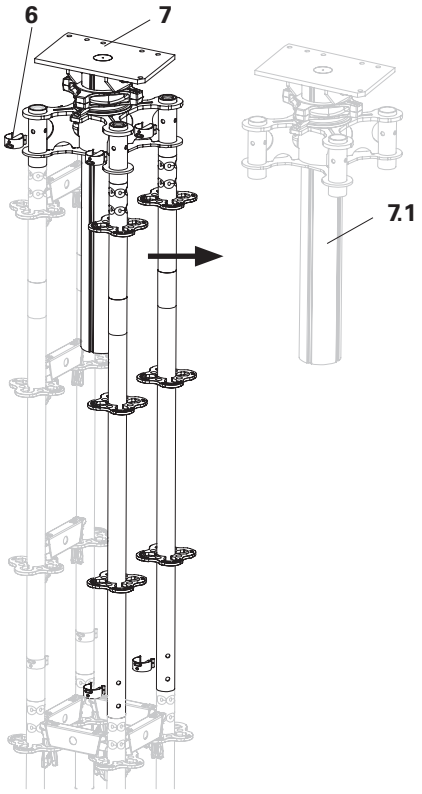


Fig. A4.01a

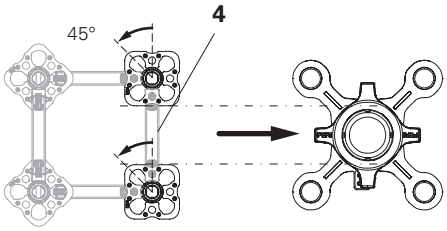


Fig. A4.01b

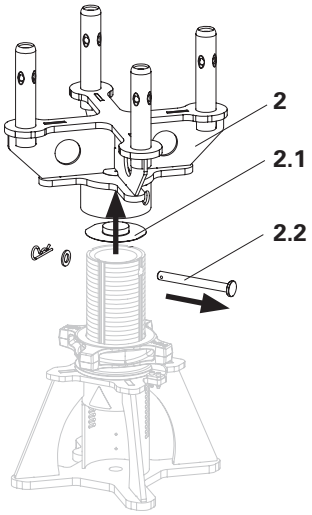


Fig. A4.02a

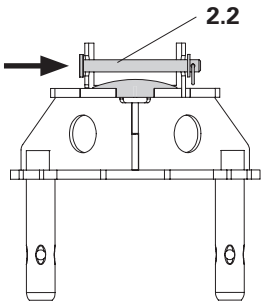


Fig. A4.02b

## Load-controlled pre-loading

- Follow the Instructions for Use for the Hydraulic Lowering Unit HD!
- Permissible load-bearing capacity of up to 200 kN!
- Follow the prestressing plan!
- Remove assembly aids!
- Pre-tension groups of heavy-duty props evenly in small steps.
  → Monitor the load distribution on the manometer.
  → The cylinder stroke is limited to max. 10 mm by the adjusting nut and hold-down device.
- Illustrations are without the connection plate and Heavy-Duty Prop HD.

**Requirement**

- Prop or main beam frame with lowering jack is perpendicular beneath the component to be supported and the red pressure piece is visible in slot 3.
- The pump (**11.1**) is connected to the hydraulic cylinder (**11.2**). The cylinder is retracted.
- The pump valve (**11.3**) is closed. (Fig. A5.01 + A5.02)

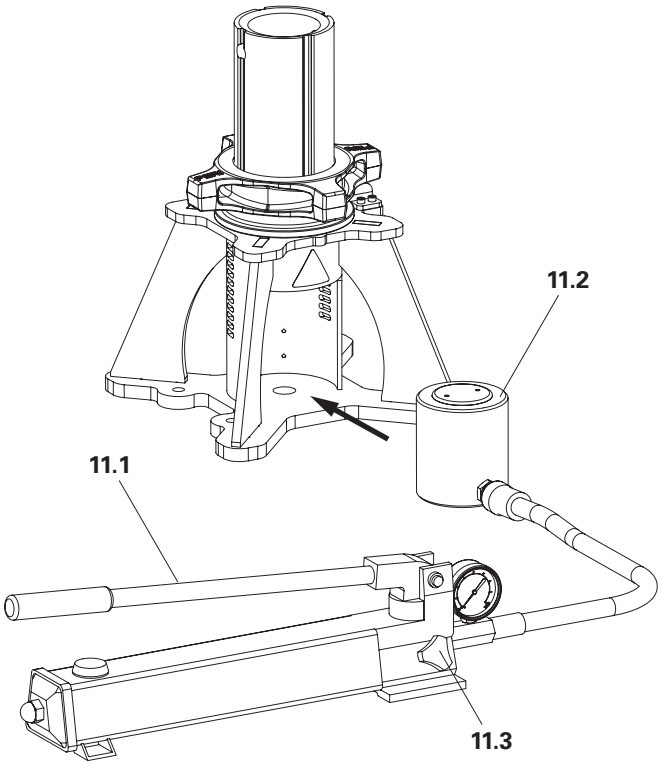



Fig. A5.01


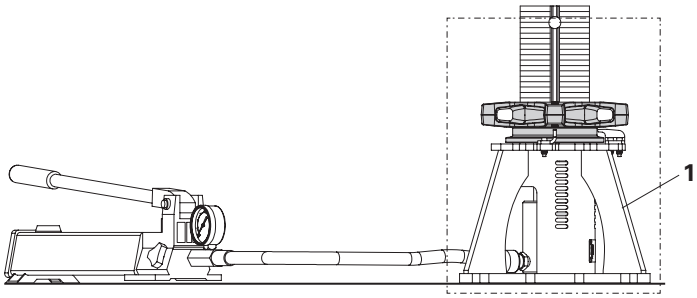



Fig. A5.02

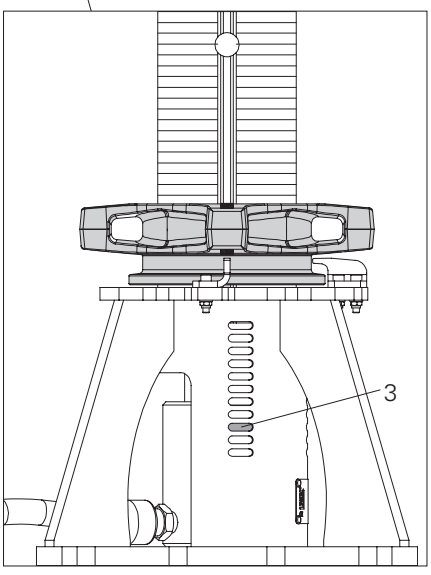

**Prestressing the prop**

1. Insert the hydraulic cylinder (**11.2**) into lowering jack (**1**).
2. Operate the pump lever until the cylinder is resting on the red pressure piece (**1.1**) of the spindle tube. (Fig. A5.03 - A5.03b)
3. Build up pressure with the pump lever until the specified force is displayed on the manometer or the spindle is resting on the hold-down device, see static and pre-stressing plan. Monitor the free travel at the hold-down device (**1.3**) and the pressure on the manometer. (Fig. A5.03)
4. Rotate the adjusting nut (**1.2**) downwards in a clockwise direction by hand until it is resting on the plate. (Fig. A5.04)
5. Repeat steps 3 and 4 until the required force is reached.
6. Open the pump valve (**11.3**).
   → The hydraulic cylinder retracts and the load is transferred via the adjusting nut.

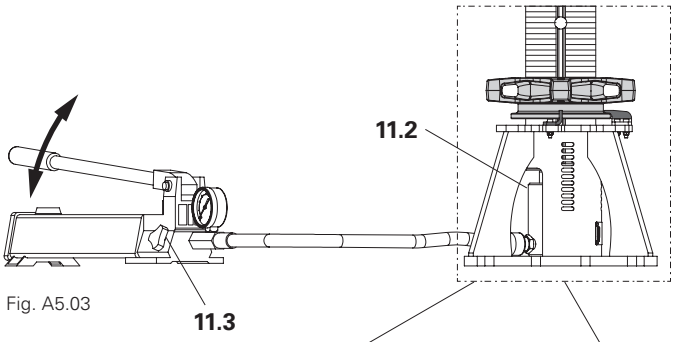



Fig. A5.03

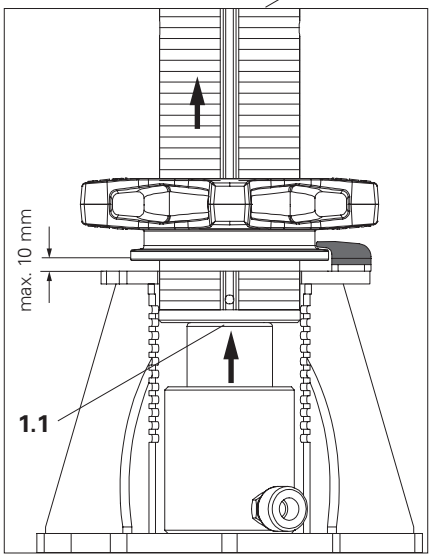



Fig. A5.03a

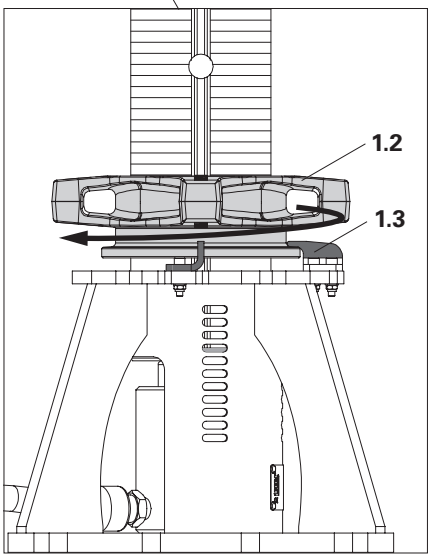



Fig. A5.03b

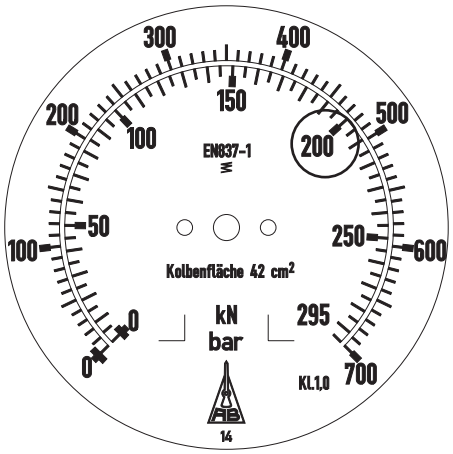



Fig. A5.04

# A5 Hydraulic Lowering Unit HD

## Load-controlled lowering

- Follow the Instructions for Use for the Hydraulic Lowering Unit HD!
- Permissible load-bearing capacity of up to 200 kN!
- Follow the lowering plan!
- Remove assembly aids!
- Lower groups of heavy-duty props evenly in small steps.
  → Monitor the load distribution on the manometer.
  → The cylinder stroke is limited to max. 10 mm by the adjusting nut and hold-down device.
- Illustrations are without the connection plate and Heavy-Duty Prop HD.

**Requirement**

- The pump (**11.1**) is connected to the hydraulic cylinder (**11.2**). The cylinder is retracted.
- The pump valve (**11.3**) is closed. (Fig. A5.05)

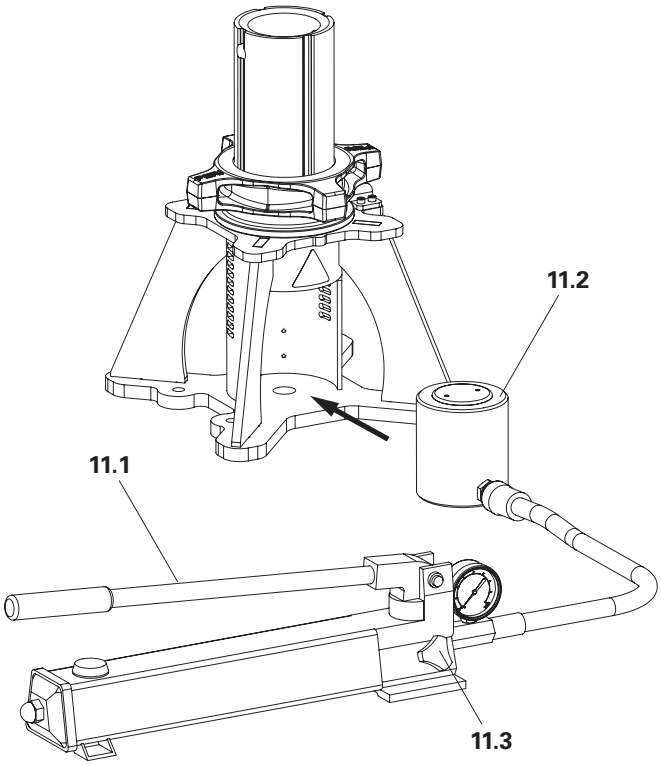



Fig. A5.05

**Lowering the prop**

1. Insert the hydraulic cylinder (**11.2**) into lowering jack (**1**).
2. Operate the pump lever until the cylinder is resting on the red pressure piece (**1.1**) of the spindle tube. (Fig. A5.06)
3. Continue pumping until the adjusting nut (**1.2**) is free of load (approx. ½ pump stroke).
   → Monitor manometer: max. 200 kN. (Fig. A5.06a)
4. Turn the adjusting nut upwards by hand in an anticlockwise direction until the adjusting nut is resting against the hold-down device (**1.3**). (Fig. A5.06b)
5. Carefully open the pump valve (**11.3**) on the pump and monitor the load indication on the manometer. Cylinder retracts and is lowered with the adjusting nut and prop by max. 10 mm. (Fig. A5.07 + A5.07a)
6. When the desired load is reached, close the pump valve.
7. Turn the adjusting nut downwards in a clockwise direction by hand until it is seated.
8. Open the pump valve (**11.3**), thereby relieving the hydraulics.
9. If the desired load is not reached within the 10 mm lowering distance, repeat steps 1-8, see structural analysis and lowering plan.

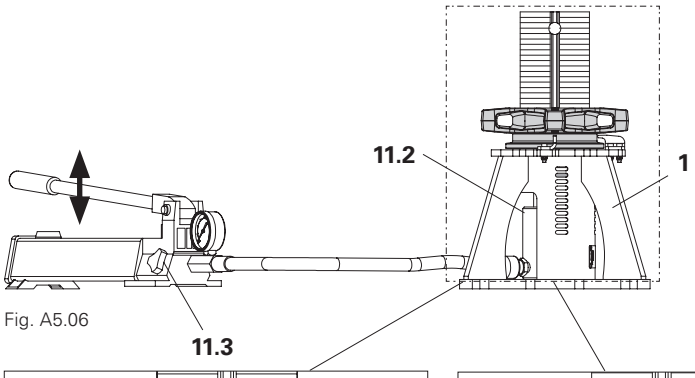



Fig. A5.06

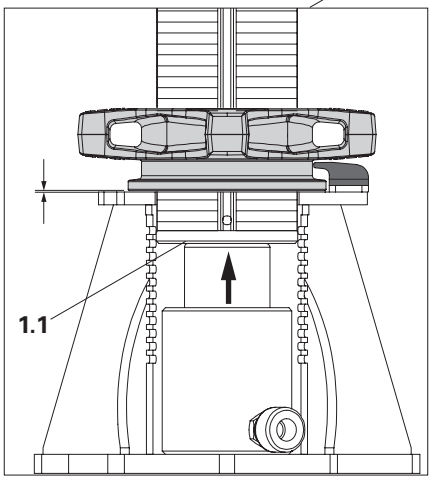



Fig. A5.06a

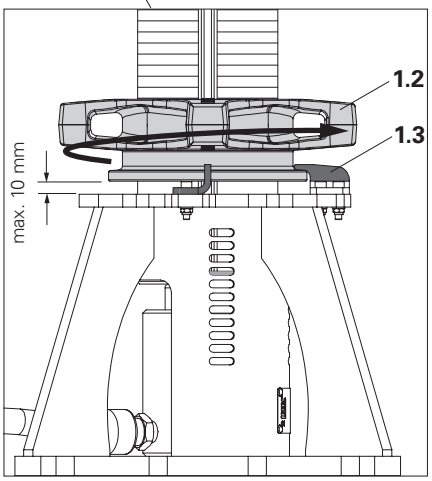



Fig. A5.06b

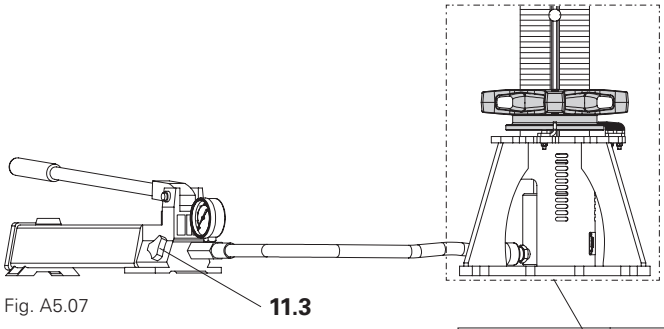



Fig. A5.07

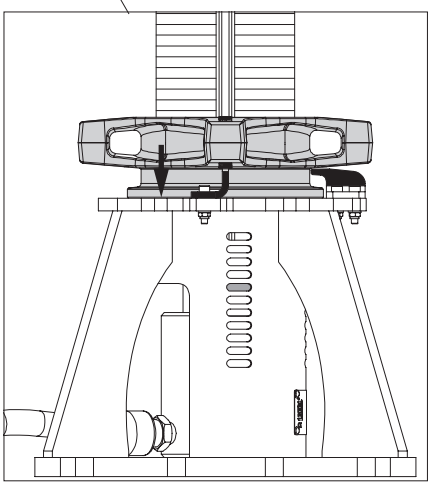


Fig. A5.07a

## Displacement-controlled lowering

### Hydraulic lowering

- Follow the Instructions for Use for the Hydraulic Lowering Unit HD!
- Lower groups of heavy-duty props evenly in small steps.
  → The cylinder stroke is limited to max. 10 mm by the adjusting nut and hold-down device.
  → This corresponds to the spacing of the slots in the lowering jack. (Fig. A5.08)
- Follow the lowering plan!
- Remove assembly aids!

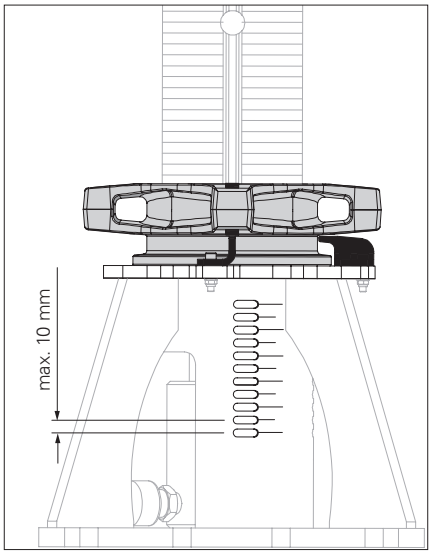



Fig. A5.08

**Requirement**
Load-controlled as in the lowering procedure.

**Hydraulic lowering**

1. Operate the pump lever until the cylinder is resting on the red pressure piece (**1.1**) of the spindle tube.
2. Continue pumping until the adjusting nut (**1.2**) is free of load (approx. ½ pump stroke).
3. Turn the adjusting nut upwards by hand in an anticlockwise direction until the adjusting nut is resting against the hold-down device.
4. Carefully open the pump valve (**11.3**) on the pump and monitor the slots on the lowering jack.
5. If the red pressure piece (**1.1**) of the spindle tube appears in the next slot, close the pump valve. (Fig. A5.09)
6. Repeat steps 3 and 4 until the prop or main beam frame is lowered by the specified amount.

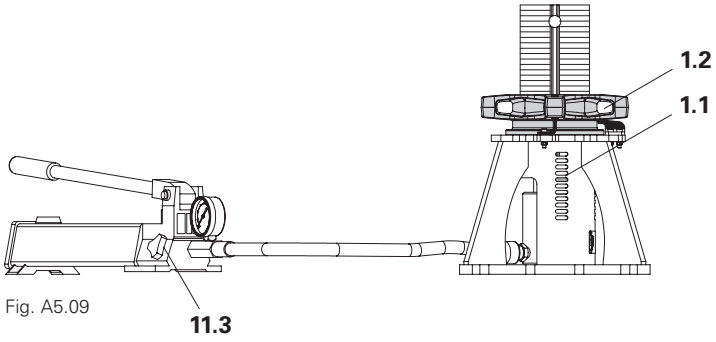



Fig. A5.09

## Displacement-controlled lowering

### Lowering with the Wingnut Spanner HD with low loads

- The lowering range via the lowering jack is 100 mm (starting position "slot 11").
- With a load ≤ 50 kN, lowering can be carried out using the Wingnut Spanner HD (**8**) without the use of hydraulics.
- The lowering range for extending the formwork superstructure is provided by the adjusting nut of the head spindle.

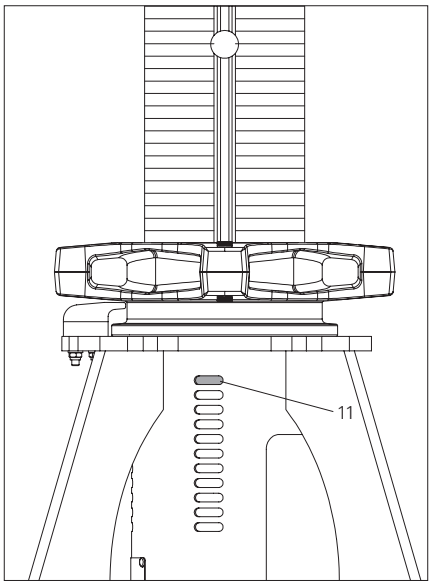



Fig. A5.10

**Lowering**

1. Turn adjusting nut (**1.2**) upwards with Wingnut Spanner HD (**8**). (Fig. A5.10a)
2. Spindle off the head spindle. (Fig. A5.10b)

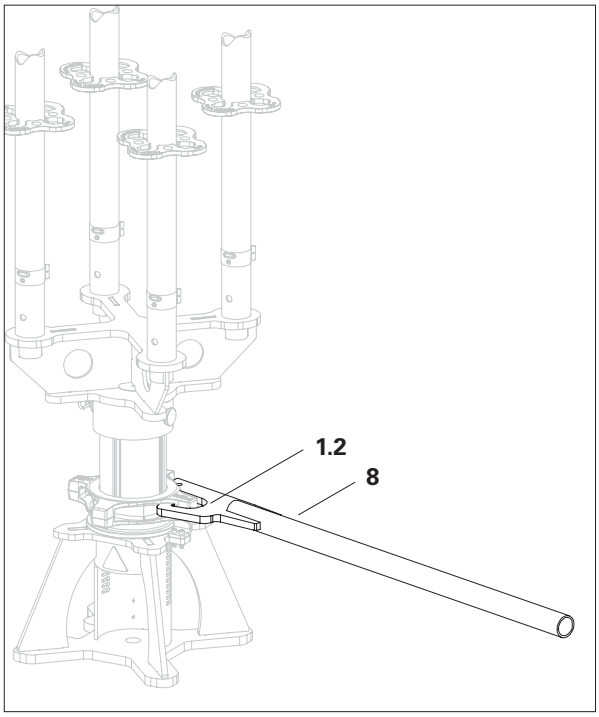



Fig. A5.10a

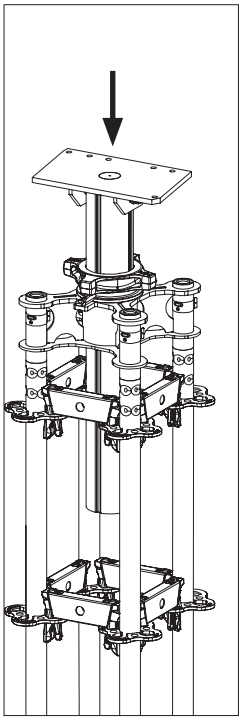


Fig. A5.10b

# A6 Vertical assembly of the main beam frame

**Warning**

There is no safe working area during assembly!
Risk of falling!
⇒ Use personal protective equipment to prevent falling!
⇒ Use a working scaffold or cherry picker to assemble the components.

The load transfer of the Main Beam HDT as base and top beams must be verified on a project-specific basis in each case.

## Overview

This section shows the assembly of a vertical Main Beam Frame with PERI UP Flex Heavy-Duty Props HD. In addition to the components of the PERI UP Flex Heavy-Duty Prop HD, the following components are required.

**Additional components**

| | |
|---|---|
| **6** | Locking pin Ø 48/57 |
| **20** | Main Beam HDT 880 |
| **23** | Girder Clamp HD 70 |
| **30** | Ladder Cage 150 |
| **31** | Ladder Connector UAC-2 |
| **32** | Access Ladder 180/2 |
| **33** | Ladder 180/6 |
| **34** | Ladder base |
| **35** | Ladder hook |
| **40** | Console Bracket UCM 75 |
| **41** | Top Standard UVH-2 100 |
| **42** | Horizontal Ledger UH-2 (as connecting ledger) |
| **43** | Steel Deck UDG |
| **44** | Steel Toe Board UPY |
| **47** | Connector ULT 32 |
| **50** | Double Tie Yoke HDD |
| **51** | Tie Rod DW 15 |
| **52** | Wing Nut DW 15 |
| **53** | Cam Nut DW 15 |

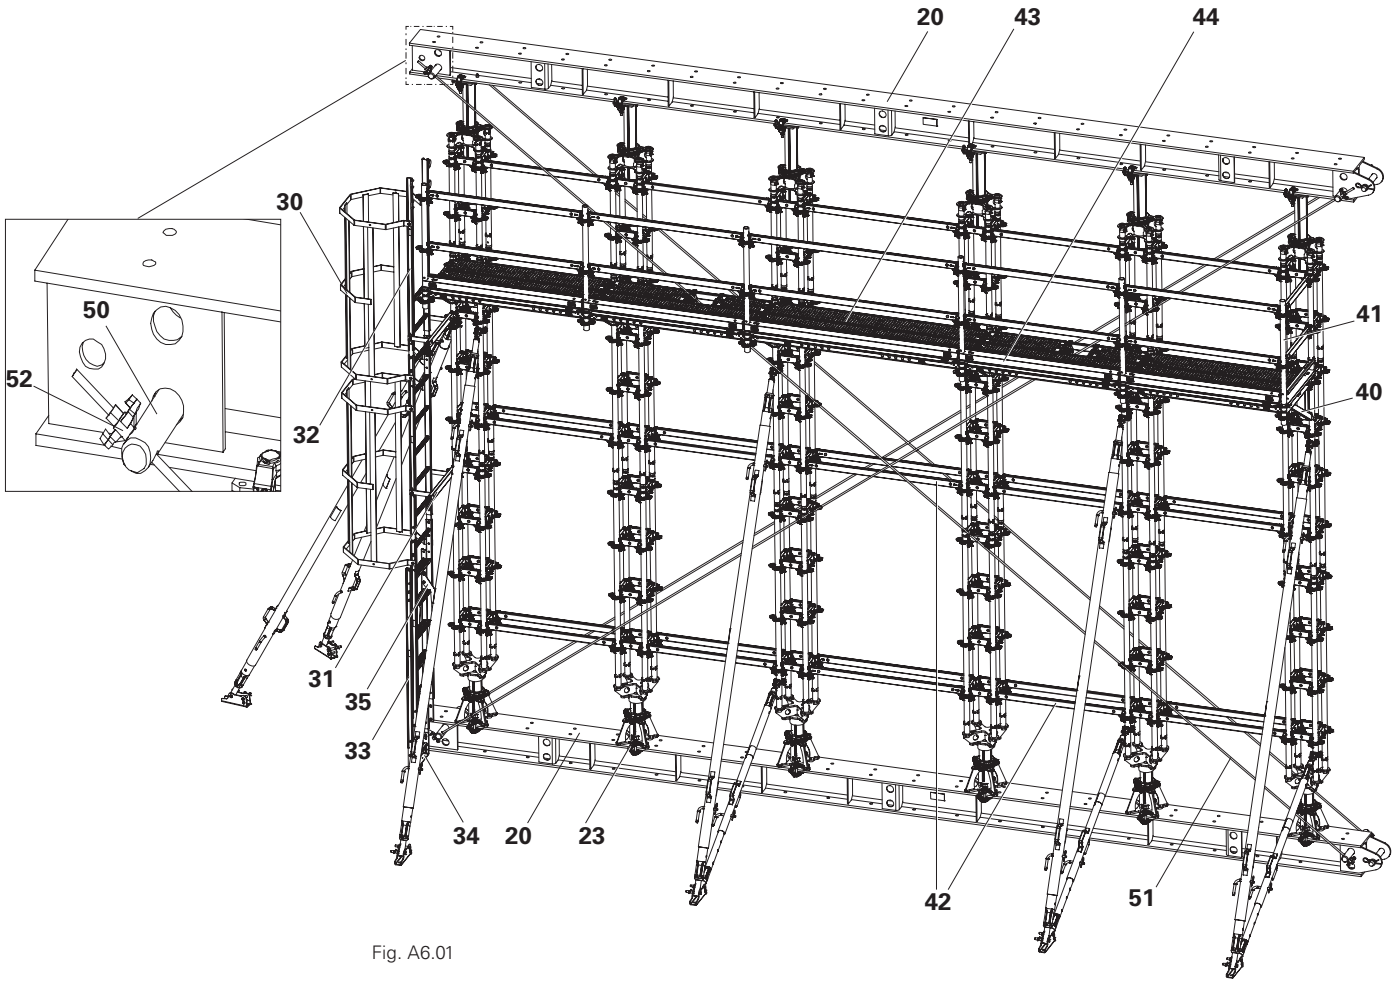



Fig. A6.01

## Ladder access

**Pre-assembly**
Assemble the Heavy-Duty Prop HD as an individual prop, as in Section A2.

**Assembly**
1. Fit Connector ULT 32 (**47**) into Console Bracket UCM 75 (**40**) with locking pin Ø 48/57 (**6**). (Fig. A6.02)
2. Fit Console Bracket UCM 75 (**40**) in the required position. (Fig. A6.03 + A6.04)

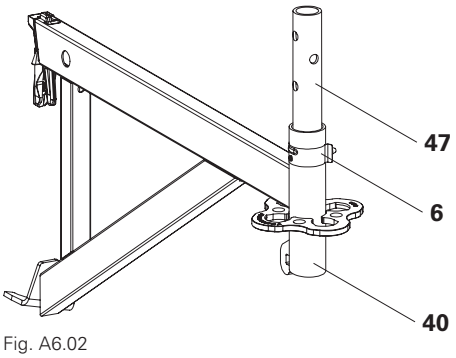
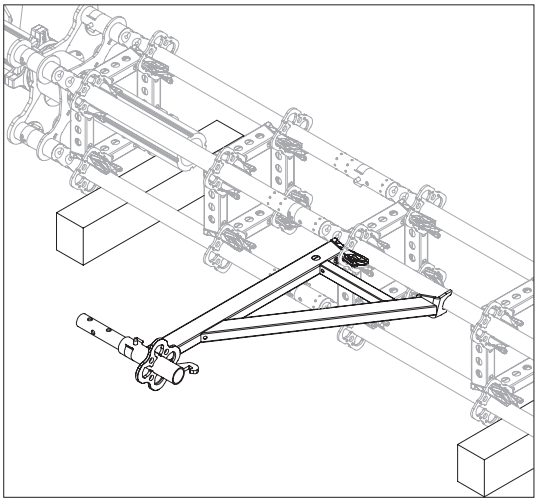
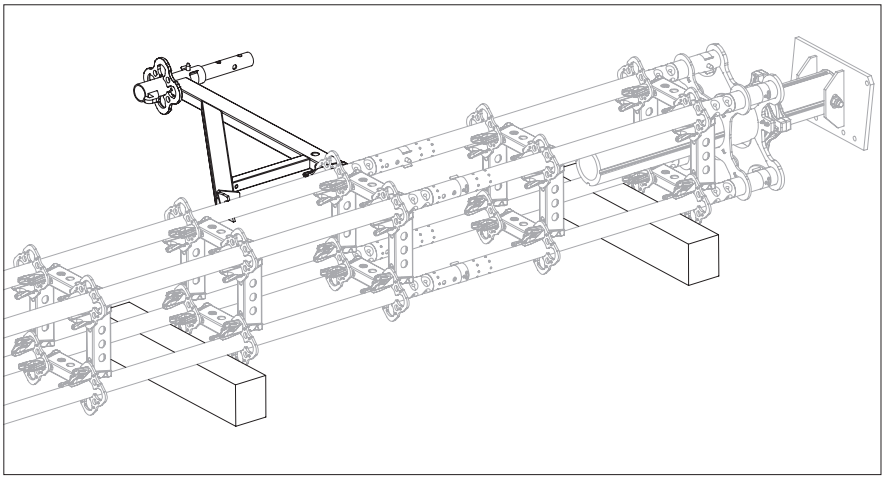


Fig. A6.02

- The assembly positions of the console brackets must be determined on a project-specific basis.
  Fit the first Console Bracket UCM 75 on the right leg of the first Heavy-Duty Prop HD.
- Fit additional
  Console Brackets UCM 75 on a project-specific basis, depending on the length of the decks on the respective left or right leg of the next Heavy-Duty Prop HD.

For assembly details, see the PERI UP Scaffolding Kit assembly instructions.


Fig. A6.03


Fig. A6.04

3. Insert the Top Standard UVH-2 100 (**41**) as a guardrail post into the Console Bracket UCM 75 (**40**) and secure it with locking pins Ø 48/57 (**6**). (Fig. A6.05)
4. Hammer the Ladder Connectors UAC-2 (**31**) into the rosettes of the standards. (Fig. A6.06 + A6.06a)

The assembly positions of the ladder connectors must be determined on a project-specific basis.

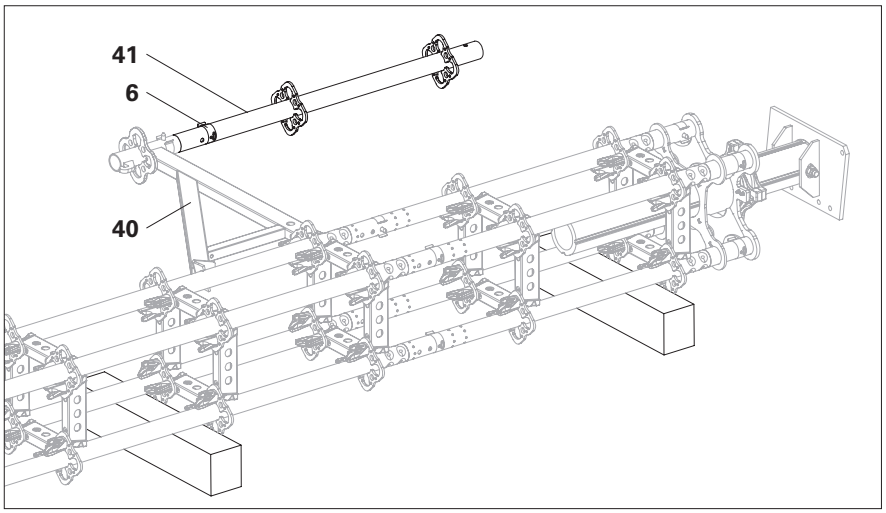



Fig. A6.05

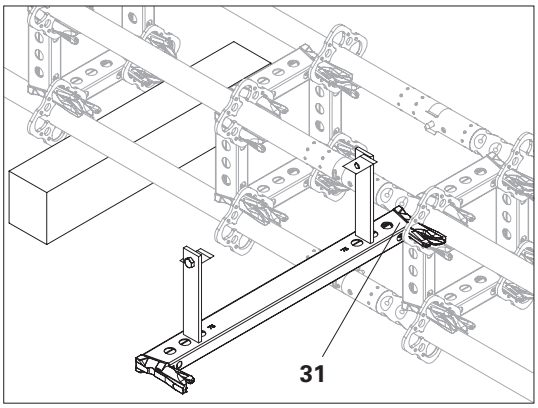



Fig. A6.06a

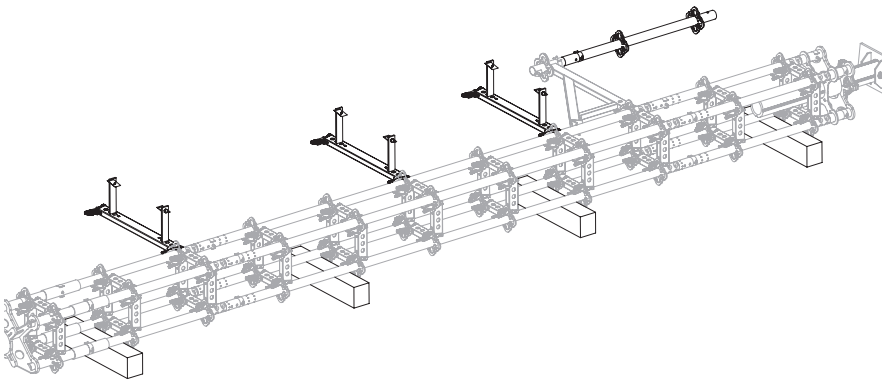


Fig. A6.06

# A6 Vertical assembly of the main beam frame

5. Pre-assemble the ladder from access ladder 180/2 (**32**) and ladder 180/6 (**33**) to required length. (Fig. A6.07)
6. Attach the ladder base (**34**) and ladder hook (**35**). (Fig. A6.08)
7. Secure the ladder to ladder connectors with the clamping plates (**33.1**). (Fig. A6.09a)
8. Attach the ladder cage (**30**) to the ladder with the clamping plates. (Fig. A6.09 and A6.09a)

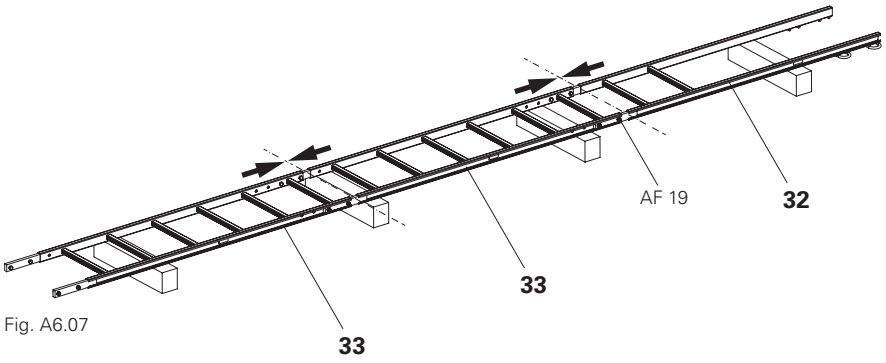


Fig. A6.07

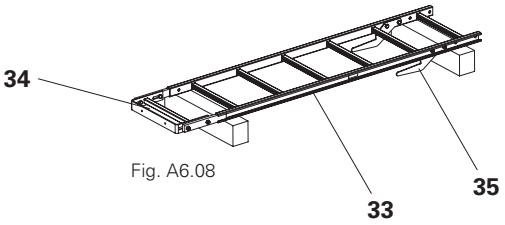


Fig. A6.08

- Do not attach the ladder cage in the area of the ladder joint.

- Is the contact surface of the clamping plates (**30.1/33.1**) in contact with the ladder profile? (Fig. A6.09a)
- Are the Top Standard UVH-2 100 (**41**) and the Console Bracket UCM 75 (**40**) tightly connected with the locking pin Ø 48/57 (**6**)? (Fig. A6.05)

For assembly details, see the PERI UP Scaffolding Kit assembly instructions.

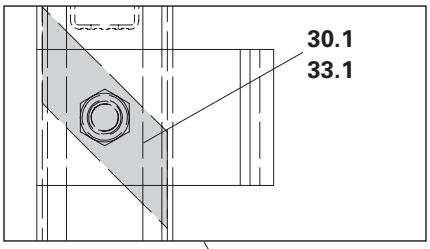


Fig. A6.09a

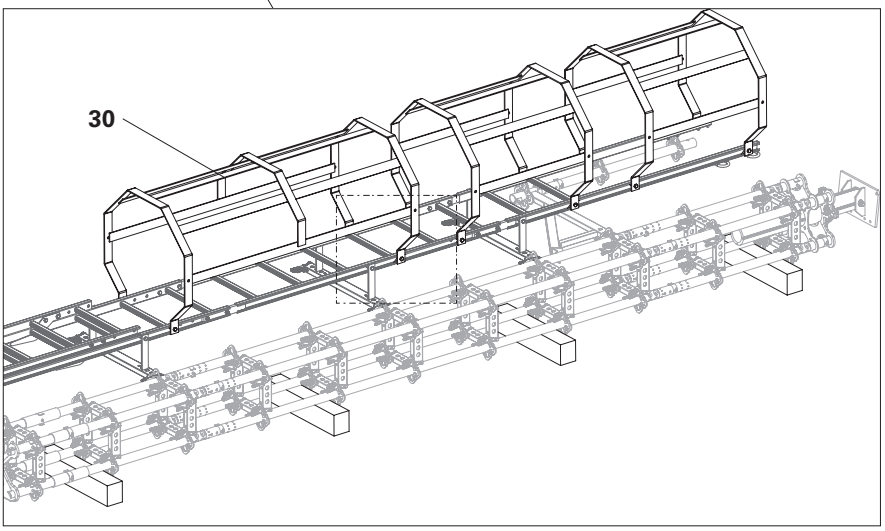


Fig. A6.09

## Main Beam HDT as base beam

- Secure lifting gear, e.g. chains or textile strapping, against slipping.
- The load transfer of the Main Beam HDT as base and top beams must be verified on a project-specific basis in each case.

**Assembly**

1. Before positioning the Main Beam HDT as a base beam, remove the bolts (**20.1**) (observe distance to existing components).
2. Place the base beam (**20**) on the place of use (foundation). The beam must rest fully on a level and load-bearing substrate.
3. Depending on the length, connect and secure base beam with bolts and cotter pins (**20.1 + 20.2**). (Fig. A6.10)

**Pre-assembly**

Pre-assemble the required number of individual props for the required height according to the instructions in Section A2.

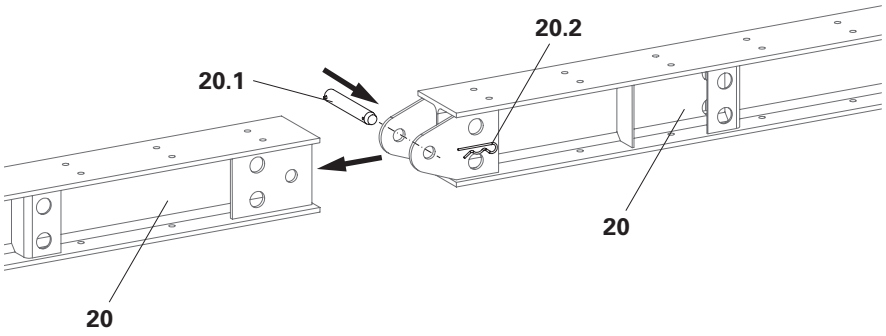



Fig. A6.10

## Lowering Jacks

### Assembly

1. Place the required number of Lowering jacks (**1**) on the Main Beam HDT (**20**). (Fig. A6.11)
2. Fix the first lowering jack with centring bolts (**21**) in the holes of the main beam and additionally secure with two opposing girder clamps (**23**). (Fig. A6.11a + A6.11b)
3. Secure further lowering jacks with diagonally opposing girder clamps.

- At a distance of 1 m, it is possible to centre in holes of the main beam. To do this, fit the lowering jacks, each rotated by 180°, and then secure them with two opposing girder clamps (**23**). (Fig. A6.12)

Measure the dimension e at the straight base edges of the lowering jack (Fig. A6.12)

The horizontal ledgers to be used determine the distance between the lowering jacks. See table. The maximum horizontal ledger length is 1.50 m. (Tab. A6.01)

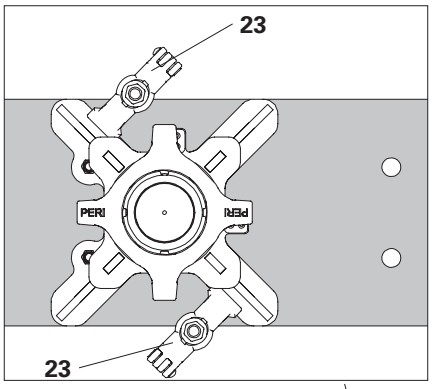



Fig. A6.11a

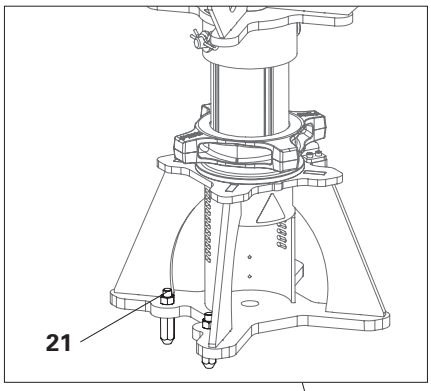



Fig. A6.11b

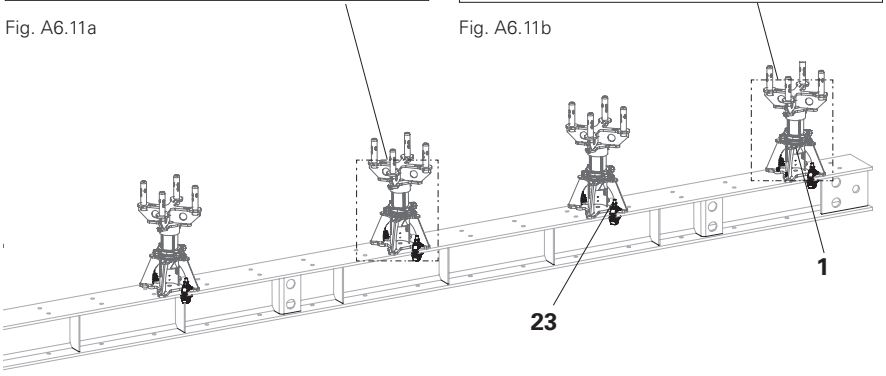



Fig. A6.11

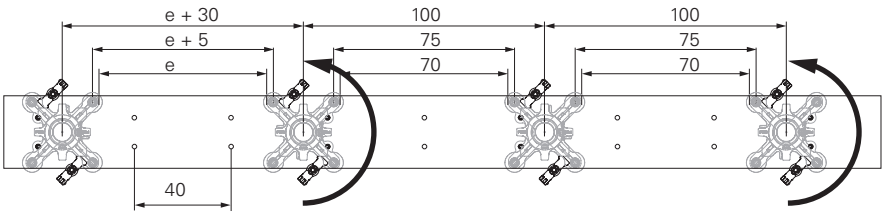



Fig. A6.12

| Spacing table | |
|---|---|
| Horizontal Ledger UH-2 (= e + 5) | Spacing “e” between the lowering jacks [cm] |
| 25 | 20.0 |
| 50 | 45.0 |
| 75 | 70.0 |
| 100 | 95.0 |
| 125 | 120.0 |
| 150 | 145.0 |

Tab. A6.01

## First Prop

1. For pre-assembly of the Heavy-Duty Prop HD, see Section A2 "Horizontal assembly of individual props".
2. Lift and position the first Heavy-Duty Prop HD with mounted ladder, Console Bracket UCM 75 and Top Standard UVH-2 100 as guardrail posts onto the first lowering jack using a crane. (Fig. A6.13)
3. Support the Heavy-Duty Prop HD with three Push-Pull Props for the assembly. (Fig. A6.14 + A6.14a) See Section A3 "Bracing with push-pull props".

Fit Push-Pull Props RS at the nearest possible position on the Heavy-Duty Prop HD below the Console Bracket UCM 75.



Fig. A6.13

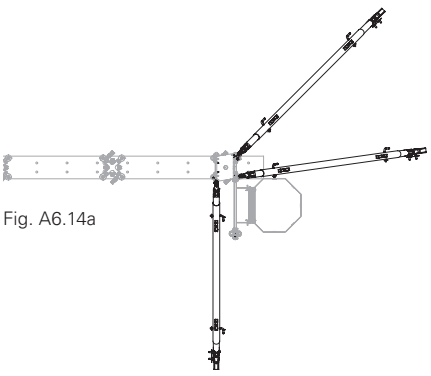


Fig. A6.14a



Fig. A6.14

## Additional props

**16** Horizontal Ledger UH-2
(as connecting ledger)
**12** Push-Pull Prop RS

**Assembly**

1. Lift and position the second Heavy-Duty Prop HD with mounted Console Bracket UCM 75 (**40**) and guardrail posts onto the second Lowering Jack with a crane. Leave the Heavy-Duty Prop HD suspended on the crane lifting gear.
2. First install horizontal ledgers (**16**) in the rosettes of the second level as an assembly aid (max. 1.50 m). Subsequently, the spacing of the horizontal ledgers (**16a**) at the top must not exceed 2.50 m. (Fig. A6.15) For more information see Section A6 "Work Platform".

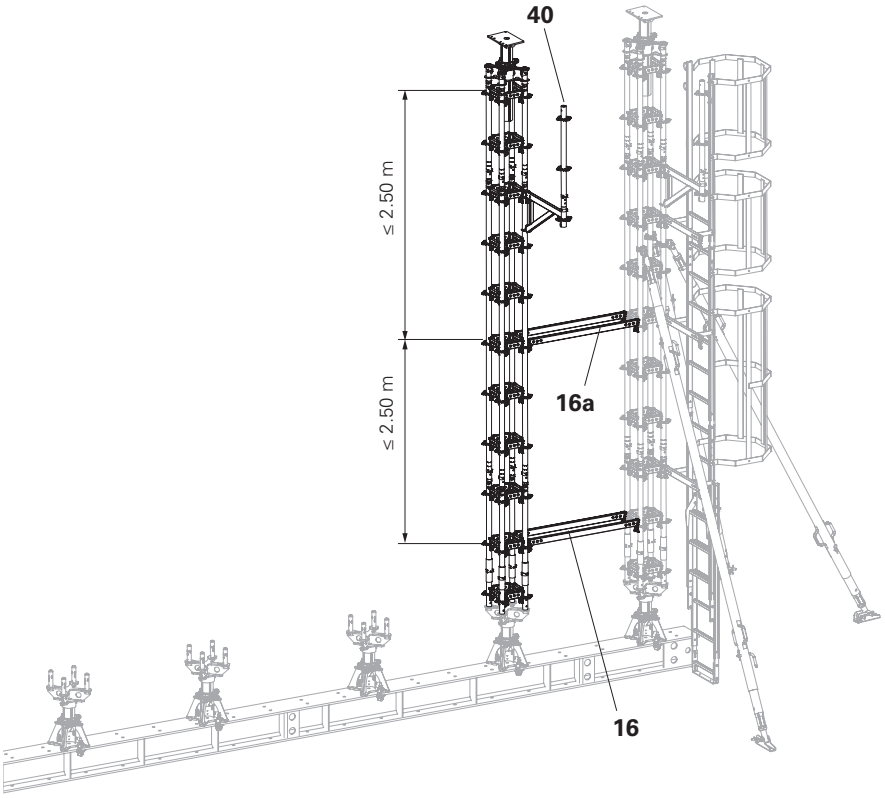



Fig. A6.15

3. Erect the third Heavy-Duty Prop HD. Fit a Push-Pull Prop RS (**12a**) to this and every second subsequent Heavy-Duty Prop HD. Fit Push-Pull Props RS at the nearest possible position on the Heavy-Duty Prop HD below the Console Bracket UCM.
4. Repeat steps 1. to 3. until the desired number of Heavy-Duty Props HD are installed on the main beam frame.
5. Always fit the final Heavy-Duty Prop HD in the main beam frame with push-pull props. (Fig. A6.16)

If Heavy-Duty Props HD are not fitted with centring pins, they must be supported with push-pull props (**12a**) and kicker braces (**12b**).

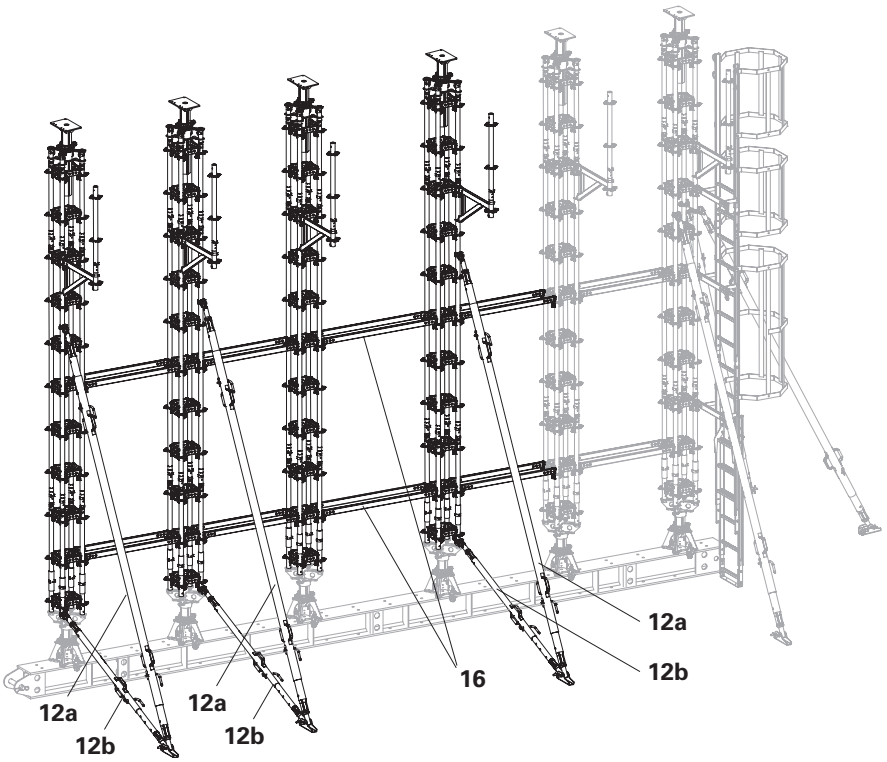



Fig. A6.16

## Work platform

### Components

**16** Horizontal Ledger UH–2
**43** Steel Deck UDG-2
**44** Steel Toe Board UPY

**Attachment points for PPE**
The rosettes (**5.1**) of the standards that are on the level of the work platform and only the Heavy-Duty Props HD that are held with at least one Push-Pull Prop RS. (Fig. A6.17 and Fig. A6.18)

**Assembly**
1. Attach the Steel Decks UDG-2 (**43**) to the pre-assembled Console Bracket UCM 75 (**40**).
2. Mount the horizontal ledgers (**16**) on the guardrail posts as anti-fall protection and attach the Toe Board Steel UPY (**44**) (Fig. A6.17)
3. Fit additional steel decks (**43**), horizontal ledgers (**16a**) and Toe Boards UPY (**44**). (Fig. A6.18) Leave recesses in the deck level for the diagonal bracing. Determine the position of the recesses on a project-specific basis. (Fig. A6.18a)

**Alternative**
- Assembly of a PERI UP Flex Working Scaffold.
- Lifting work platform.

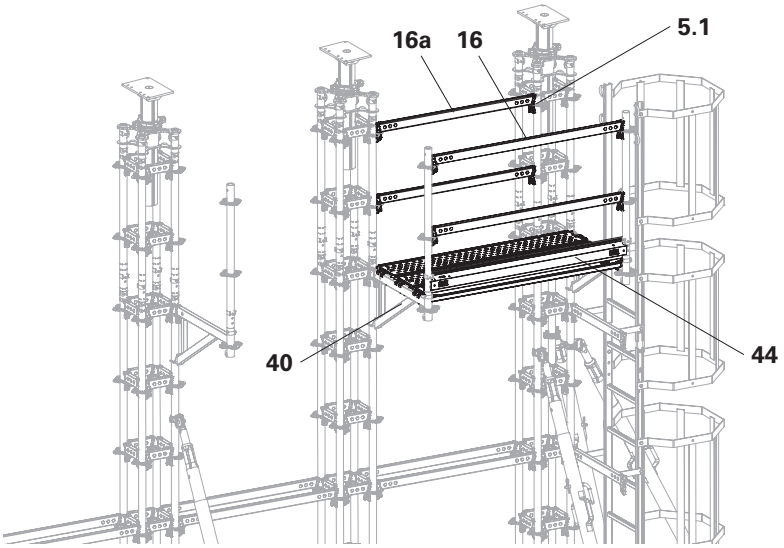


Fig. A6.17

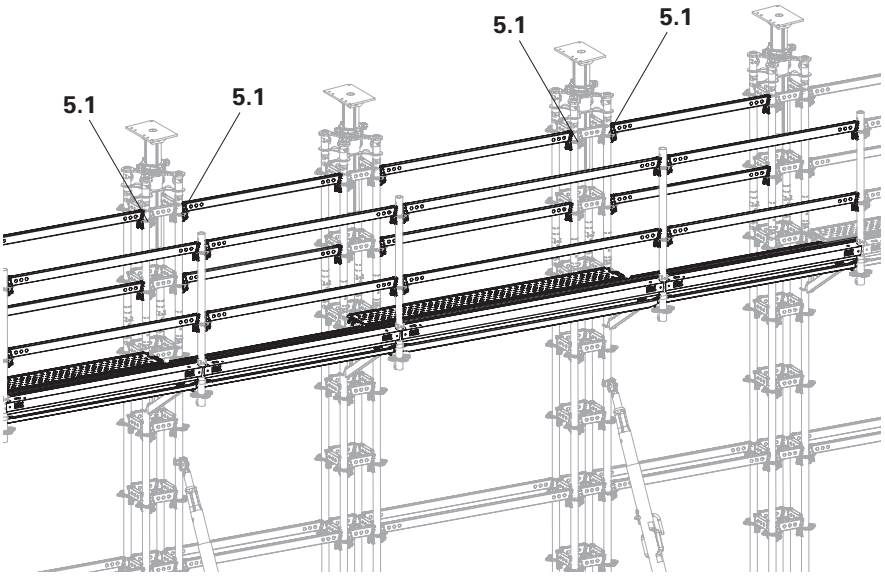


Fig. A6.18

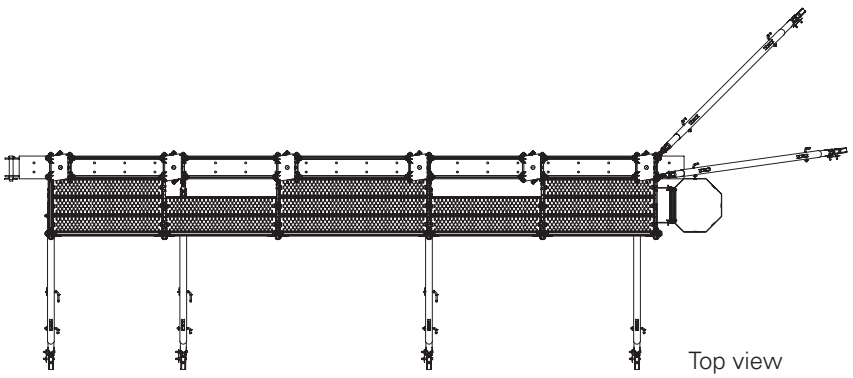


Fig. A6.18a

## Forming recesses in the decks

### Components

**16** Horizontal Ledger UH–2
**43** Steel Deck UDG-2
**44** Steel Toe Board UPY
**45** Deck Traverse UDT 25
**47** Inside Corner Plate EDP

If a work platform is mounted on the main beam frame, two recesses must be made for the tie rods. The position of the recesses must be planned specifically for the project.

### Assembly

1. As far as possible, line the bay concerned with Steel Decks UDG-2 (**43**).
2. Between the adjacent heavy duty props, fit a steel deck (**43a**) to existing horizontal ledgers (**4**).
3. Fit one Deck Traverse UDT 25 (**45**) to the right and one to the left of the required recess. (Fig. A6.19a)
4. Attach two steel decks (**43b**), tailored to the remaining length, to console bracket (**40**) and deck traverse (**45**). Use additional cover plates, for example Inside Corner Plate EDP (**47**), to suit the positioning.

For further options for closing gaps in the decking, see the assembly instructions for the core components of the scaffolding kit.

→ The work platform is ready.

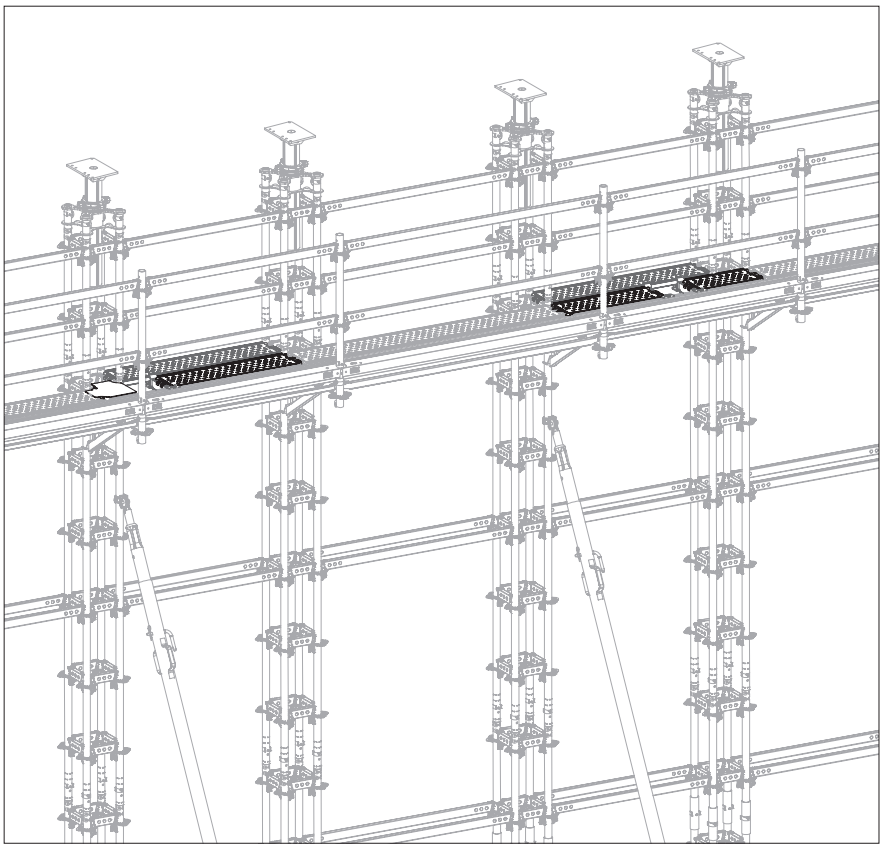


Fig. A6.19

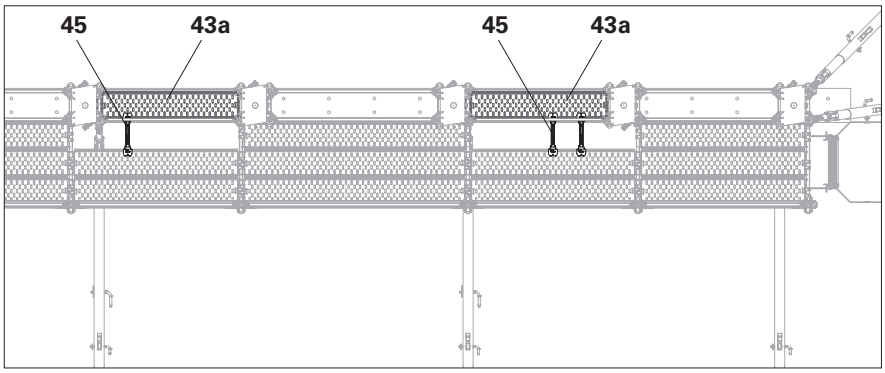



Fig. A6.19a

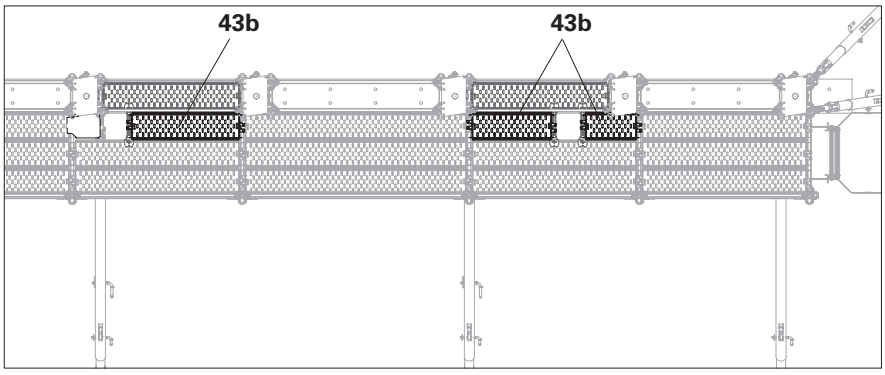



Fig. A6.19b

**Head spindles**

- First and last Heavy-Duty Props HD with Push-Pull Prop RS (**12**) as primary props: spindle out head spindle approx. 10 mm above the specified dimension. In this way, the target dimension can be conveniently set by way of spindling with the main beam resting on top.
- Other Heavy-Duty Props HD as intermediate props: head spindles remain 50 mm below specified dimension.

The Main Beam HDT is first placed on the primary props to ensure that the mounting process is secure. See Section A6 "Top beam".

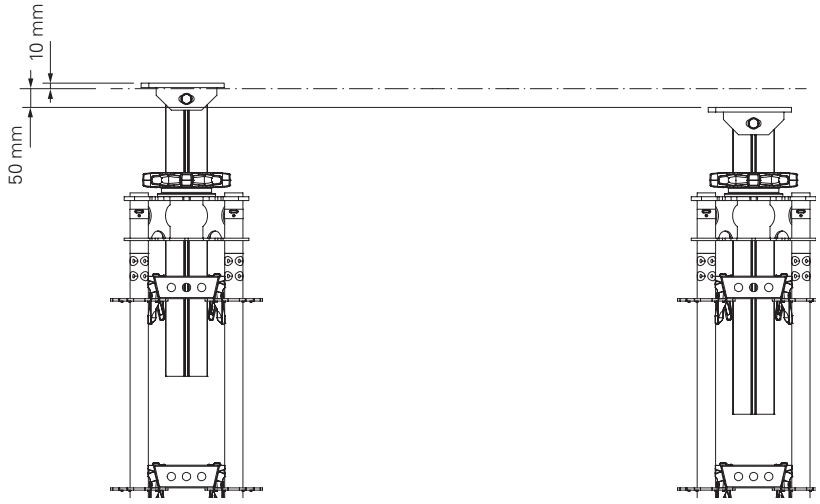



Fig. A6.20

**Articulated head plates**

To secure the position of the Main Beam HDT (**20**), 2 centring bolts (**21**) are fitted in each of the articulated head plates (**7.1**) of the head spindles.

If possible, use the inner holes (**7.2**) of the articulated head plate and centre it via the holes in the main beam (**20.3**). (Fig. A6.21a + A6.22a)

If the layout of the heavy-duty props does not allow this, then screw the centring bolts into the lateral holes (**7.3**) of the articulated head plates and centre the main beam in this way (**20.4**). (Fig. A6.21 + A6.22)

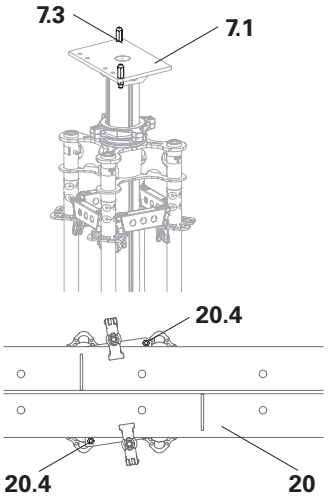



Fig. A6.21

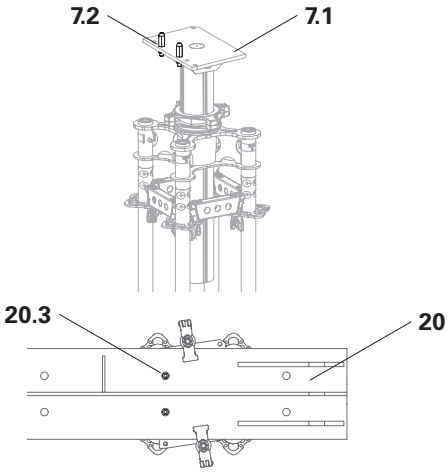



Fig. A6.21a

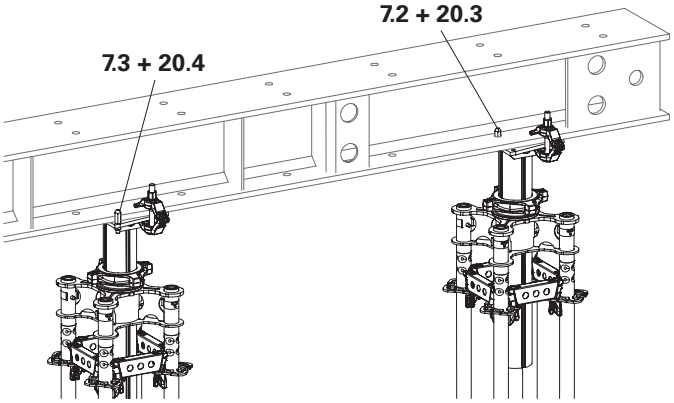



Fig. A6.22

Fig. A6.22a

## Top beam

The Main Beam HDT is used as the top beam.

- The load transfer of the Main Beam HDT as base and top beams must be verified on a project-specific basis in each case.
- To fit the top beam safely, install a work platform with access point. See Section A6 "Work platform". Alternatively:
  – Assembly of a PERI UP Flex Working Scaffold.
  – Cherry picker.

### Components

| | |
|---|---|
| **10** | Heavy-Duty Prop HD |
| **20** | Main Beam HDT |
| **21** | Centring bolts |
| **23** | Girder Clamp HD 70 |

### Assembly

1. Attach the main beam (**20**) with a round sling to prevent it from slipping.
2. Place the Main Beam HDT on the primary props (**10a**). (Fig. A6.23)
3. Centre the articulated head plate with the main beam using the centring bolts (**7.2**).
4. Fix the main beam to the articulated head plate with girder clamps (**23**). (Fig. A6.23a - A6.23c)
   Level the head spindles (**7a**) of the primary props to the target dimension.
5. Spindle the head spindles (**7b**) of the intermediate props up to the Main Beam HDT (**20**).
6. Centre the articulated head plates with the centring bolts (**7.3**).
7. Fix the main beam to the articulated head plate with girder clamps (**23**). (Fig. A6.23a - A6.23c)

→ The main beam is mounted.

8. Undo the round sling.

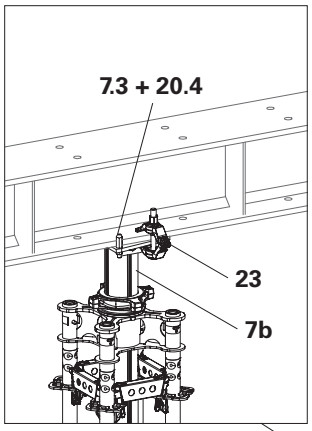



Fig. A6.23a

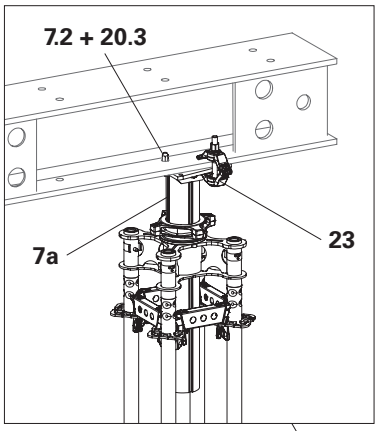



Fig. A6.23b

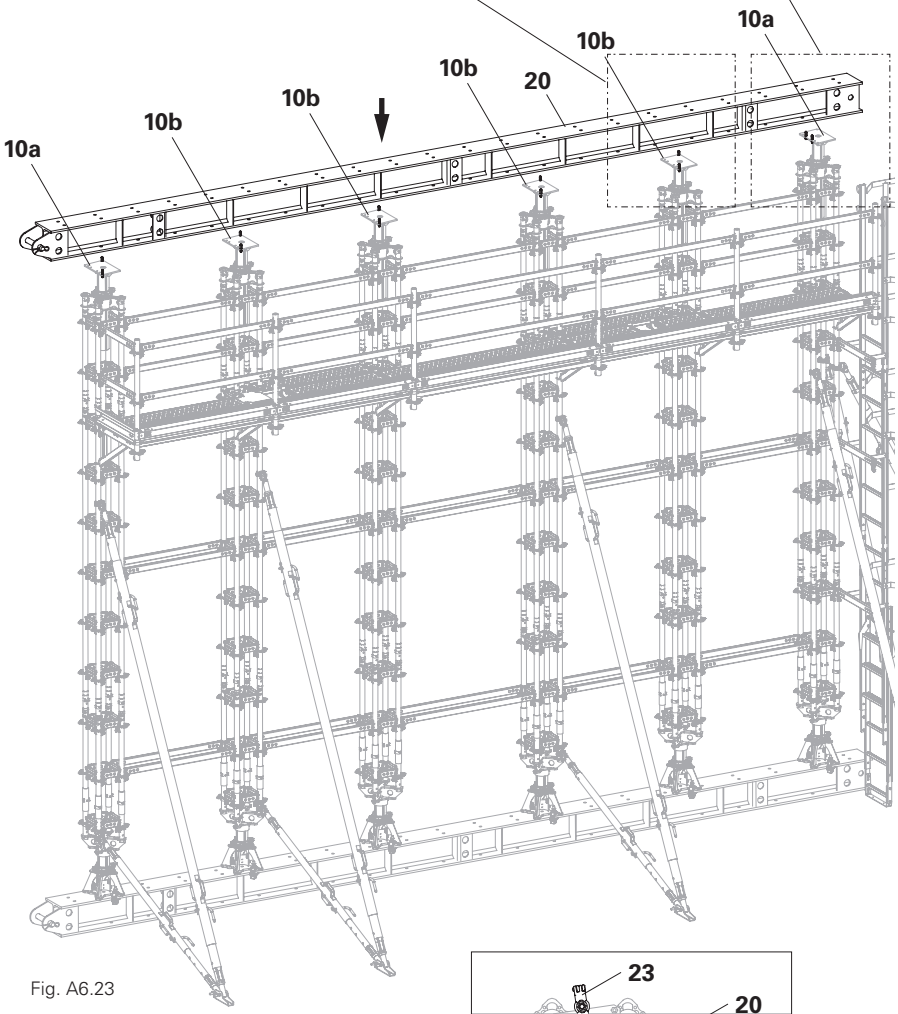



Fig. A6.23

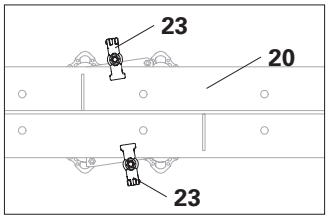



Fig. A6.23c

## Diagonal bracing

Before positioning cross girders or prefabricated girders, fit horizontal bracing in the transverse direction of the main beam frame as statically required.

Mount diagonal bracing on both sides of the main beam frame to stabilise and transfer horizontal loads (Fig. A6.24)

**Components**

**50** Double Tie Yoke HDD
**51** Tie Rod DW 15
**52** Wing Nut DW 15
**53** Cam Nut DW 15

**Assembly**

1. Insert the double tie yoke (**50**) into the main beams and ensure symmetrical overlap on both sides.
2. Insert Tie Rod DW 15 (**51**) diagonally on both sides. (Fig. A6.24a)

In each case, the change in length of the Tie Rod DW 15 must be statically checked. If necessary, use Tie Rod DW 20.

3. Ensure uniform tensioning using a wing nut or cam nut (**53**).

→ The diagonal bracing is now completed.

→ The main beam frame is ready.

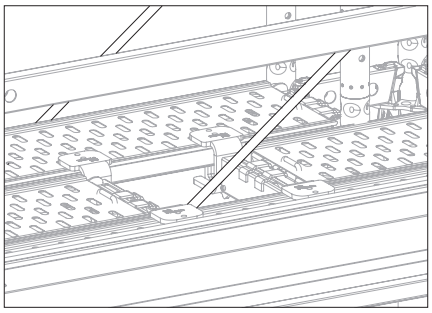


Fig. A6.24b

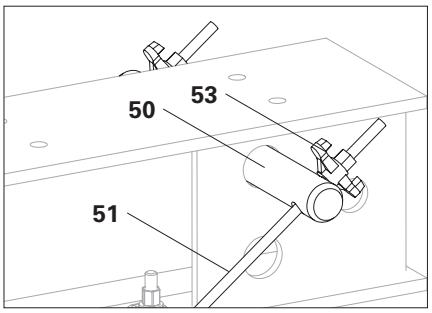



Fig. A6.24a

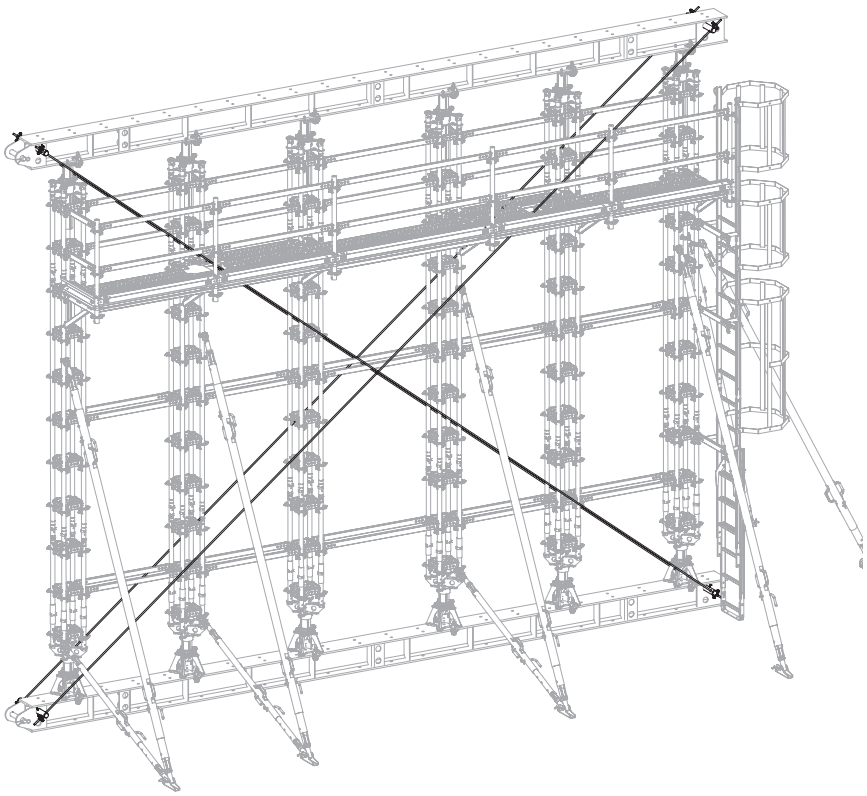


Fig. A6.24

# A7 Dismantling the main beam frame vertically

**Warning**

Parts may fall off at any time in the dismantling process. These could strike people and seriously injure them.

⇒ Cordon off the area below the working area.

⇒ Dismantling is carried out from a safe working position, e.g. using the PERI UP Flex Working Scaffold.

⇒ Remove loose parts immediately or secure them against falling.

## General information

- Lower the prop segments evenly as described in Section A5 to prevent overloading of the individual props.
- A project-specific lowering plan must be prepared for each dismantling operation. The described procedure must be followed.
- Retract the push-pull props (**12**) while the lowering process is being carried out in order to maintain the vertical alignment of the main beam frame.

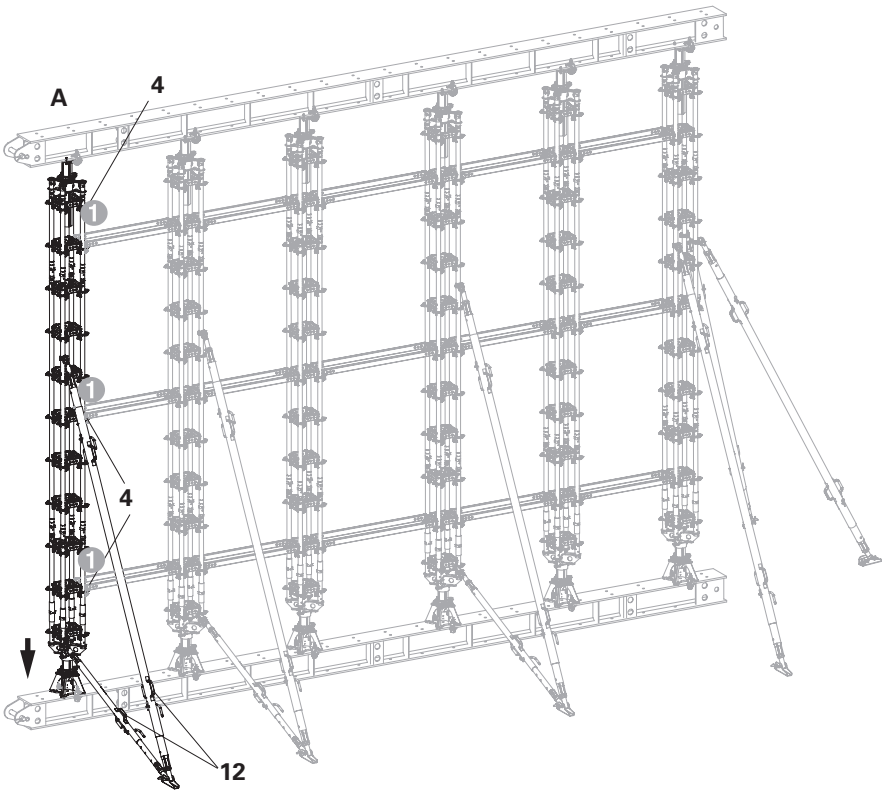



Fig. A7.01

# A7 Dismantling the main beam frame vertically

## Positioning free of any load

The lowering sequence described in the lowering plan must be adhered to. The sequence described is exemplary.

1. Remove the diagonal bracing.
2. Release the wedges ❶ of the Horizontal Ledgers UH-2 on the side of the Heavy-Duty Prop HD (**A**) being lowered.
   Do **not** release wedges ❷.
3. Lower the Heavy-Duty Prop HD (**A**). (Fig. A7.01)
4. Release wedges ❸.
   Do **not** release wedges ❹.
   Lower the Heavy-Duty Prop HD (**B**).
   → Horizontal ledger ❶ is lowered back onto the rosettes of Heavy-Duty Prop HD **A**
5. Hammer wedges ❶ into place. (Fig. A7.02)
6. Release wedges ❺.
   Do **not** release wedges ❻.
   Lower the Heavy-Duty Prop HD (**C**).
   → Horizontal ledger ❸ is lowered back onto the rosettes of Heavy-Duty Prop HD **B**
7. Hammer wedges ❸ into place.
8. Lower the other heavy-duty props in the same way.
9. Adjust the extension length of the push-pull props.
10. Repeat steps 2-8 until the main beam frame is free of any load.

(Fig. A7.03)

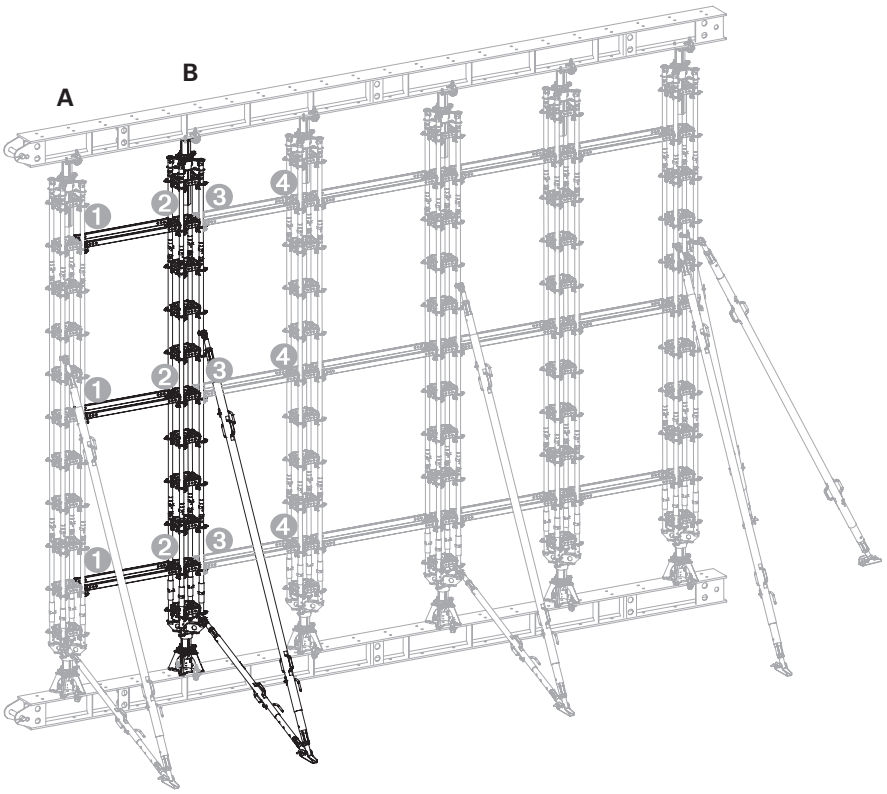



Fig. A7.02

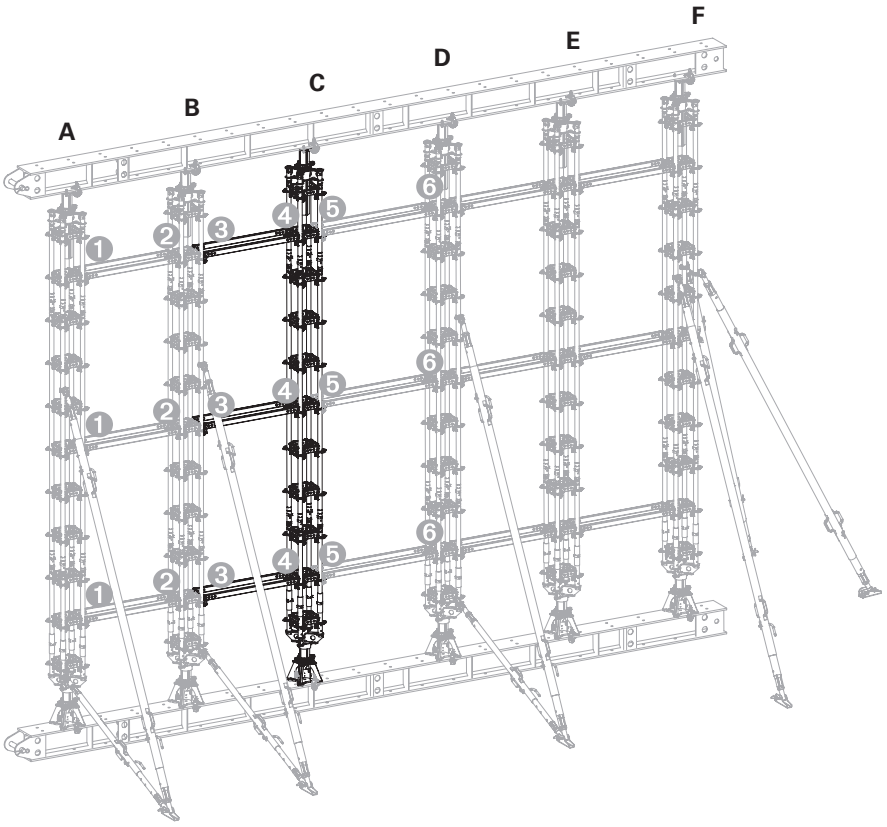



Fig. A7.03



Fig. A7.04

# A7 Dismantling the main beam frame vertically

## Lowering

1. Remove the Girder Clamp HD 70 (**23**) from the Head Spindle TR 110-80/55 (**7**) of the heavy-duty props **B** to **E.**
2. Unscrew the head spindles with the spindle nut (**7.1**) until there is sufficient clearance for disassembly.
3. Lower heavy-duty props **A** and **F** at the head spindles. (Fig. A7.05a)

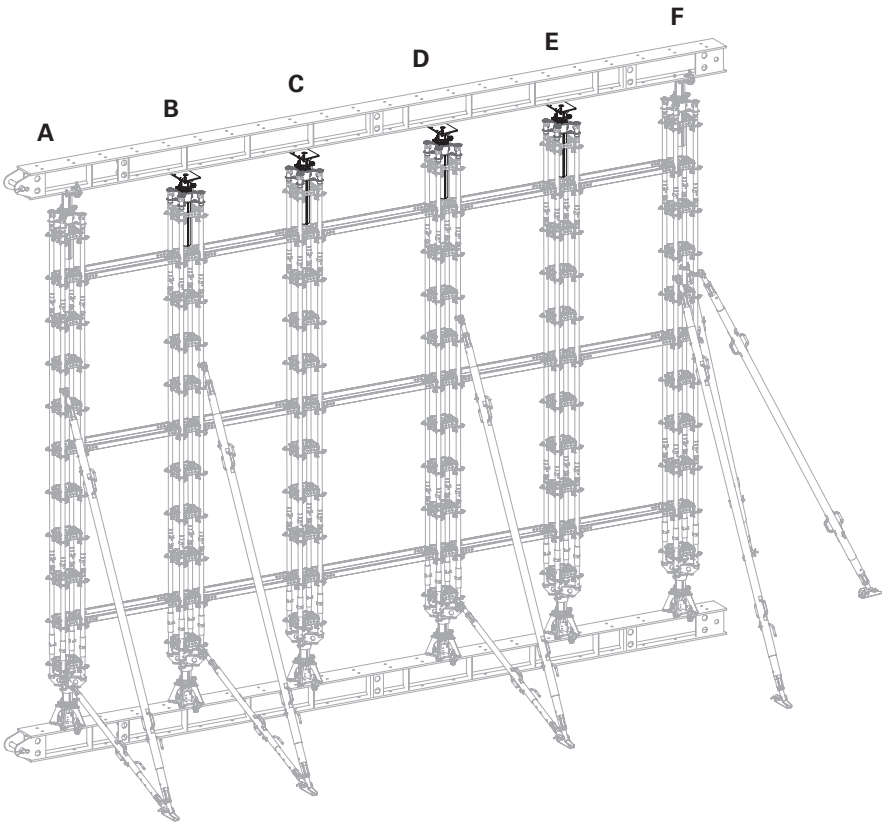



Fig. A7.05

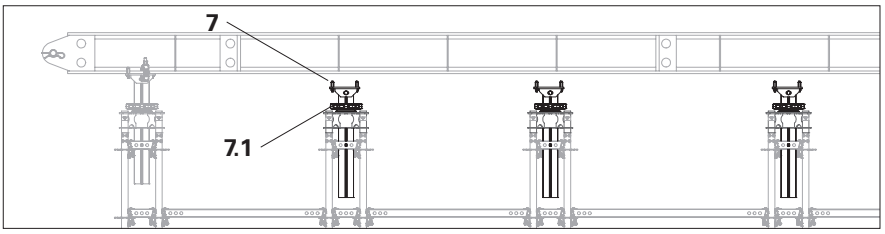



Fig. A7.05a

# A7 Dismantling the main beam frame vertically

## Removing the cross girders

Before removing the cross girders, first remove the formwork (**70**).
If it is not possible to remove the cross girders directly under the supporting structure, the trolley (**25**) can be used.

Always use two trolleys at the same time!

### Components

**25** The trolley consists of:
**25.1** Cross tube
**25.2** Longitudinal profiles
**25.3** Lever
**25.4** Cam nut
**22** Cross girder

### Assembly

1. Remove cross tube (**25.1**) from the trolley (**25**). (Fig. A7.07)
2. Push the trolley (**25**) under the cross girder (**22**) onto the Main Beam HDT (**20**) and fix the cross tube (**25.1**).
3. Tighten the cam nuts (**25.4**) evenly until the longitudinal profiles (**25.2**) are in contact with the cross girder (**22**). (Fig. A7.08)

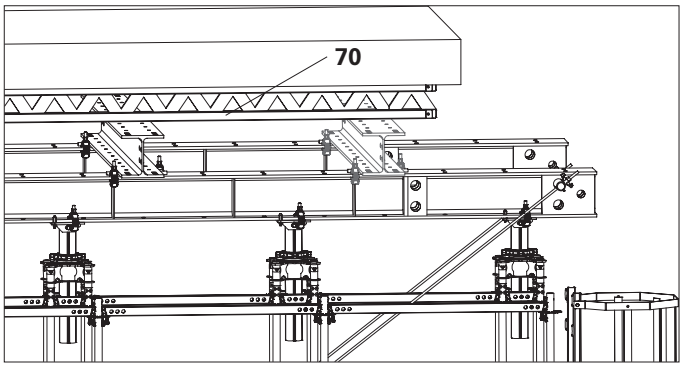



Fig. A7.06

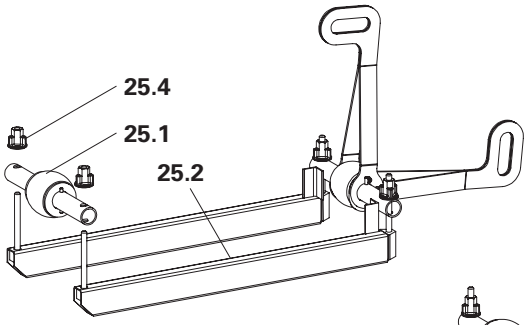



Fig. A7.07

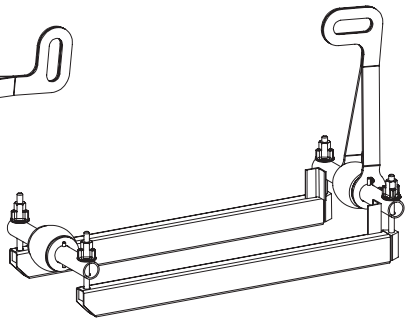


Fig. A7.07a

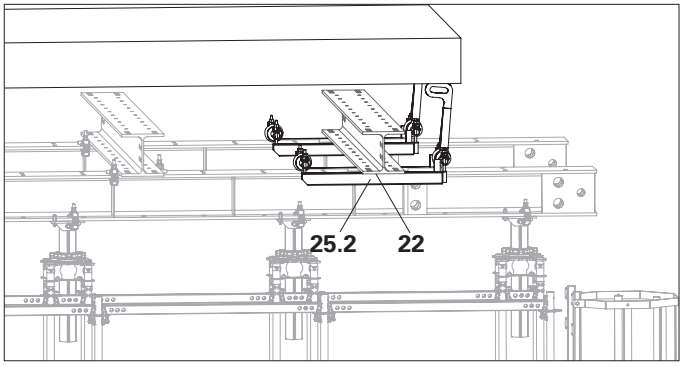



Fig. A7.08

**Moving the cross girders**

## Warning

When the cross girders are moved out, pinch points are formed on all moving parts. Hands can get trapped, resulting in serious injuries.

⇒ Move the trolley by the handle only.
⇒ Keep your hands away from the girders and the trolley.
⇒ Do not reach between the main beam and the cross girder.
⇒ Be mindful of other people.
⇒ Stop the procedure by lifting the lever upwards.

1. Push the lever (**25.3**) downwards, the cross girder (**22**) is then lifted by approx. 5 mm.
2. If installed, remove centring rails (**24**). (Fig. A7.09)
3. Extend the cross girders on the Main Beams HDT (**20**).
4. At the end position, swivel the lever (**25.3**) upwards to lower the cross girder again. (Fig. A7.09a)
5. Remove the trolley and remove the cross girders, for example with a crane.

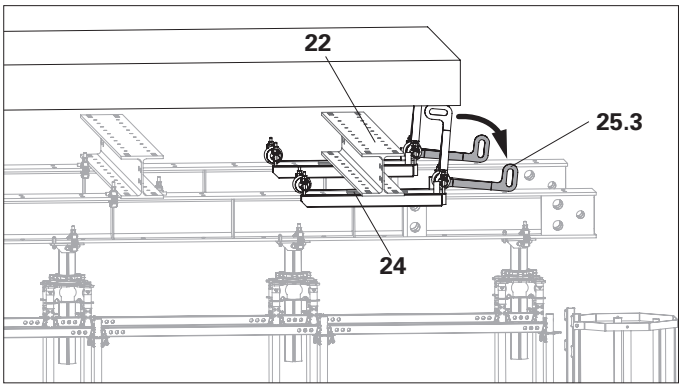



Fig. A7.09

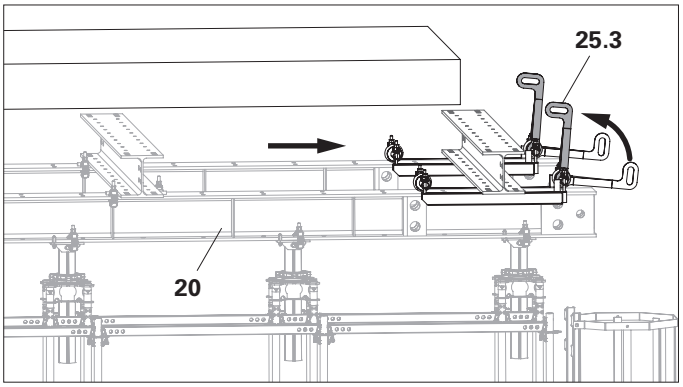



Fig. A7.09a

# A7 Dismantling the main beam frame vertically

## Removing the top beam

1. Attach the top beam (**20**) securely to a crane or other lifting device and take up the load with the lifting device.
2. Remove Girder Clamps HD 70 (**23**).
3. Lift the top beam away.

## Removing the main beam frame

**Warning**

The main beam frame may topple over if the dismantling sequence is incorrect. This could seriously injure people or result in fatalities.

⇒ Follow the dismantling sequence from A to F.

⇒ Do not remove push-pull props until the relevant heavy-duty prop is securely attached to the crane.

⇒ Use the work platform as a safe access point and remove the props one by one. Ensure that there is front-side protection.

1. Attach Heavy-Duty Props HD around Head Spindle TR (**2**) with round slings to prevent slipping and take up the load with the lifting device. (Fig. A7.10)
2. Remove the Push-Pull Props HD.
3. Only remove the horizontal ledgers (**16**) to which the heavy-duty prop being removed is directly connected.
4. Dismantle the work platform, ensuring that there is front-side protection.

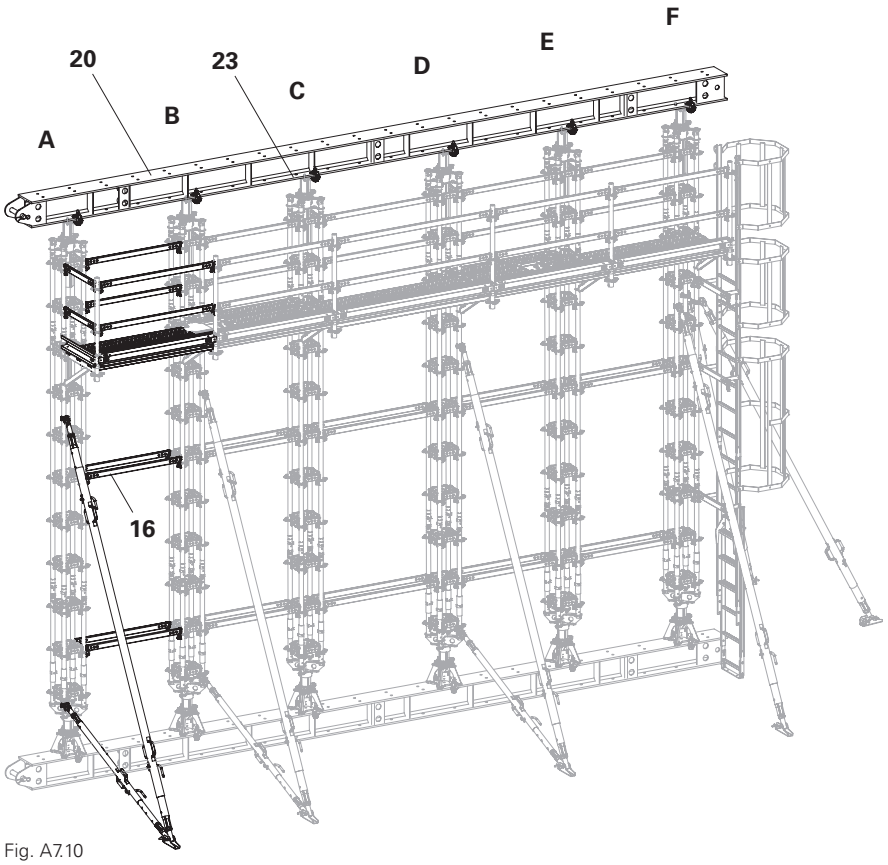



Fig. A7.10

# A7 Dismantling the main beam frame vertically

5. Lift the Heavy-Duty Prop HD and set it down. (Fig. A7.11)
6. Remove both girder clamps (**23**) from the lower Main Beam HDT (**20**).
7. Remove each lowering jack.
8. Remove the other heavy-duty props in the same way.

The dismantling of the Heavy-Duty Props HD is described in Section A4 "Horizontal Dismantling".

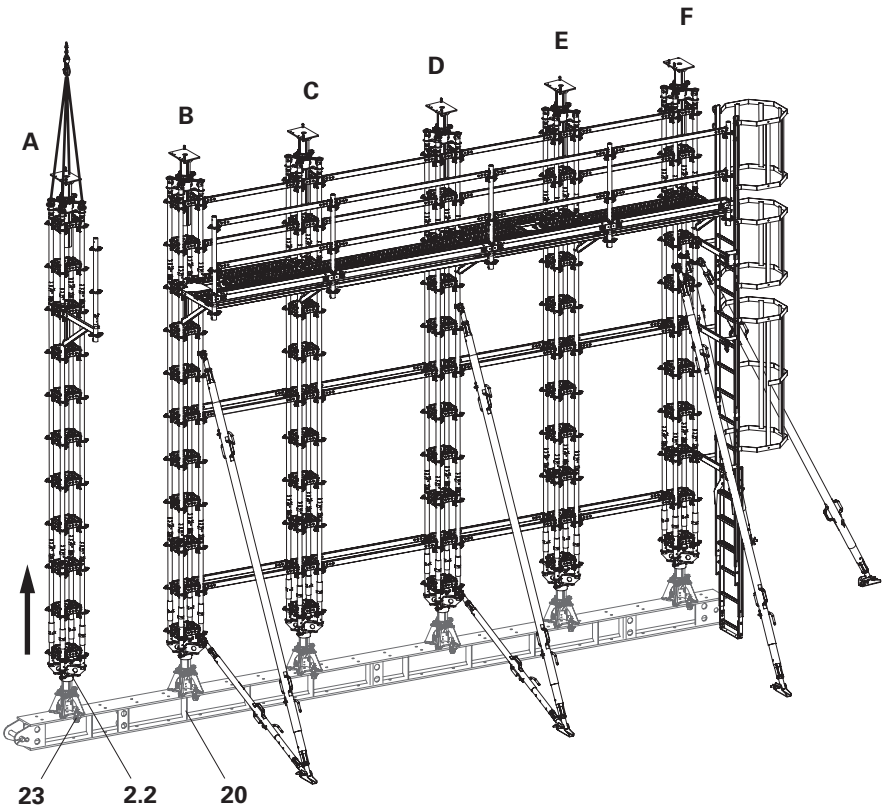



Fig. A7.11

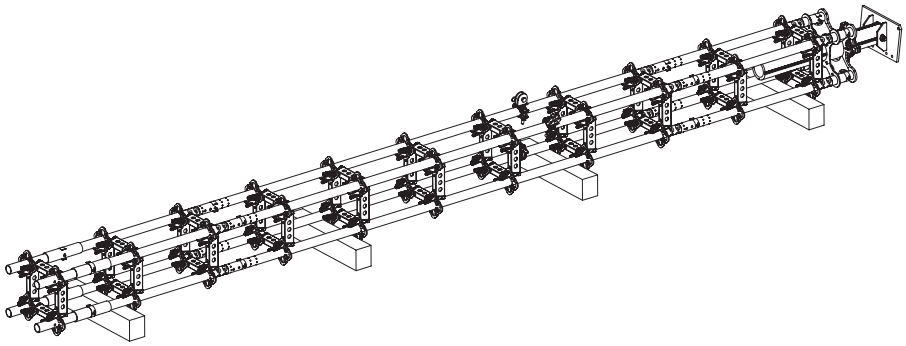


Fig. A7.11a

## Load transfer

Always transfer loads centrally to the main beam!

Fit the centring rails (**24**) between the Main Beams HDT (**20**) and the cross girders (**22**). (Fig. B1.01a - B1.01d) Check the right angle between the centring rail (**24**) and cross girder (**22**).

## Horizontal Loads

- Do not transfer horizontal loads onto the Heavy-Duty Props HD! Transfer the loads from top girder level directly to suitable structural components!
- The girder clamps (**23a + 23b**) are positional restraints for the cross girder.
- Do not clamp the upper main beam flanges and lower cross girder flanges together with girder clamps (**23a + 23b**). Only ever fit clamps next to them!

(Fig. B1.01a - B1.02a)

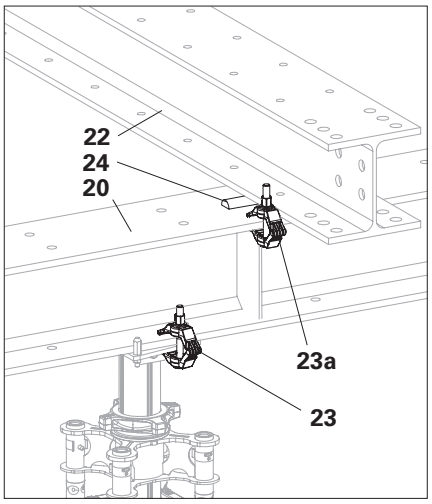



Fig. B1.01a

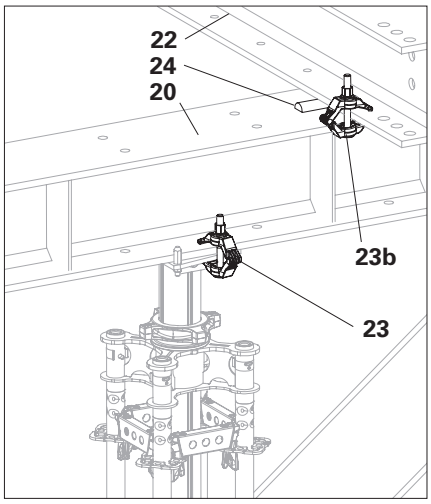



Fig. B1.01b

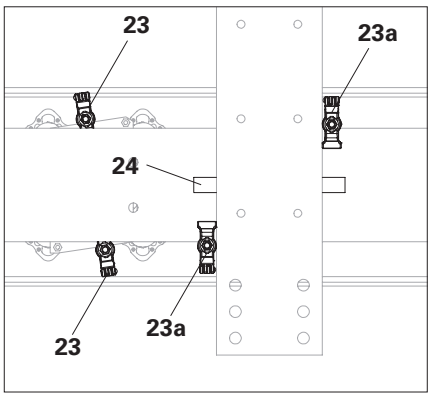



Fig. B1.01c

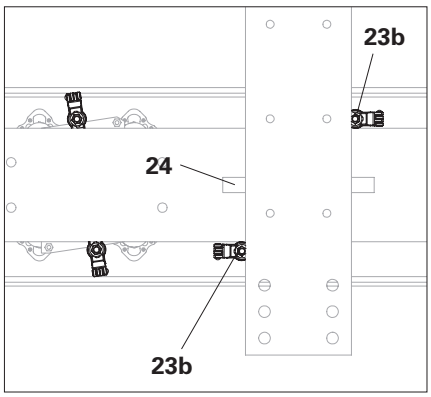



Fig. B1.01d

**General information**
Bracing consisting of Tie Rods DW 15 (**51**) is used to transfer horizontal loads to main beam frames and to stabilise Heavy-Duty Props HD.

**Horizontal loads from cross girders**
Transfer horizontal loads by means of friction and girder clamps (**23a + 23b**) onto the top beam.

**Horizontal loads at the level of the main beam frame**
Transfer horizontal loads from the main beam to the base beam via diagonal bracing (**55**) consisting of DW 15 Tie Rods (if necessary DW 20).
From here, transfer the load into the substrate via friction or built-in parts and foundations. (Fig. B1.02)

**Installation of Girder Clamps**
For transferring horizontal loads:
- Longitudinally to the Main Beam HDT (**20**).
  - Girder clamp (**23a**).
- Laterally to the Main Beam HDT.
  - Girder clamp (**23b**).

(Fig. B1.01a - B1.02a)

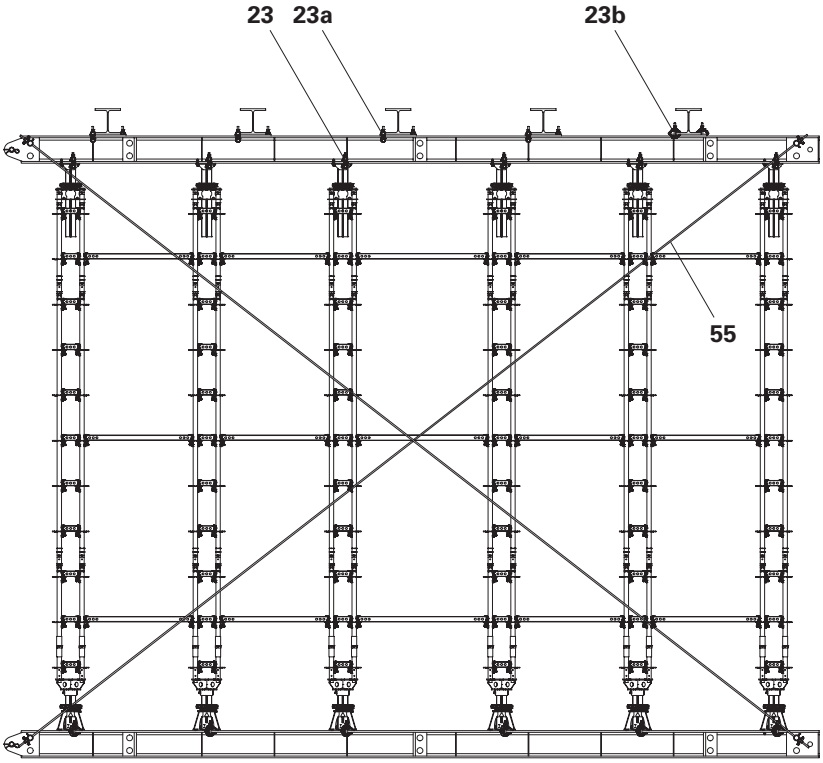


Fig. B1.02

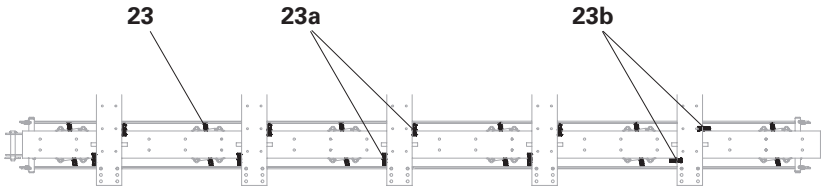


Fig. B1.02a

Forces perpendicular to the level of the main beam frame are transferred directly from the Main Beam HDT (**20**) onto existing components, e.g. abutments.
(Fig. B1.04)

Tipping risk!
Push-Pull Props do not carry horizontal loads! They are only assembly aids!

Built-in parts must be planned during the production of the abutment.

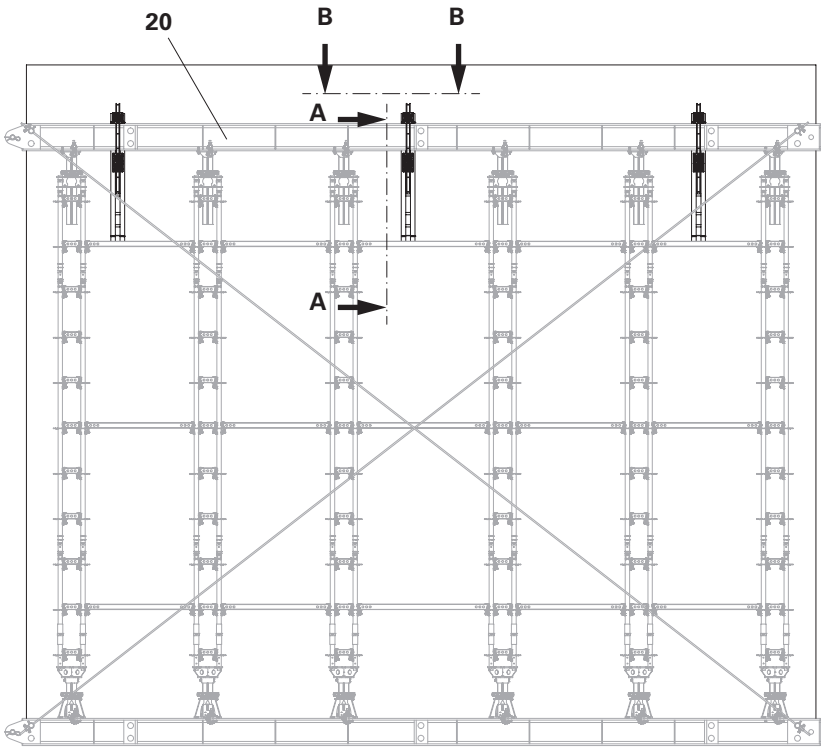



Fig. B1.03

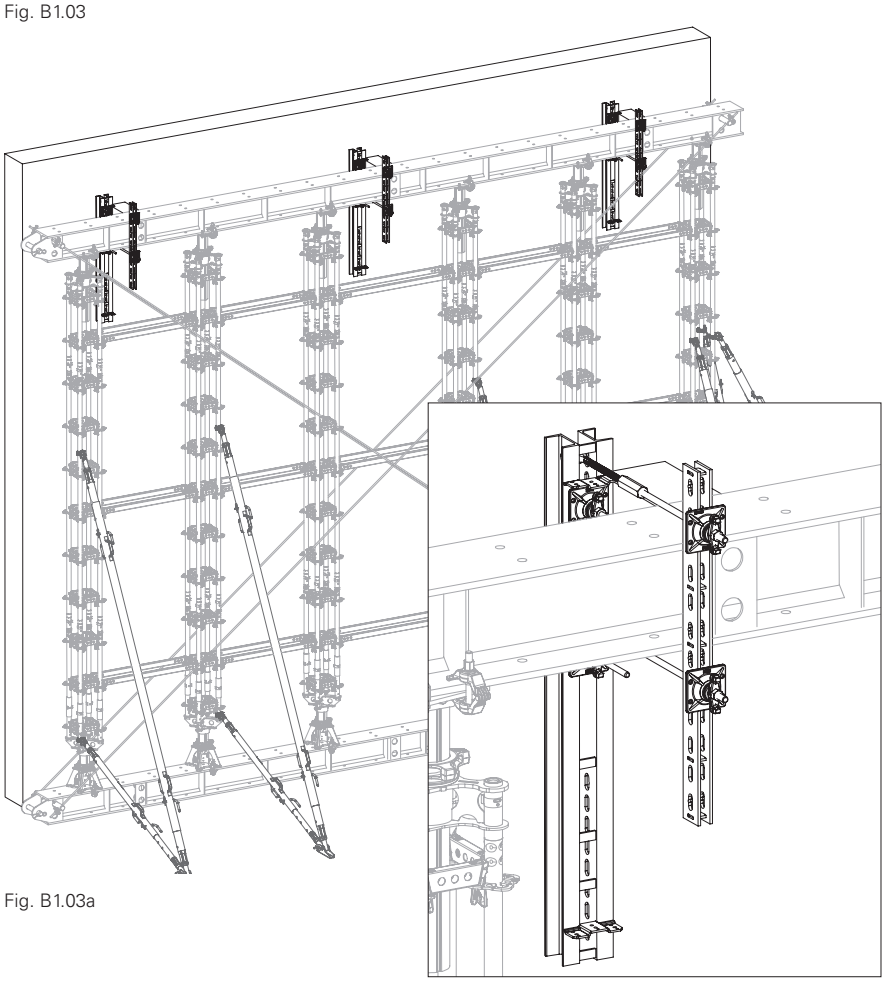


Fig. B1.03a

**Examples**
Tensile and compression-proof connection
According to structural analysis with Tie Rods DW 15 and, for example, Anchor Sleeve M24 (variant A) or via existing tie holes (variant B).

**Components**

**60** Steel Waler SRZ U100
**61** Column Tie Yoke DW 15
**62** Hex Nut DW 15 AF 30/108
**63** Tie Rod DW 15
**64** Coupling VKZ 99
**65** Wingnut Pivot Plate DW 15
**66** Squared timber (on site)
**67** Nut M20-8, galv.
**68** Screw M20 x 100-8.8, galv.
**69** Anchor Sleeve DW 15

**Fixing to an existing structure**
See Fig. B1.03 - B1.05.

**Variant A**
With anchor sleeve set in concrete (**69**)

**Variant B**
With tie rod (**63**) through existing tie point.

**Section A-A**

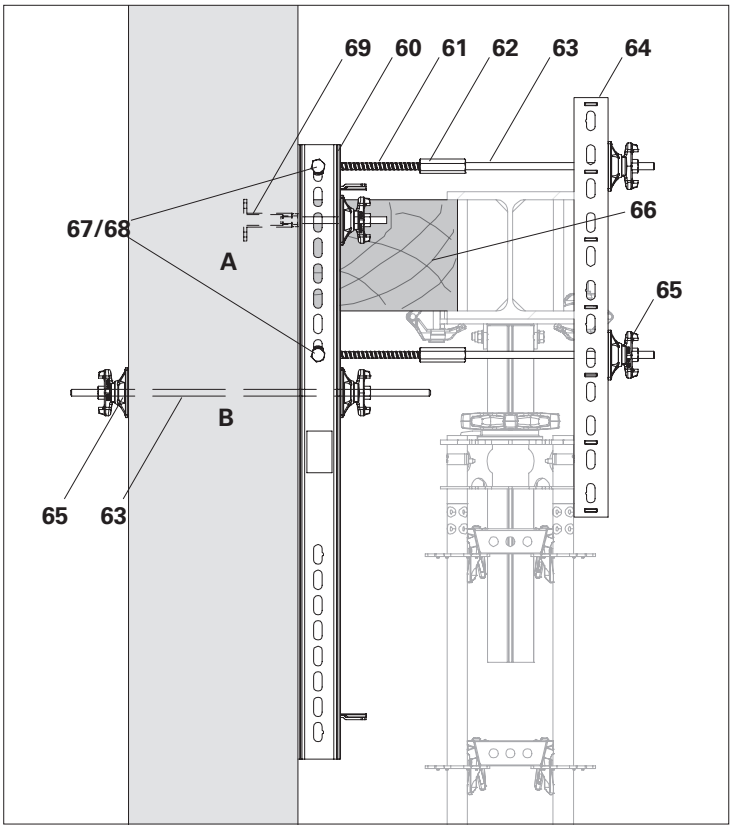



Fig. B1.04

**Section B-B**

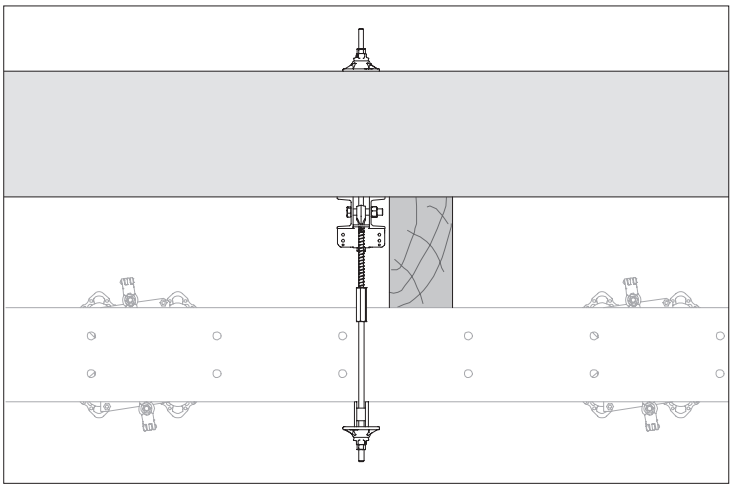


Fig. B1.05

## Free-standing Main Beam Frames

1. Assemble free-standing main beam frames as described in Section A6.
2. Horizontal forces at the level of the main beam frame are transferred via diagonal bracing. (See Section A6)
3. Horizontal forces lateral to the main beam frame are transferred via push-pull props (**12**) that are fixed to auxiliary foundations by means of a Connection Plate AV (**17**) on the Main Beam HDT (**20**) and Base Plate-2 RS 210-1400 (**14**). (Fig. B2.01a - B2.01c)
4. For permissible forces, see tables below.
5. Install push-pull prop at $\alpha$ = 60°.
6. Secure Connection Plate AV (**17**) against slipping.
7. Fasten the Connection Plate AV on the bottom chord of the Main Beam HDT (**20.1**) by means of bolts and nuts M24 (**18 + 19**).
8. In addition, place one girder clamp (**23**) to the right and one to the left of the Connection Plate AV (**17**). (Fig. B2.01b)
9. Arrangement and installation of the girder clamp according to the approval.

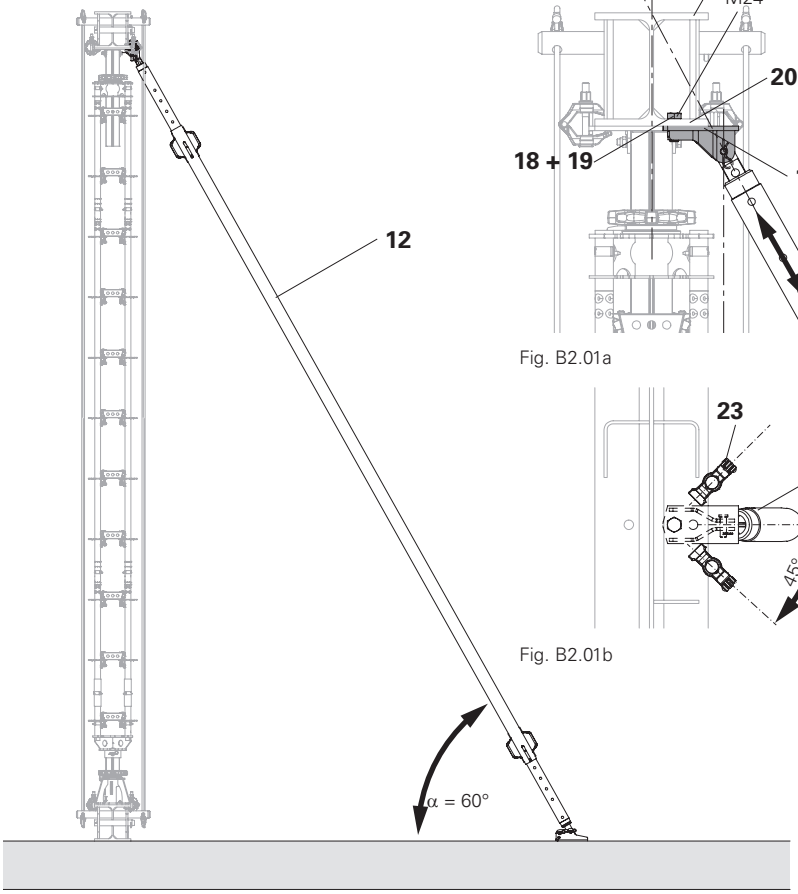



Fig. B2.01




Fig. B2.01a




Fig. B2.01b

**Permissible force to be absorbed by Connection Plate AV at $\alpha$ = 60°**

| Perm. compressive force | | Perm. tensile force | |
|---|---|---|---|
| **F*** | perm. horizontal component | **F*** | perm. horizontal component |
| [kN] | [kN] | [kN] | [kN] |
| 70.8 | 35.4 | 24.7 | 12.4 |

The sum of the push-pull prop forces per main beam frame must not exceed the sum of all permissible push-pull prop loads of the main beam frame.

**Permissible force to be carried by Base Plate-2 RS 210-1400 for $\alpha$ = 60°** (Fig. B2.01c)

| Perm. compressive force | | Perm. tensile force | |
|---|---|---|---|
| **F*** | result. dowel force | **F*** | result. dowel force |
| [kN] | [kN] | [kN] | [kN] |
| 25.1 | 12.5 | 16.9 | 23.7 |

*F = push-pull prop load

The permissible load of the respective Push-Pull Prop must be considered separately.

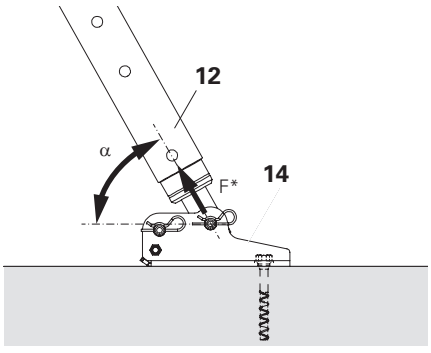



Fig. B2.01c

## Individual props without main beam

- Appropriately secure Heavy-Duty Props HD (**10**) at top and bottom against lateral movement.
- Secure free-standing individual props against toppling, for example in the longitudinal direction with Horizontal Ledgers UH-2 (**16**) and in the transverse direction with Push-Pull Props RS.

## Main beam frames without lower Main Beam HDT

- Forces from the diagonal strut (**51**) must be transferred directly into the foundations, e.g. via the anchoring system of the PERI Brace Frame.
- The base plates of the Lowering Jack HD (**1**) must rest fully faced on the foundations. (Fig. B2.02)

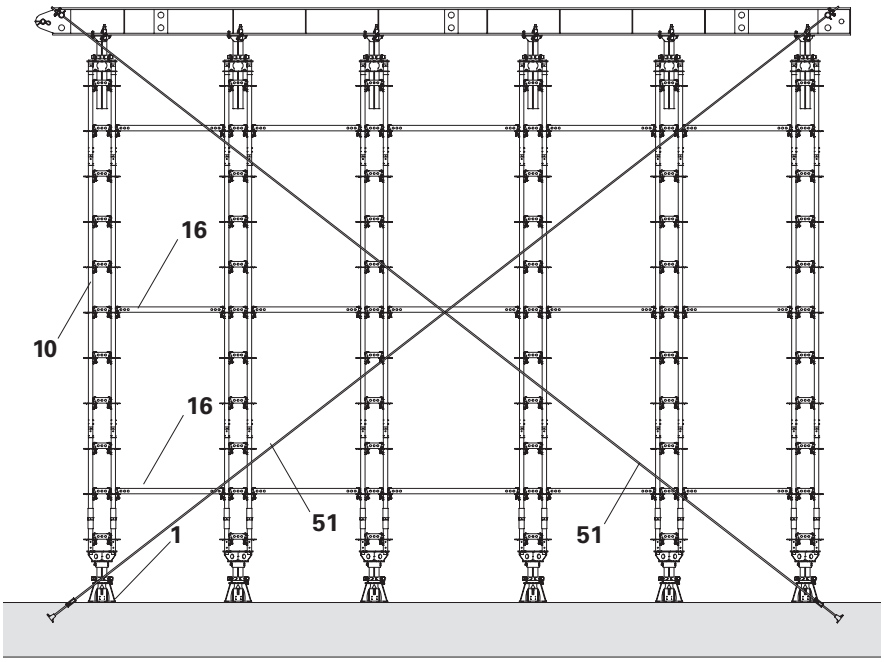




Fig. B2.02

# B3 Load-bearing capacities

- The values shown in the following tables only apply to configurations compiled according to Section "B4 Materials list" on page 64.
- For props with a structure height h > 6 m, the Standard UVR-2 300 must be installed centrally in the leg arrangement.
- When assembling, keep the symmetrical arrangement of the standard joints, see Section see Section "B4 Materials list" on page 64.
- All tables in the PERI Design Tables or in the PERI brochures which are not separately marked feature permissible load-bearing capacities.
- The permissible load-bearing capacities can also be converted into a structural design value of the resistance $R_d$ for the method with partial safety factors after multiplication by $\gamma_F = 1.5$.
- Intermediate values as a result of other wind loads may be determined by linear interpolation between the load-bearing capacities.


**Individual props with Standards UVR/UVR-2 and Horizontal Ledgers UH-Plus/UH-2 [in kN]**

| | | with q = 0.00 kN/m² | with q = 0.20 kN/m² | with q = 0.50 kN/m² | with q = 0.90 kN/m² | with q = 1.30 kN/m² |
|---|---|---|---|---|---|---|
| | | perm. N | perm. N | perm. N | perm. N | perm. N |
| Prop height (cm) | 365 | 201.3 | 200.8 | 199.9 | 198.8 | 197.6 |
| | 465 | 199.7 | 198.4 | 196.2 | 192.0 | 187.2 |
| | 565 | 176.1 | 173.2 | 168.8 | 163.5 | 158.3 |
| | 665 | 167.8 | 164.1 | 159.3 | 153.2 | 146.5 |
| | 765 | 155.6 | 151.2 | 144.8 | 136.7 | 129.3 |
| | 865 | 143.7 | 138.5 | 130.9 | 121.1 | 112.3 |

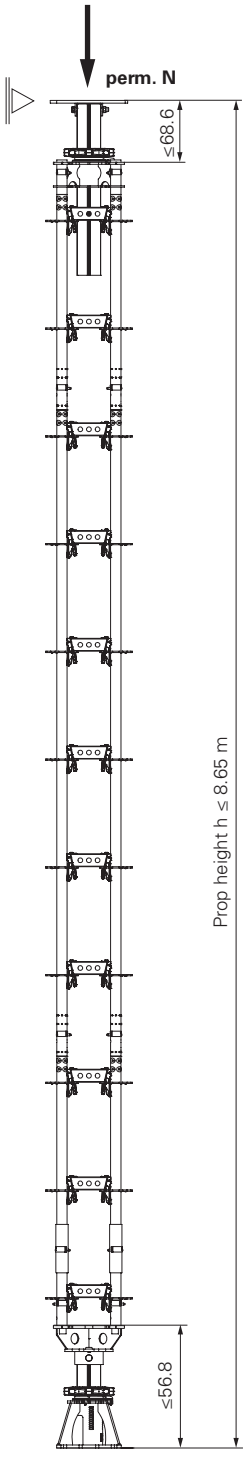

# B3 Load-bearing capacities

- The same conditions apply as for individual supports on previous page.
- In addition, the load transfer of the Main Beam HDT as base and top beams must be verified on a project-specific basis in each case.
- The specified prop loads and prop heights also apply to the Lowering Jack HD when fully extended.

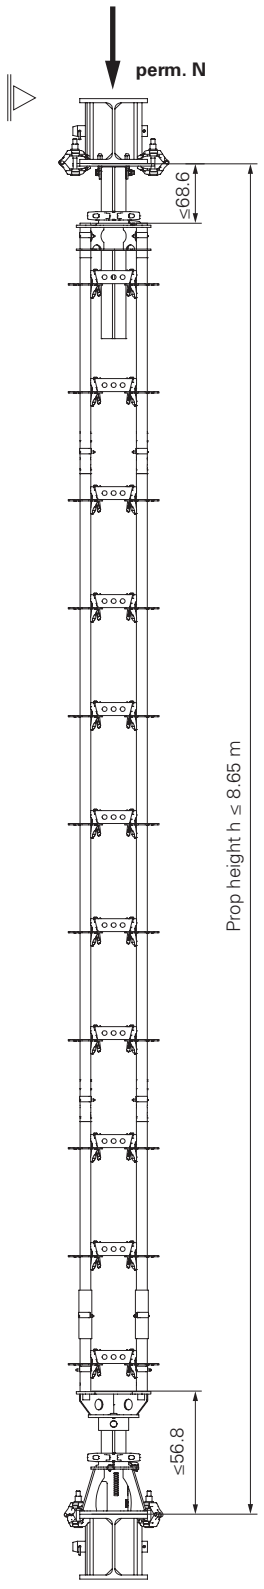


**Main beam frame with Standards UVR/UVR-2 and Horizontal Ledgers UH-Plus/UH-2 [in kN]**

| | | with q = 0.00 kN/m² | with q = 0.20 kN/m² | with q = 0.50 kN/m² | with q = 0.90 kN/m² | with q = 1.30 kN/m² |
|---|---|---|---|---|---|---|
| | | perm. N | perm. N | perm. N | perm. N | perm. N |
| Prop height [cm] | 365 | 173.4 | 172.7 | 171.1 | 168.6 | 166.5 |
| | 465 | 167.6 | 166.4 | 164.2 | 161.4 | 158.6 |
| | 565 | 157.7 | 155.3 | 150.8 | 145.9 | 140.9 |
| | 665 | 146.0 | 142.6 | 138.0 | 131.8 | 125.8 |
| | 765 | 138.0 | 134.4 | 128.3 | 120.7 | 113.3 |
| | 865 | 128.4 | 123.6 | 117.1 | 107.0 | 86.5 |

# B4 Materials list

| Prop heights with Material List as individual prop | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|
| **Prop height [m]** | | **Base Standard UVB 25** | **Standards UVR-2** | | | | | **Ledger UH-2 25** | **Locking pin D 48/57** |
| min. | max. | | 50 | 100 | 150 | 200 | 300 | | |
| 1.58 | 2.13 | 4 | 4 | | | | | 8 | 12 |
| 2.08 | 2.63 | 4 | | 4 | | | | 12 | 12 |
| 2.58 | 3.13 | 4 | | | 4 | | | 16 | 12 |
| 3.08 | 3.63 | 4 | | | | 4 | | 20 | 12 |
| 3.58 | 4.13 | 4 | | 4 | 4 | | | 24 | 16 |
| 4.08 | 4.63 | 4 | | 4 | | 4 | | 28 | 16 |
| 4.58 | 5.13 | 4 | | | 4 | 4 | | 32 | 16 |
| 5.08 | 5.63 | 4 | | | | 8 | | 36 | 16 |
| 5.58 | 6.13 | 4 | | | 4 | | 4 | 40 | 16 |
| 6.08 | 6.63 | 4 | | 8 | | | 4 | 44 | 20 |
| 6.58 | 7.13 | 4 | | 4 | 4 | | 4 | 48 | 20 |
| 7.08 | 7.63 | 4 | | | 8 | | 4 | 52 | 20 |
| 7.58 | 8.13 | 4 | | | 4 | 4 | 4 | 56 | 20 |
| 8.08 | 8.63 | 4 | | | | 8 | 4 | 60 | 20 |

- The prop heights stated relate to the settings for the Lowering Jack HD at slot 9.
  If the Lowering Jack HD is set to slot 3 in order to pretension the component, reduce the specified height values by 6 cm.
- For props with a structure height h > 6 m, the Standard UVR-2 300 must be installed centrally in the prop arrangement due to the static deformation figure.
- When assembling, keep the symmetrical arrangement of the standard joints.

| | | | | |
|---|---|---|---|---|
| | Head Spindle TR 110 | Lowering Jack HD | Connection Plate UJC | Weight [kg] |
| | 1 | 1 | 1 | 91.03 |
| | 1 | 1 | 1 | 104.11 |
| | 1 | 1 | 1 | 117.11 |
| | 1 | 1 | 1 | 130.15 |
| | 1 | 1 | 1 | 146.02 |
| | 1 | 1 | 1 | 159.06 |
| | 1 | 1 | 1 | 172.06 |
| | 1 | 1 | 1 | 185.10 |
| | 1 | 1 | 1 | 197.98 |
| | 1 | 1 | 1 | 213.90 |
| | 1 | 1 | 1 | 226.90 |
| | 1 | 1 | 1 | 239.90 |
| | 1 | 1 | 1 | 252.94 |
| | 1 | 1 | 1 | 265.98 |

# C1 Storage and transportation

- Refer to the user information for PERI pallets and stacking devices!
- Transportation units must be correctly stacked and secured!

## Storage

PERI pallets are suitable for lifting by crane and forklift.
When using a crane, 4-sling lifting gear is used to move the pallets.

During forklift operations, the pallets can be moved either by a forklift truck or by using the pallet lifting truck.
All pallets can be picked up from the long side as well as from the front side.

## Transportation

- Ensure loads are correctly secured during transport!
- Use tension belts or steel straps!
- Observe national transport regulations!

## Hydraulic Unit HD

When transporting or placing in storage, the hydraulic components - hose, cylinder and hand pump - must be separately stored and transported in the designated aluminium case.

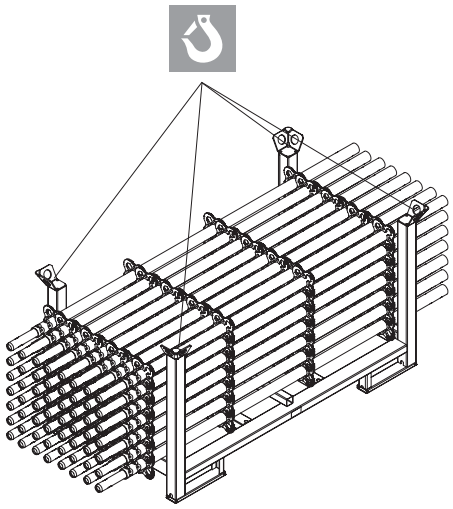


Fig. C1.01

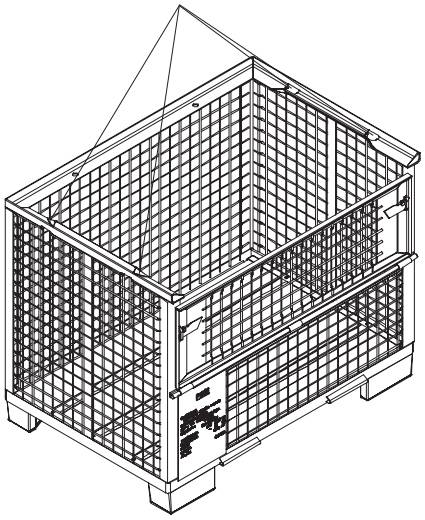


Fig. C1.02



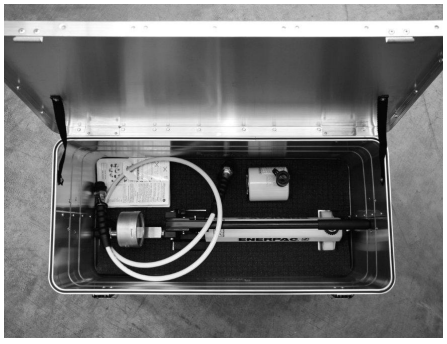


Fig. C1.03

| Art. no. | Weight [kg] | |
|---|---|---|
| 133499 | 2.260 | **Base Standard UVB 25** |


For assembling directly onto the base spindles.
Can also be used as 25 cm standard.




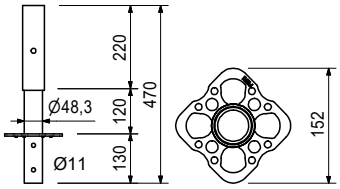



| Art. no. | Weight [kg] | |
|---|---|---|
| 400014 | 2.470 | **Base Standard UVB 24** |


For assembling directly onto the base spindles.



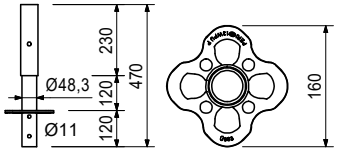



| Art. no. | Weight [kg] | | L [mm] |
|---|---|---|---|
| | | **Standards UVR-2** | |
| 132219 | 2.490 | **Standard UVR-2 50** | 500 |
| 132224 | 4.340 | **Standard UVR-2 100** | 1000 |
| 132229 | 6.190 | **Standard UVR-2 150** | 1500 |
| 132234 | 8.030 | **Standard UVR-2 200** | 2000 |
| 132239 | 11.700 | **Standard UVR-2 300** | 3000 |




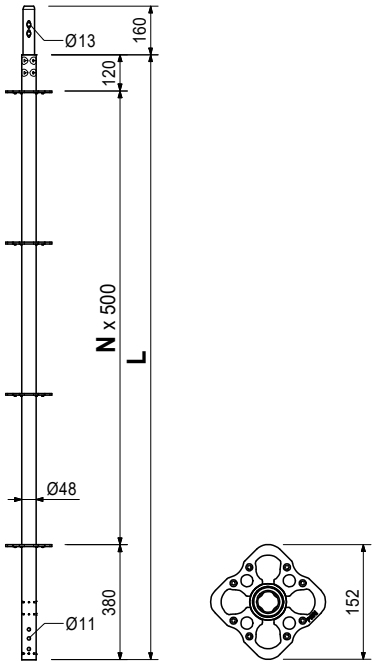

# PERI UP Flex Heavy-Duty Prop HD

| Art. no. | Weight [kg] | | L [mm] |
|---|---|---|---|
| | | **Standards UVR** | |
| 402859 | 3.080 | **Standard UVR 50** | 500 |
| 401306 | 5.380 | **Standard UVR 100** | 1000 |
| 402860 | 7.690 | **Standard UVR 150** | 1500 |
| 400009 | 9.990 | **Standard UVR 200** | 2000 |
| 400012 | 14.700 | **Standard UVR 300** | 3000 |
| 400013 | 19.200 | **Standard UVR 400** | 4000 |




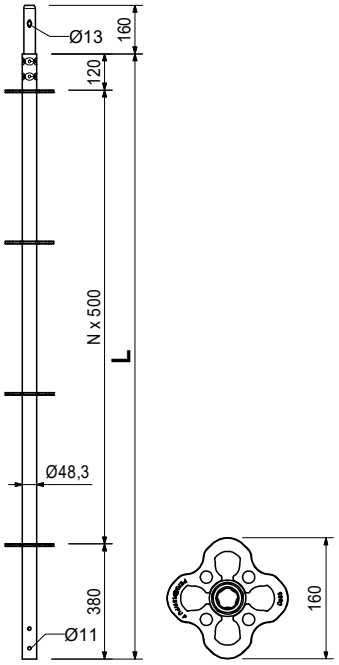


| Art. no. | Weight [kg] | | L [mm] | X [mm] |
|---|---|---|---|---|
| | | **Horizontal Ledger UH-2** | | |
| 131995 | 1.400 | **Horizontal Ledger UH-2 25** | 204 | 250 |
| 133900 | 1.590 | **Horizontal Ledger UH-2 33** | 284 | 330 |
| 131998 | 2.030 | **Horizontal Ledger UH-2 50** | 454 | 500 |
| 133903 | 2.470 | **Horizontal Ledger UH-2 67** | 624 | 670 |
| 132213 | 2.680 | **Horizontal Ledger UH-2 75** | 704 | 750 |
| 132004 | 3.730 | **Horizontal Ledger UH-2 100** | 954 | 1000 |
| 132007 | 4.500 | **Horizontal Ledger UH-2 125** | 1204 | 1250 |
| 132010 | 4.670 | **Horizontal Ledger UH-2 150** | 1454 | 1500 |
| 132013 | 5.330 | **Horizontal Ledger UH-2 175** | 1704 | 1750 |
| 132016 | 5.990 | **Horizontal Ledger UH-2 200** | 1954 | 2000 |
| 132019 | 6.650 | **Horizontal Ledger UH-2 225** | 2204 | 2250 |
| 132025 | 7.310 | **Horizontal Ledger UH–2 250** | 2454 | 2500 |
| 132022 | 8.640 | **Horizontal Ledger UH-2 300** | 2954 | 3000 |

**Note**

With colour-coded length marking.

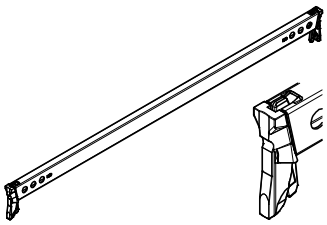


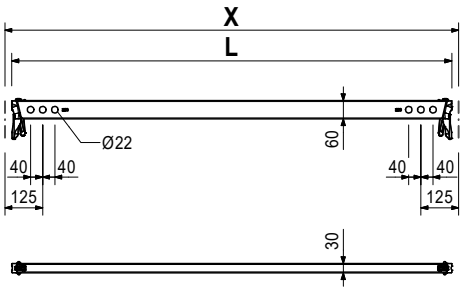



| Art. no. | Weight [kg] | | L [mm] | X [mm] |
|---|---|---|---|---|
| | | **Horizontal Ledger UH Plus** | | |
| 414613 | 1.430 | **Horizontal Ledger UH 25 Plus** | 204 | 250 |
| 414595 | 2.080 | **Horizontal Ledger UH 50 Plus** | 454 | 500 |
| 429982 | 2.520 | **Horizontal Ledger UH 67 Plus** | 624 | 670 |
| 414629 | 2.740 | **Horizontal Ledger UH 75 Plus** | 704 | 750 |
| 414632 | 4.470 | **Horizontal Ledger UH 100 Plus** | 954 | 1000 |
| 414638 | 5.440 | **Horizontal Ledger UH 125 Plus** | 1204 | 1250 |
| 414641 | 4.720 | **Horizontal Ledger UH 150 Plus** | 1454 | 1500 |
| 417032 | 5.390 | **Horizontal Ledger UH 175 Plus** | 1704 | 1750 |
| 414645 | 6.050 | **Horizontal Ledger UH 200 Plus** | 1954 | 2000 |
| 416356 | 6.710 | **Horizontal Ledger UH 225 Plus** | 2204 | 2250 |
| 414648 | 7.370 | **Horizontal Ledger UH 250 Plus** | 2454 | 2500 |
| 414651 | 8.690 | **Horizontal Ledger UH 300 Plus** | 2954 | 3000 |

**Note**

With length marking for easier identification.

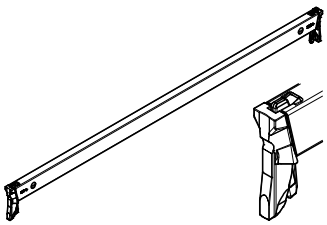


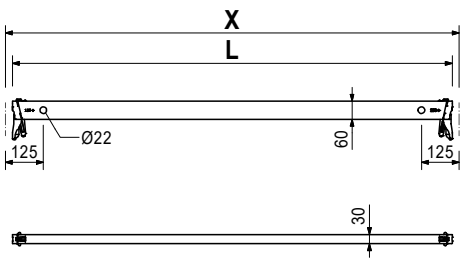

| Art. no. | Weight [kg] | |
|---|---|---|
| 111053 | 0.059 | **Locking Pin Ø48/Ø57** |


As tension-proof connection of standards with a diameter of 48 up to 57 mm.




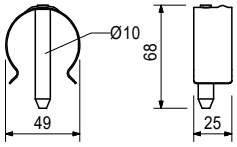


| Art. no. | Weight [kg] | |
|---|---|---|
| 100719 | 0.060 | **Screw ISO 4014 M10 x 070-8.8, galv.** |

As tension–proof connection of verticals at suspended scaffolds and formwork girders.








| Art. no. | Weight [kg] | |
|---|---|---|
| 126435 | 25.900 | **Head Spindle TR 110 - 80/55** |

Head spindle for PERI UP Heavy-Duty Prop. Can be tilted up to 3° along one axis.

**Note**

Loads > 50 kN are to be released with hydraulics.

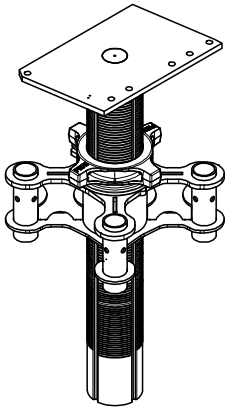

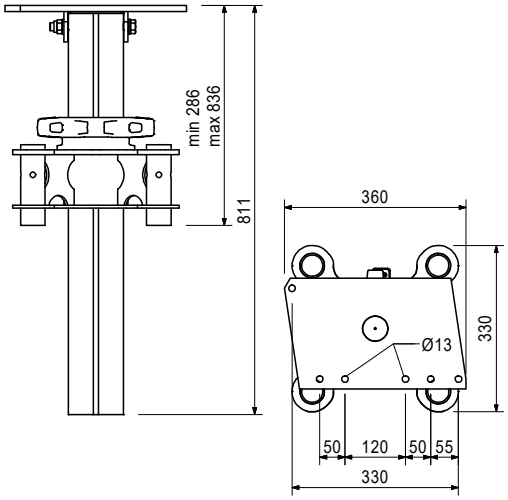




Accessories (not included)

| | | |
|---|---|---|
| 022027 | 3.600 | **Wingnut Spanner HD** |

| Art. no. | Weight [kg] | |
|---|---|---|
| 022027 | 3.600 | **Wingnut Spanner HD** |

For easy removal of Head Spindle HDK 45, Head Spindle TR 110 - 80/55 and the MULTIPROP Slab Prop.

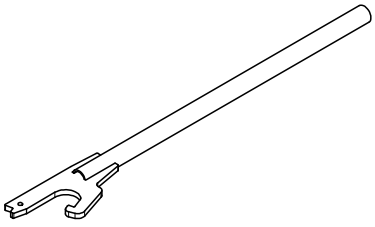

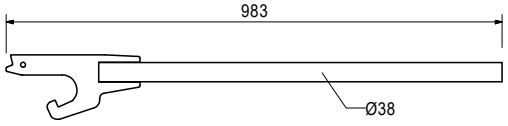



| Art. no. | Weight [kg] | |
|---|---|---|
| 126436 | 21.500 | **Lowering Jack HD** |


For releasing high loads up to 200 kN and displacement-controlled lowering as well as for systematic prestressing of supports.


**Note**

Loads >50 kN are to be released with hydraulics.

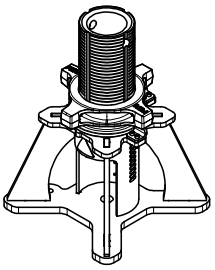

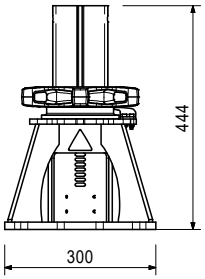

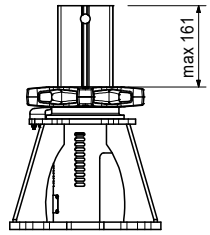


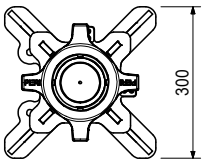
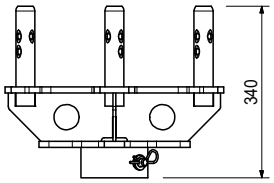

Accessories (not included)


| | | |
|---|---|---|
| 126438 | 12.900 | **Hydraulic Unit HD** |
| 126437 | 12.800 | **Connection Plate UJC** |

| Art. no. | Weight [kg] | |
|---|---|---|
| 126437 | 12.800 | **Connection Plate UJC** |

For connecting the Standards UVR in a 25 x 25 cm grid. Tilting in any direction by 2°.

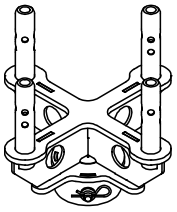



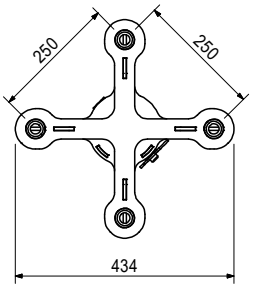




| Art. no. | Weight [kg] | |
|---|---|---|
| 126438 | 12.900 | **Hydraulic Unit HD** |

Permissible load-bearing capacity up to 300 kN (readable directly on the manometer). Cylinder stroke up to 62 mm.


**Note**

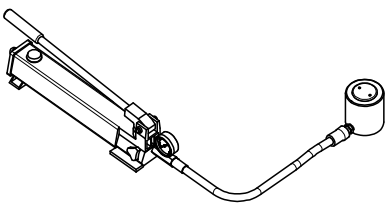
Observe Instructions for Use.



| Art. no. | Weight [kg] | |
|---|---|---|
| 412678 | 6.510 | **Console Bracket UCM 75 with pin** |


With connection for Console Bracket Brace UCM.

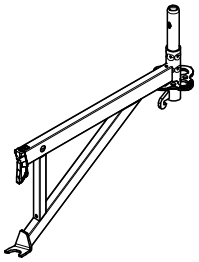


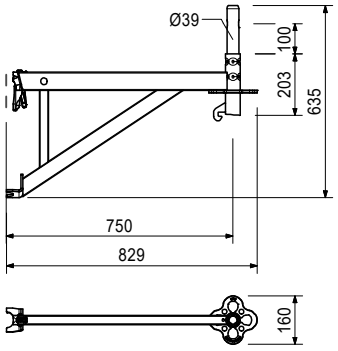


| Art. no. | Weight [kg] | |
|---|---|---|
| 111128 | 5.710 | **Console Bracket UCM 75-2** |

With connection for Console Bracket Brace UCM.

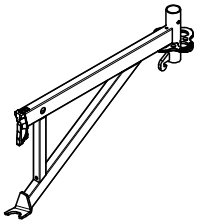

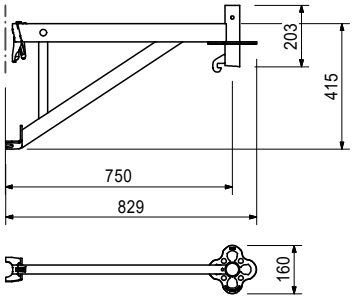



Accessories (not included)

| | | |
|---|---|---|
| 100301 | 0.969 | **Connector ULT 32** |
| 111053 | 0.059 | **Locking Pin Ø48/Ø57** |

| Art. no. | Weight [kg] | |
|---|---|---|
| 100301 | 0.969 | **Connector ULT 32** |

Single pin for connection of tubes Ø 48.3 x 3.2 mm, e.g. formwork girders or top standards without interlock.



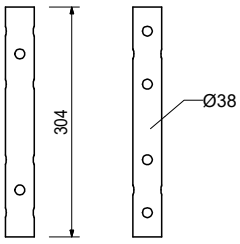




Accessories (not included)

| | | |
|---|---|---|
| 111053 | 0.059 | **Locking pin Ø 48/57** |
| 100719 | 0.060 | **Bolt ISO 4014 M10 x 70-8.8** |

| Art. no. | Weight [kg] | |
|---|---|---|
| 022013 | 0.137 | **Centring Bolt HD M12, galv.** |

For the HD 200 system.



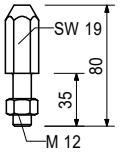




**Complete with**

1 pc. 710330 nut ISO 4032 M12-8, galv.

| Art. no. | Weight [kg] | |
|---|---|---|
| 022008 | 1,130.000 | **Main Beam HDT 880** |

System steel beam for use with HD 200 main beam frames and special constructions. Profile HEB 300.

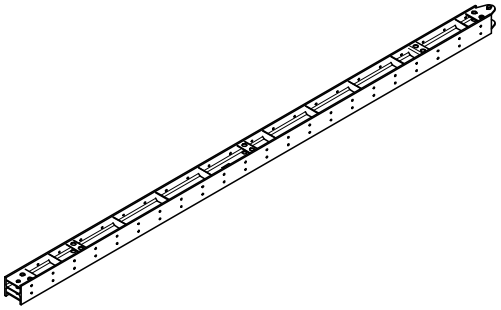

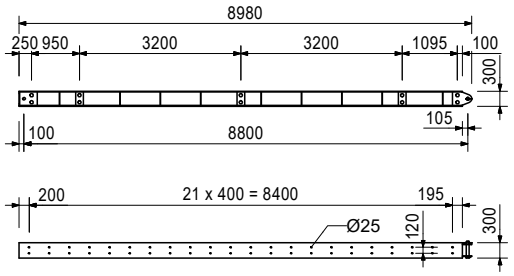




**Complete with**

1 pc. 105435 bolt Ø 50 x 330
1 pc. 722457 sleeve ISO 8752 10 x 70, galv.
1 pc. 710618 cotter pin 8/1, galv.

| Art. no. | Weight [kg] | |
|---|---|---|
| 022009 | 582.000 | **Main Beam HDT 440** |

System steel beam for use with HD 200 main beam frames and special constructions. Profile HEB 300.

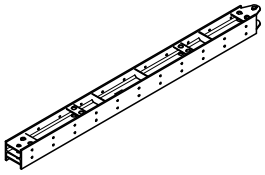

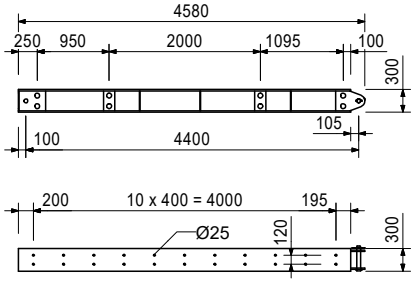




**Complete with**

1 pc. 105435 bolt Ø 50 x 330
1 pc. 722457 sleeve ISO 8752 10 x 70, galv.
1 pc. 710618 cotter pin 8/1, galv.

| Art. no. | Weight [kg] | |
|---|---|---|
| 022010 | 379.000 | **Main Beam HDT 280** |

System steel beam for use with HD 200 main beam frames and special constructions. Profile HEB 300.

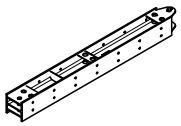

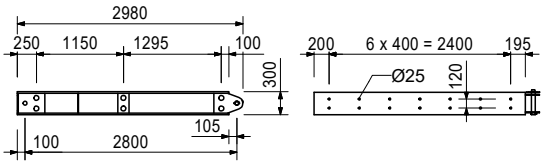




**Complete with**

1 pc. 105435 bolt Ø 50 x 330
1 pc. 722457 sleeve ISO 8752 10 x 70, galv.
1 pc. 710618 cotter pin 8/1, galv.

| Art. no. | Weight [kg] | |
|---|---|---|
| 051460 | 2.180 | **Ladder Base, galv.** |

As bottom ladder connector and for securing ladders against sliding on the scaffold decks.

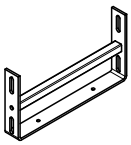


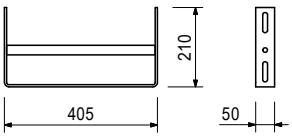


| Art. no. | Weight [kg] | |
|---|---|---|
| 103718 | 0.684 | **Ladder Hook, galv.** |

For adjusting the bottom ladder. Always use in pairs.



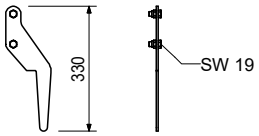




**Complete with**

2 pcs. 710266 bolt ISO 4017 M12 x 25–8.8, galv.
2 pcs. 710381 nut ISO 7040 M12–8, galv.

| Art. no. | Weight [kg] | |
|---|---|---|
| | | **Ladder Cage, galv.** |
| 104132 | 15.600 | **Ladder Cage 75** |
| 051450 | 25.200 | **Ladder Cage 150** |

Ladder cage for PERI ladder access.

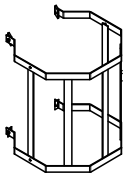

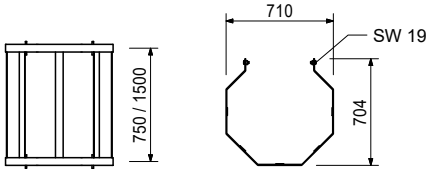



**Complete with**


4 pcs. 710266 bolt ISO 4017 M12 x 25–8.8, galv.
4 pcs. 701763 clamping plate Fl 25 x 10 x 90

| Art. no. | Weight [kg] | |
|---|---|---|
| 124813 | 4.000 | **Ladder Connector UAC-2** |

**Note**

Connects Ladder 180/6 (article no. 051410) with PERI UP Standards.

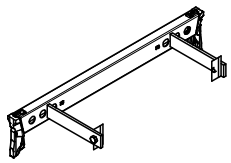

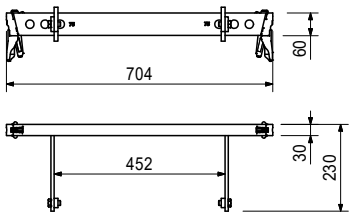


Accessories (not included)


| | | |
|---|---|---|
| 051410 | 11.700 | **Ladder 180/6, galv.** |
| 051460 | 2.180 | **Ladder Base, galv.** |
| 103724 | 10.400 | **Access Ladder 180/2, galv.** |
| 104132 | 15.600 | **Ladder Cage 75** |
| 051450 | 25.200 | **Ladder Cage 150** |


**Complete with**

1 pc. 051410 ladder 180/6, galv.

| Art. no. | Weight [kg] | |
|---|---|---|
| 051410 | 11.700 | **Ladder 180/6, galv.** |

For accessing PERI formwork systems.

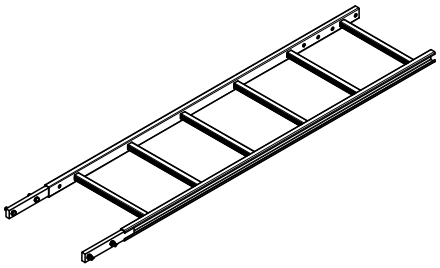

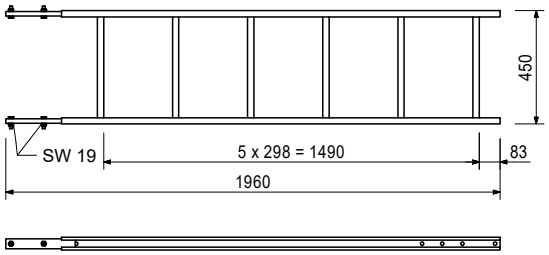




**Complete with**

4 pcs. 710224 bolt ISO 4017 M12 x 40–8.8, galv.
4 pcs. 710381 nut ISO 7040 M12–8, galv.

| Art. no. | Weight [kg] | |
|---|---|---|
| 103724 | 10.400 | **Access Ladder 180/2, galv.** |

For accessing PERI formwork systems.

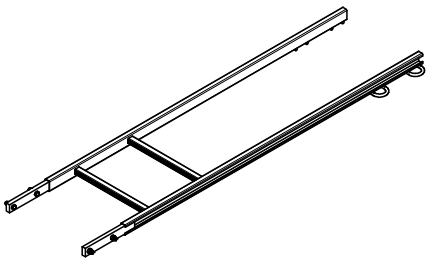

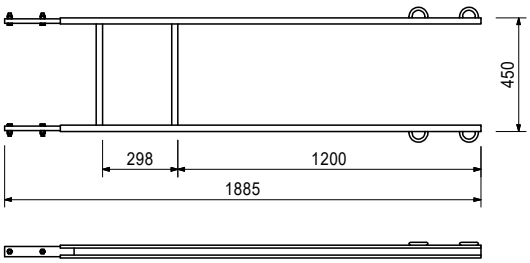




**Complete with**

4 pcs. 710224 bolt ISO 4017 M12 x 40–8.8, galv.
4 pcs. 710381 nut ISO 7040 M12–8, galv.

| Art. no. | Weight [kg] | |
|---|---|---|
| 131723 | 1.440 | **Brace Connector HDR-2** |

For connecting push-pull props and kicker braces to components with Ø 48 mm.



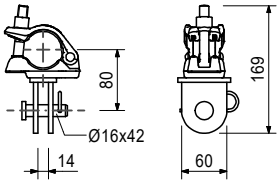




**Complete with**

1 pc. 027170 bolt Ø 16 x 42, galv.
1 pc. 018060 cotter pin 4/1, galv.

| Art. no. | Weight [kg] | |
|---|---|---|
| 028080 | 2.960 | **Connection Plate AV/Push-Pull Prop** |

For connecting push-pull props and kicker braces to the Main Beam HDT.

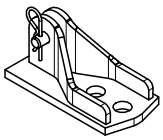

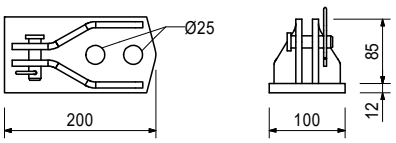


**Complete with**


1 pc. 027170 bolt Ø 16 x 42, galv.
1 pc. 018060 cotter pin 4/1, galv.


| Art. no. | Weight [kg] | | X [mm] | perm. p [kN/m²] |
|---|---|---|---|---|
| | | **Steel Decks UDG-2** | | |
| 132479 | 3.190 | **Steel Deck UDG-2 25 x 50** | 500 | 6 |
| 132483 | 3.960 | **Steel Deck UDG-2 25 x 67** | 670 | 6 |
| 132488 | 4.320 | **Steel Deck UDG-2 25 x 75** | 750 | 6 |
| 132492 | 5.450 | **Steel Deck UDG-2 25 x 100** | 1000 | 6 |
| 132502 | 6.590 | **Steel Deck UDG-2 25 x 125** | 1250 | 6 |
| 132505 | 7.730 | **Steel Deck UDG-2 25 x 150** | 1500 | 6 |
| 132508 | 10.500 | **Steel Deck UDG-2 25 x 200** | 2000 | 6 |
| 132511 | 12.900 | **Steel Deck UDG-2 25 x 250** | 2500 | 4.5 |
| 132515 | 15.800 | **Steel Deck UDG-2 25 x 300** | 3000 | 3 |

Length X: 500 – 1.500 with H of 45 mm.
Length X: 2000 – 2.500 with H of 60 mm.
Length X: 3000 with H of 70 mm.

**Note**

Values correspond with EN 12811-1.

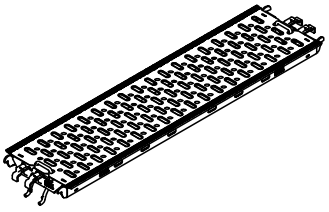

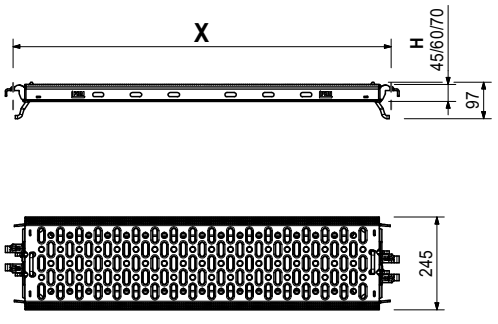



| Art. no. | Weight [kg] | | X [mm] | perm. p [kN/m²] |
|---|---|---|---|---|
| | | **Steel Decks UDG 25** | | |
| 424124 | 3.810 | **Steel Deck UDG 25 x 50** | 500 | 6 |
| 432858 | 4.810 | **Steel Deck UDG 25 x 67** | 670 | 6 |
| 424121 | 5.180 | **Steel Deck UDG 25 x 75** | 750 | 6 |
| 424118 | 6.550 | **Steel Deck UDG 25 x 100** | 1000 | 6 |
| 424115 | 7.940 | **Steel Deck UDG 25 x 125** | 1250 | 6 |
| 424112 | 9.330 | **Steel Deck UDG 25 x 150** | 1500 | 6 |
| 424109 | 12.200 | **Steel Deck UDG 25 x 200** | 2000 | 6 |
| 423771 | 14.900 | **Steel Deck UDG 25 x 250** | 2500 | 4.5 |
| 424915 | 17.700 | **Steel Deck UDG 25 x 300** | 3000 | 3 |

Fit onto Horizontal Ledgers UH.

**Note**

Values correspond with EN 12811-1.

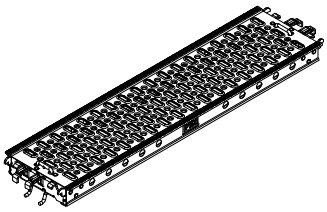


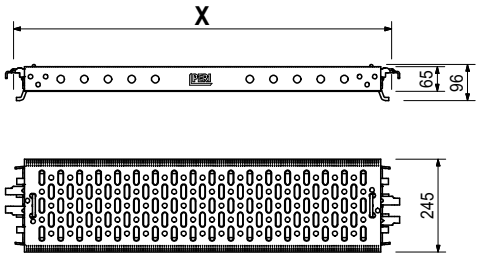



| Art. no. | Weight [kg] | | L [mm] | X [mm] |
|---|---|---|---|---|
| | | **Steel Toe Boards UPY** | | |
| 132592 | 0.414 | **Steel Toe Board UPY 25** | 236 | 250 |
| 110213 | 0.929 | **Steel Toe Board UPY 50** | 486 | 500 |
| 110514 | 1.450 | **Steel Toe Board UPY 75** | 736 | 750 |
| 110073 | 1.960 | **Steel Toe Board UPY 100** | 986 | 1000 |
| 110160 | 2.990 | **Steel Toe Board UPY 150** | 1486 | 1500 |
| 110176 | 4.030 | **Steel Toe Board UPY 200** | 1986 | 2000 |
| 110208 | 5.060 | **Steel Toe Board UPY 250** | 2486 | 2500 |
| 110211 | 6.090 | **Steel Toe Board UPY 300** | 2986 | 3000 |

**Note**

Default surface: galvanised and painted in yellow.

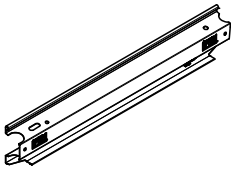

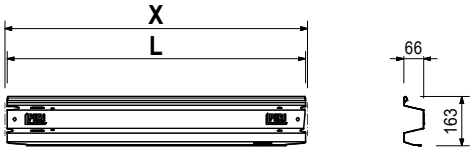




Accessories (not included)

| | | |
|---|---|---|
| 134542 | 0.606 | **Toe Board Compensation UPY-L** |

| Art. no. | Weight [kg] | |
|---|---|---|
| 136582 | 0.831 | **Ledger-to-Ledger Coupler UHA-2** |

For connecting horizontal ledgers at right-angles.




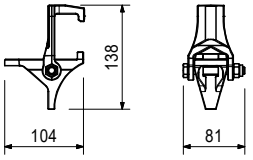



| Art. no. | Weight [kg] | |
|---|---|---|
| | | **Tie Rod DW 15** |
| 030050 | 0.000 | **Cutting cost tie rod DW 15, B 15** |
| 030005 | 0.720 | **Tie Rod DW 15, L = 0.50 m** |
| 030010 | 1.230 | **Tie Rod DW 15, L = 0.85 m** |
| 030480 | 1.440 | **Tie Rod DW 15, L = 1.00 m** |
| 030490 | 1.730 | **Tie Rod DW 15, L = 1.20 m** |
| 030170 | 2.160 | **Tie Rod DW 15, L = 1.50 m** |
| 030020 | 2.450 | **Tie Rod DW 15, L = 1.70 m** |
| 030180 | 2.880 | **Tie Rod DW 15, L = 2.00 m** |
| 030710 | 3.600 | **Tie Rod DW 15, L = 2.50 m** |
| 030720 | 4.320 | **Tie Rod DW 15, L = 3.00 m** |
| 030730 | 5.040 | **Tie Rod DW 15, L = 3.50 m** |
| 030160 | 8.640 | **Tie Rod DW 15, L = 6.00 m** |
| 030030 | 1.440 | **Tie Rod DW 15, special length** |

**Note**

Non-weldable! Observe the permissions! Permissible tension force 90 kN.

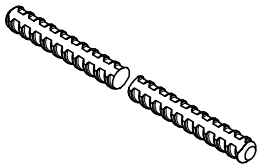

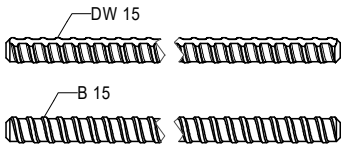




| Art. no. | Weight [kg] | |
|---|---|---|
| 030130 | 0.318 | **Cam nut DW 15, galv.** |

For anchoring with Tie Rod DW 15 and B 15.

**Note**

Permissible load 90 kN.



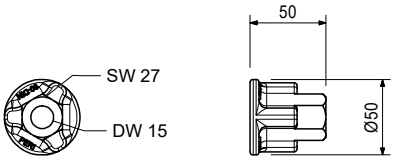



| Art. no. | Weight [kg] | |
|---|---|---|
| 030090 | 0.402 | **Hex. Nut DW 15 AF 30/108, galv.** |

For coupling Tie Rod DW 15 and B 15.

**Note**

Permissible load 90 kN.

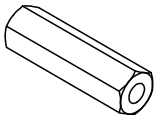

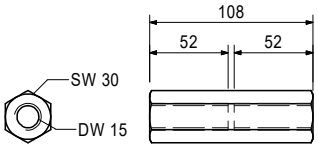



| Art. no. | Weight [kg] | |
|---|---|---|
| 030100 | 0.439 | **Wing nut DW 15, galv.** |

For anchoring with Tie Rod DW 15 and B 15.

**Note**


Permissible load 90 kN.




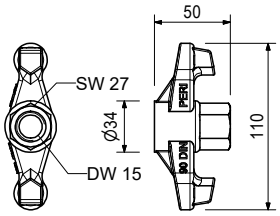


| Art. no. | Weight [kg] | |
|---|---|---|
| 022025 | 1.970 | **Centring Rail HD 40 x 20 x 400** |


For centring cross girders on the Main Beam HDT.

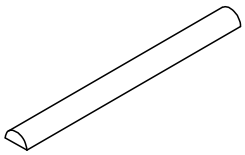





| Art. no. | Weight [kg] | |
|---|---|---|
| 022011 | 13.200 | **Double Tie Yoke HDD** |

For anchoring with Tie Rods DW 15 and DW 20.

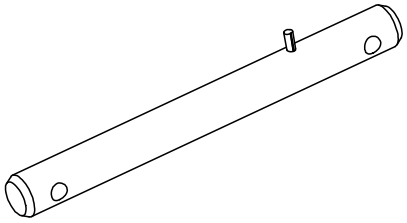

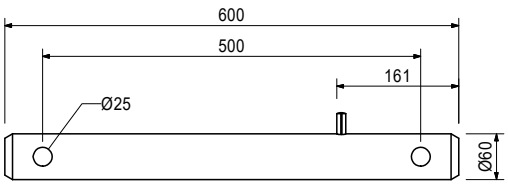



| Art. no. | Weight [kg] | |
|---|---|---|
| 022021 | 31.900 | **Trolley HD** |

For moving longitudinal beams on the Main Beam HDT.

**Note**

Permissible load-bearing capacity 2.5 t.

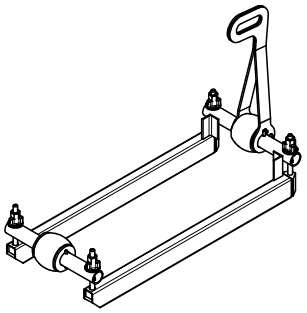

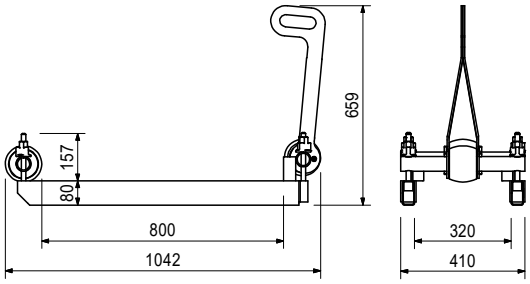




| Art. no. | Weight [kg] | |
|---|---|---|
| 106183 | 2.200 | **Girder Clamp HD 70 mm, galv.** |

For connecting beams running crosswise.

**Note**


Observe the permissions!
Plan for 2 pieces per Head Spindle!

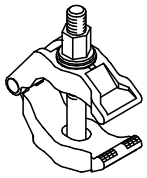


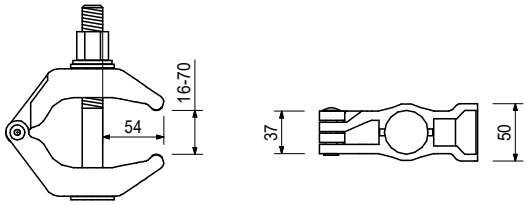


| Art. no. | Weight [kg] | |
|---|---|---|
| 022026 | 1.780 | **Flange Clamp IPB 300 - 1000** |

To create an anti-tilt device.

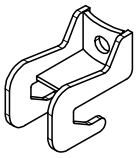

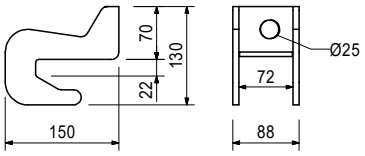




| Art. no. | Weight [kg] | |
|---|---|---|
| 117466 | 10.600 | **Push-pull Prop RS 210, galv.** |

Extension length L = 1.30 – 2.10 m.
For aligning PERI formwork systems and pre–cast concrete elements.

**Note**

See PERI Design Tables for permissible load.



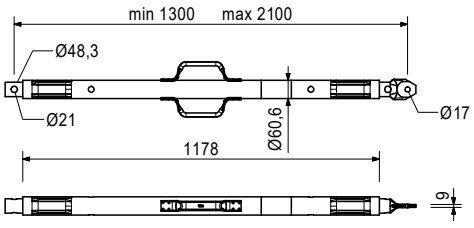



| Art. no. | Weight [kg] | |
|---|---|---|
| 118238 | 12.100 | **Push-pull Prop RS 260, galv.** |

Extension length L = 2.30 – 2.60 m.
For aligning PERI formwork systems and pre–cast concrete elements.

**Note**

See PERI Design Tables for permissible load.

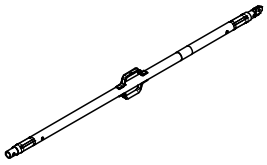

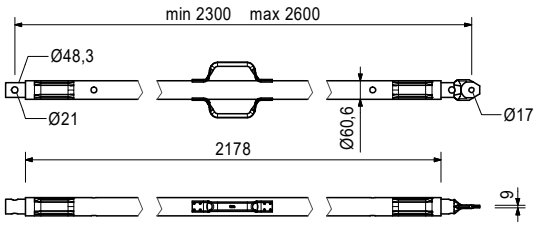




| Art. no. | Weight [kg] | |
|---|---|---|
| 117467 | 15.500 | **Push-pull Prop RS 300, galv.** |

Extension length L = 1.90 – 3.00 m.
For aligning PERI formwork systems and pre–cast concrete elements.

**Note**

See PERI Design Tables for permissible load.

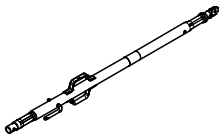

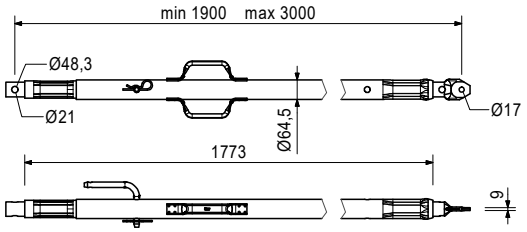




| Art. no. | Weight [kg] | |
|---|---|---|
| 117468 | 23.000 | **Push-pull Prop RS 450, galv.** |

Extension length L = 2.80 – 4.50 m.
For aligning PERI formwork systems and pre–cast concrete elements.

**Note**

See PERI Design Tables for permissible load.

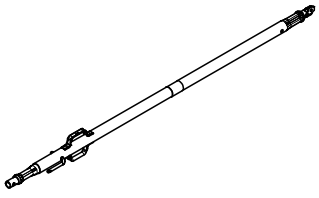

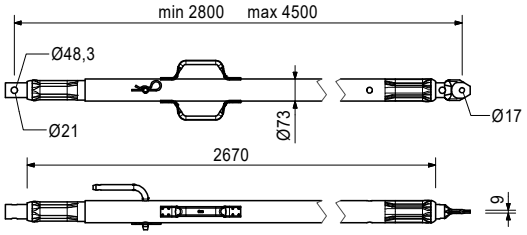



| Art. no. | Weight [kg] | |
|---|---|---|
| 117469 | 39.900 | **Push-pull Prop RS 650, galv.** |

Extension length L = 4.30 – 6.50 m.
For aligning PERI formwork systems and pre–cast concrete elements.

**Note**

See PERI Design Tables for permissible load.

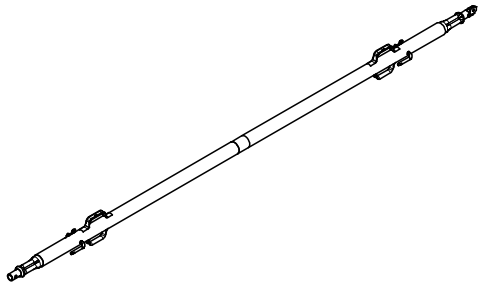

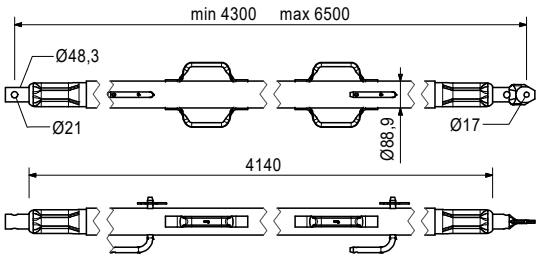




| Art. no. | Weight [kg] | |
|---|---|---|
| 028990 | 115.000 | **Push-pull Prop RS 1000, galv.** |

Extension length L = 6.40 – 10.00 m.
For aligning PERI formwork systems.

**Note**

See PERI Design Tables for permissible load.

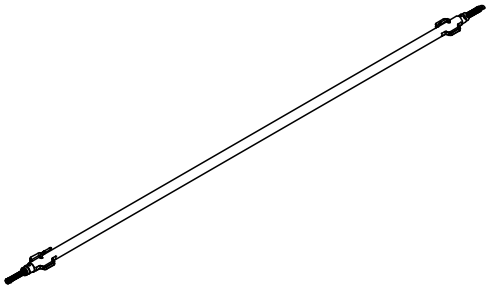

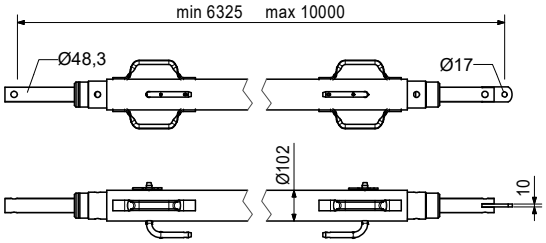




| Art. no. | Weight [kg] | |
|---|---|---|
| 103800 | 271.000 | **Push-pull Prop RS 1400, galv.** |

Extension length L = 6.40 – 14.00 m.
For aligning PERI formwork systems.

**Note**


See PERI Design Tables for permissible load.
Chain attached/detached from the ground.

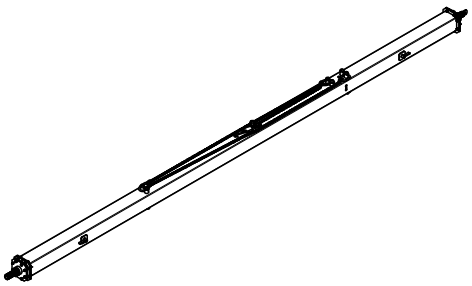


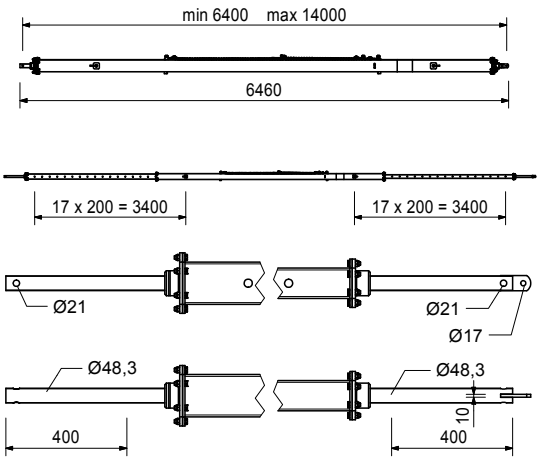

| Art. no. | Weight [kg] | |
|---|---|---|
| 126666 | 3.040 | **Base Plate-3 for RS 210 - 1400** |

For assembling the RS 210, RS 260, RS 300, RS 450, RS 650, RS 1000 and RS 1400 Push–Pull Props.

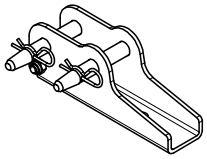

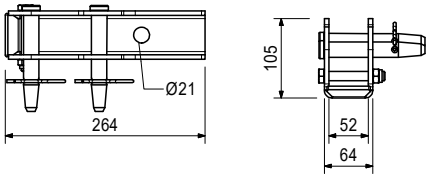


Accessories (not included)


| | | |
|---|---|---|
| 124777 | 0.210 | **PERI Anchor Bolt 14/20 x 130** |


**Complete with**

2 pcs. 105400 bolt Ø 20 x 140, galv.
2 pcs. 018060 cotter pin 4/1, galv.
1 pc. 113063 screw ISO 4014 M12 x 80-8.8, galv.
1 pc. 113064 hex nut ISO 7040-M12-8-G, galv.

| Art. no. | Weight [kg] | |
|---|---|---|
| 102018 | 4.880 | **Base Plate-2 for RS 1000/1400, galv.** |

For fitting the Push-Pull Props RS 210, 260, 300, 450, 650, 1000, 1400 and heavy-duty spindles.

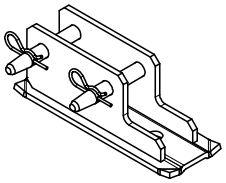

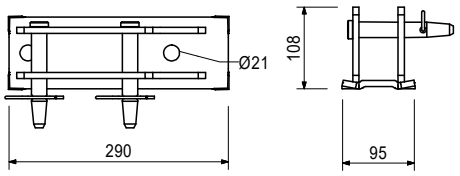


**Complete with**


2 pcs. 105400 bolt Ø 20 x 140, galv.
2 pcs. 018060 cotter pin 4/1, galv.


| Art. no. | Weight [kg] | |
|---|---|---|
| 124777 | 0.210 | **PERI Anchor Bolt 14/20 x 130** |

For temporary attachment to reinforced concrete components.


**Note**


Take the PERI Data Sheet into consideration!
Hole Ø 14 mm.

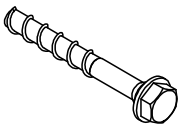





| Art. no. | Weight [kg] | |
|---|---|---|
| 109199 | 0.280 | **Bolt ISO 4017 M24 x 050-8.8, galv.** |



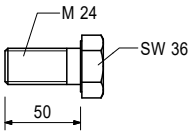

| Art. no. | Weight [kg] | |
|---|---|---|
| 130342 | 0.070 | **Hex. - Nut ISO 7042 M24-8, galv.** |





**The optimal system for all projects and every requirement**



**Wall formwork**




**Column formwork**



**Slab formwork**



**Climbing systems**

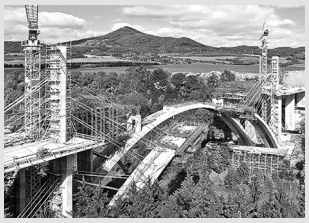

**Bridge formwork**



**Tunnel formwork**




**Shoring**



**Working scaffolds for construction**



**Working scaffolds for facades**

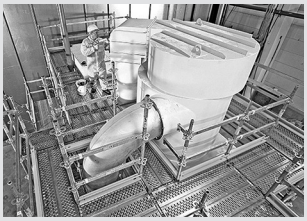

**Working scaffolds for industry**



**Means of access**



**Safety scaffolds**



**Safety systems**



**System-independent accessories**



**Services**

PERI Danmark A/S
Forskalling & Stilladssystemer
Greve Main 26
2670 Greve
Tlf. +45 4345.3627
peri@peri.dk
www.peri.dk

**DK** Int Version 3.0 | DO-22-0117491 © PERI DK